

 
 
 


DW9903 Installation Instructions

Replaces 3369903 Upper Dish Rack

This replacement rack has been standardized and may be different than the original. This is an aftermarket replacement and although has comparable quality to the original we include only the necessary accessories to make the rack function. Accessories should be removed and recycled from the original rack.

1. Pull old rack about 1/3 out from the dishwasher.
2. Using a flat head screw driver, press the release tabs and remove the left and right hand retainers on the rails.
3. Remove the old rack.
4. The new rack comes with a different style of rack rollers and needs to be assembled.
 - a. Screw the height adjustment knob into the roller assembly.
 - b. Feed through the rack tines to position the rollers as close to the position of the rollers on the original rack.
 - c. Place the bottom of the rack adjustment into the post at the bottom of the cover.
 - d. Snap the cover forward into the new rack.
 - e. Using two screws supplied, install the retainer to the cover.
 - f. Repeat for other side.
 - g. Re-install the rack and replace the rail retainers.

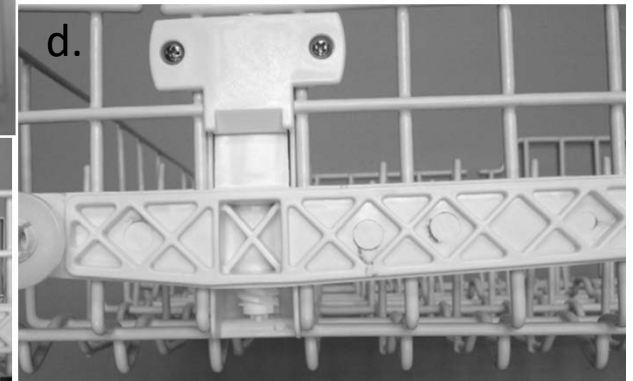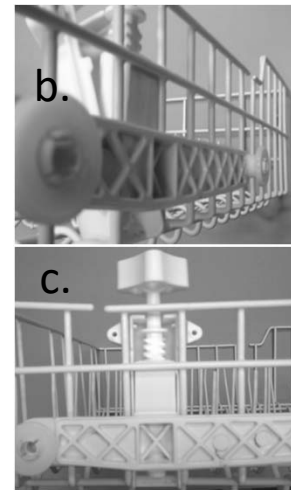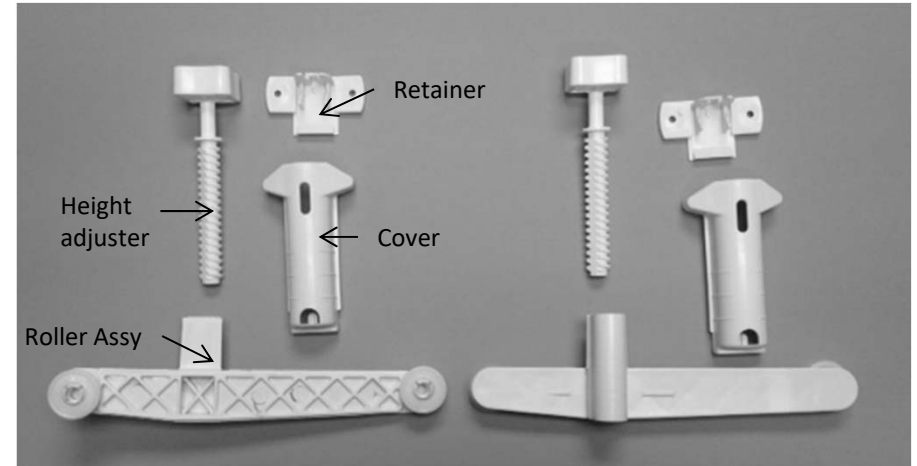

Note – If center spray arm is used remove from the old rack. Note the position of the spray arm on the old rack and replace in the same position making sure the connector nozzle in the back of the spray arm makes proper contact.