


Installing Platinum Tools® J Hooks


Mounting to a wall: JH12, JH21, JH32 and JH64

Secure the hook to the wall with a mounting anchor* appropriate to the surface you are mounting it to, such as a screw or a toggle bolt.

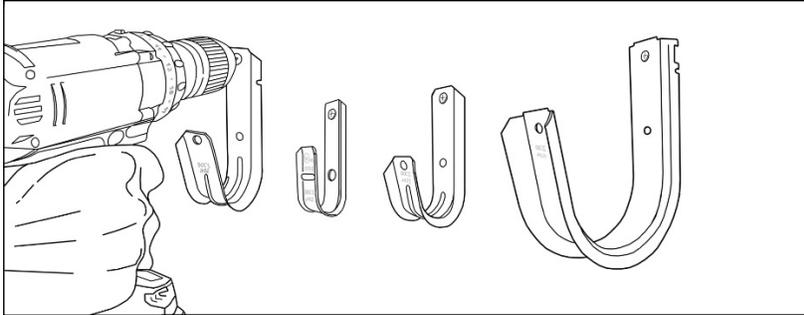

Mounting to a Rod: JH12W, JH21W, JH32W and JH64W


Secure a batwing spring steel clip* to the J Hook using an appropriate fastener such as a bolt or a rivet. Depress the batwing between your fingers and attach it to the threaded rods as shown.

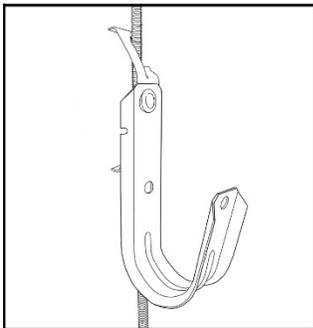

Mounting to a Rod with the angle clip Bracket: JH12AC, JH21AC, JH32AC and JH64AC

Secure the angle clip to the rod with 2 - 1/4x20 nuts as shown.

Note: The clip may be secured directly to the ceiling using an appropriate anchor*.

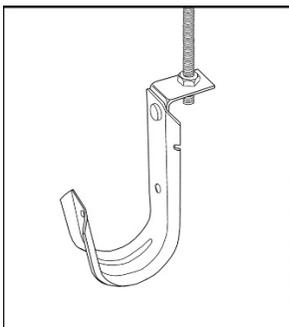

*Consult the manufacturer's instructions and load ratings before using on your application.

**Consult and follow local codes and practices.

***Follow all safety guidelines.

Cable Capacity

Product	Load Rating (LBS)		Applications	(4-pair)
JH-12 Series	17		Cable bundles and 12-3 Flexible Metal Cable / Cat5e / Cat6 cables	11/16/10
JH-21 Series	17		Cable bundles and 12-3 Flexible Metal Cable / Cat5e / Cat6 (4-pair) cables	11/50/32
JH-32 Series	17		Cable bundles and 12-3 Flexible Metal Cable / Cat5e / Cat6 (4-pair) cables	11/80/50
JH-64 Series	50 AC/Basic	33.3 Batwing	Cable bundles and 12-3 Flexible Metal Cable / Cat5e / Cat6 (4-pair) cables	22/300/185



800.749.5783
www.platinumtools.com

