



# HOW TO INSTALL SLIME

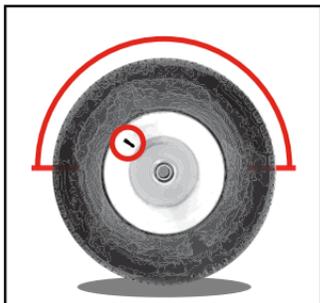

**1** Position valve in upper half of tire.

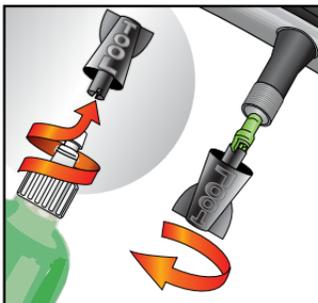

**2** Slowly remove valve core with tool in cap.




**3** Allow tire to fully deflate.



**4** Remove object (if possible).



**5** Attach hose and squeeze in Slime.

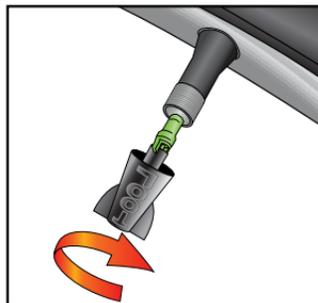

**6** Reinstall valve core.



**7** Just add air.



**8** Drive. Stop. Verify seal and check pressure.