 


# NEBO®

## PREPLITE COMBO

### USER MANUAL

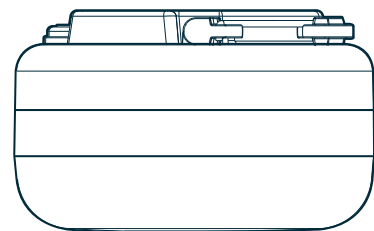

## GALILEO® PUCK FLEX 245

### LANTERN+ SPOTLIGHT

#### LITHIUM-ION BATTERY:

MODES	OUTPUT (LUMENS)	RUN TIME (HOURS)	BEAM DISTANCE (METERS / YARDS)
SPOT HIGH	245	2.5h	120 / 131
SPOT LOW	110	8h	76 / 83
LANTERN HIGH	180	3h	15 / 16
LANTERN LOW	25	12h	6 / 6
RED	-	6.5h	- / -
RED FLASHING	-	12h	- / -

#### AAA ALKALINE BATTERY:

MODES	OUTPUT (LUMENS)	RUN TIME (HOURS)	BEAM DISTANCE (METERS / YARDS)
SPOT HIGH	245	3.5h	120 / 131
SPOT LOW	110	9h	76 / 83
LANTERN HIGH	180	3h	15 / 16
LANTERN LOW	25	12h	6 / 6
RED	-	6.5h	- / -
RED FLASHING	-	12h	- / -

#### CHARGING

Open the battery compartment by twisting the top clockwise and removing it. Remove the battery. Insert the included USB-C cable into the port on the battery and connect to a power source.

#### CHARGING STATUS

A small light near the charging port on the battery acts as a charge indicator.

- **Solid Red:** Charging
- **Solid Green:** Charged Completely

 
This Lantern can also run on (3) AAA Batteries (Not included)

#### OPERATION

Press & release the power button to cycle through white light modes.  
**Spot High > Spot Low > Lantern High > Lantern Low > Red > Red Flashing > OFF**  
 After 10 seconds of no button activity, the next mode will always be off. The next time the light is turned on it will return to last mode used.

#### DIRECT TO RED

From the OFF position, press and hold the power button for approximately 3 seconds to activate the RED mode. Pressing the button again, within 10 seconds of the red activation, will reverse the mode sequence.  
**Off > Red > Lantern Low > Lantern High > Spot Low > Spot High > Off**

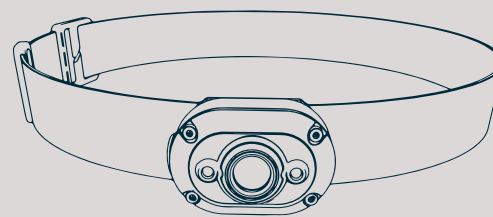

## MYCRO® 400

### HEADLAMP + CAP LIGHT

MODES	OUTPUT (LUMENS)	RUN TIME (HOURS)	BEAM DISTANCE (METERS / YARDS)
TURBO	400	30s	80 / 87
HIGH	150	1h	50 / 54
MEDIUM	50	2h	18 / 19
LOW	15	5h	10 / 11
GREEN	-	10h	- / -
RED	-	10h	- / -

#### CHARGING

To charge, connect the light to a power source with the included USB-C cable. A "Charge Status" LED indicator is illuminated during charging. (located by the charge port)

#### CHARGING STATUS

A small light near the charging port acts as a charge indicator.

- **Solid Red:** Charging
- **Solid Green:** Charged Completely

#### OPERATION

Press & release the power button to cycle through light modes.  
 High > Medium > Low > Green > Red > Off  
 After 8 seconds of no button activity, the next mode will always be off.

#### TURBO MODE

 
Press and hold the button, from any active light mode, to activate the TURBO mode.

#### DIRECT-TO-RED

From the OFF position, press and hold the power button for approximately 3 seconds to activate the RED mode. Pressing the button again, within 10 seconds of the red mode activation, will reverse the mode sequence.  
**Off > Red > Green > Low > Medium > High > Off**

#### VERSATILE CLIP


Adjustable, cap clip provides 135° tilt and use as a cap light when the head strap is removed.

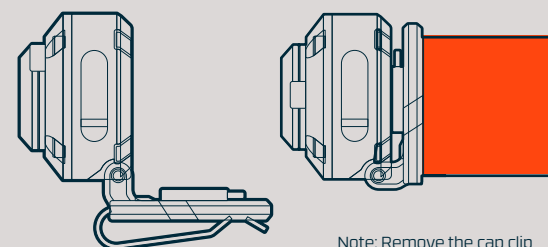

Note: Remove the cap clip when using the light as a headlamp with the strap.

## SLIM+ 700
 
### WORK LIGHT+ POWER BANK

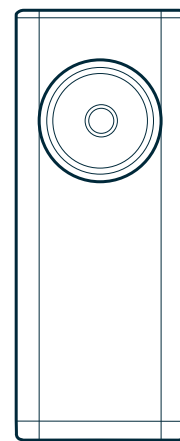

MODES	OUTPUT (LUMENS)	RUN TIME (HOURS)	BEAM DISTANCE (METERS / YARDS)
HIGH	700	1.5h	60 / 65
LOW	70	6h	19 / 20

#### CHARGING

To charge, connect the light to a power source with the included USB-C cable. A "Charge Status" LED indicator is illuminated during charging (located by the charge port).

#### CHARGING STATUS

A small light acts as a charge indicator.

- **Solid Red:** Charging
- **Solid Green:** Charged Completely

#### BATTERY STATUS

There is a battery status LED at the top of the light. It will light for 3 seconds when the light is powered on, indicating the battery power level.

- **Solid Green:** More than 10%
- **Solid Red:** Less than 10%

The LED will also turn on while the power bank is active.

#### POWER BANK

 
To charge a phone or other rechargeable device, insert the device's charging cable into the SLIM+'s USB-A output port to begin using the power bank feature.

#### OPERATION

Press & release the power button turn of and on the light. Press and hold while on to activate dimming cycle. The light will always turn on at the last dim level.

#### POCKET CLIP

This light comes with a pocket clip that is magnetic, detachable and has a hanger hook. Turn counterclockwise to remove.

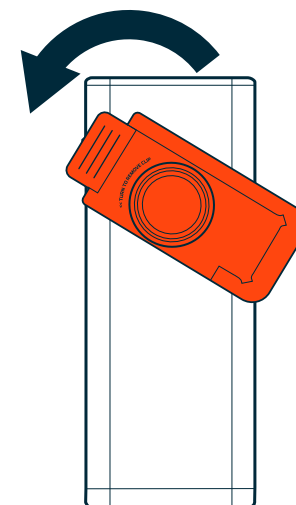

## COLUMBO™

 
### KEYCHAIN LIGHT



MODES	OUTPUT (LUMENS)	RUN TIME (HOURS)	BEAM DISTANCE (METERS / YARDS)
ON	100	1	40 / 43

#### OPERATION

Rotate the head to turn the unit ON & OFF.

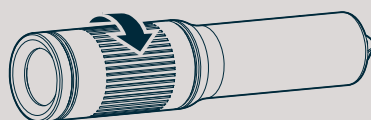

#### BATTERY

This unit is powered by a single AAA battery. To replace the battery, unscrew the head and insert battery negative side (-) first.



#### PRODUCT GUARANTEE

This product is guaranteed against all defects in workmanship and materials for the original owner for one year from the date of purchase.

If you experience a problem, please do not return to your local store. Contact our Customer Service team at 800-255-6061.



Go to [NEBOLIGHTS.com](http://NEBOLIGHTS.com) for more information

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copy writing and the selection and arrangement ("Materials") thereof are ALL RIGHTS RESERVED Copyright © 2024 Alliance Sports Group, L.P.