

# INSTALLATION INSTRUCTIONS

## SIG Series--FURNACE IGNITER

The SIG is a silicone carbide round igniter.

Specifications:

Time to Temp. (1800°F): <17 sec @ 120 vac

Voltage: 120 vac

Cold Resistance: 440-100 ohms @ 75°F±10°F

1. Disconnect power.
2. Disconnect igniter wires from furnace.
3. Remove screws holding igniter. Keep screws for replacement igniter.
4. Attach new igniter with screws.
5. Reconnect wires to furnace.
6. Reconnect power.
7. Adjust heat and make sure the furnace turns on and cycles properly.



**WARNING**  
Disconnect power before servicing equipment.

**800.333.9125 - techsupport@supco.com - www.supco.com**