



WARNING

IMPORTANT! READ and follow these instructions carefully and keep for future reference.

Room & Bath Thermometer

- Auto shut off to save batteries power after 30 minutes.
- While on, thermometer will continue to re-check and adjust room and water temperature every 10 seconds.

To Change from Celsius to Fahrenheit:

Press C/F button to change from Celsius to Fahrenheit.

To Clean:

Wipe clean with soft damp cloth. If required, use mild detergent. Dry well.

Room Thermometer

To Use:

1. Turn thermometer on by pressing "on/set" button.
2. Wait 10 seconds to read temperature.

Bath Thermometer

 
To Use:

1. Swirl bath water to ensure an even temperature distribution.
2. Turns "on" automatically in the water. Wait 10 seconds to read temperature.
3. Adjust water to reach desired water temperature before putting child in bath.

To Change High Temperature Alert Settings:

High temperature alert is preset to 38°C / 100°F, but you can choose to change setting between 37°-40°C / 99°-104°F.

1. Press "on/set" button and hold for 2 seconds.
 2. Press (+) to set to desired alarm temperature. If water temperature is above set high rating a RED light will flash. Flashes GREEN when water is below 30°C / 86°F.
- This feature is only functional when thermometer is in water.

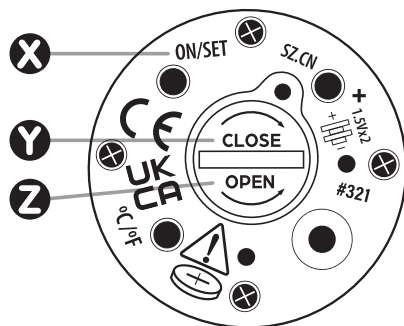

- X** ON/SET
- Y** CLOSE
- Z** OPEN

CAUTION

To prevent battery leaks, which can burn skin and eyes:
 Remove batteries when storing product for a long time.
 Discard old batteries promptly in accordance with local laws and regulations.
 Always replace the entire set of batteries at one time.
 Never mix old and new batteries, or batteries of different brands or types.
 Always check water temperature manually in addition to using this thermometer.
 Never leave children unattended in the bathroom.
 There is no substitute for proper adult supervision.
 Only use this product fully assembled and in accordance with instructions.
 When using the thermometer in water ensure the battery door is fully closed.

! WARNING



 
 
CONTAINS BUTTON OR COIN CELL BATTERY. HAZARDOUS IF SWALLOWED. KEEP BATTERIES OUT OF REACH CHILDREN. A BATTERY CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF IT IS SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY.

- This product contains a Button or Coin Cell Battery.
- A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Due to chemical burns and potential perforation of the esophagus.
- Dispose of used batteries immediately, Flat/drained batteries can still be dangerous.
- Keep new and used batteries away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, **SEEK IMMEDIATE MEDICAL ATTENTION.**
- If you suspect your child has swallowed or inserted a button battery immediately call the Poisons control hotline and **SEEK IMMEDIATE MEDICAL ATTENTION.**
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or another mechanical fastener is tightened. Do not use if compartment is not secure.
- Tell others about the risk associated with button batteries and how to keep their children safe.
- Keep battery cover out of reach of children as it may be a choking hazard.
- Do not dispose of batteries in fire, or expose to extreme heat, it may explode.
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not use rechargeable battery.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- Supply terminals are not to be short-circuited.
- Do not mix alkaline standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

24 HOUR POISONS INFORMATION CENTER
AUSTRALIA ☎ 13 11 26
NEW ZEALAND ☎ 0800 764 766

To Change Batteries:

1. Use a pointed object to push down the button **[A]** and slide the lid **[B]** to one side and remove.
2. Remove old batteries.
3. Replace with new 2 x LR44 model (1.5V). There is no need to replace tape.
4. Insert lid **[B]** into hole and swivel clockwise towards button **[A]**. Use fingernail to depress button **[A]** and slide cover **[B]** until it pops up through hole.

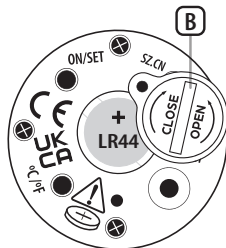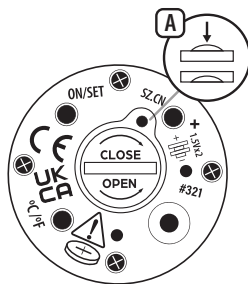

Tee-Zed acknowledges that its customers may be entitled to statutory consumer guarantees and does not seek to exclude or limit them. These guarantees include that Tee-Zed's products are of acceptable quality. This Tee-Zed product is for the specific purpose detailed in the instructions and packaging and Tee-Zed considers use outside of that purpose to be abnormal use. To the maximum extent permitted by law, Tee-Zed does not accept any liability for damage:

- arising from abnormal use of the products;
- caused by installation or removal of the products other than in accordance with the supplied installation and removal instructions; or
- arising under the law of tort or contract.

Tee-Zed Products Pty Ltd
 PO Box 2022,
 Bondi Junction NSW 1355
AU ☎ +61 (0)2 9386 4000
✉ info@tee-zed.com.au
www.dreambaby.com.au

Tee-Zed Products (N.Z.) Ltd
 PO Box 64013,
 Botany Town Centre Auckland
NZ ☎ +64 (0)9 274 8788
✉ info@tee-zed.co.nz
www.dreambaby.co.nz

Tee-Zed Products Ltd
 PO Box 29227,
 Dunfermline, KY12 2DN
UK ☎ +44 (0)844 800 9445
✉ info@tee-zed.co.uk
www.dreambaby.co.uk

Tee-Zed Products (EU) Ltd
 PO Box 3419, 5203DK
NL
✉ info@tee-zed.eu
 Made in China.
 ©2026 Tee-Zed Products Pty Ltd



X12