



NewHeights™ Hooligan Teacher's Desk Modesty Panel Assembly Instructions

Warranty: raproducts.com/warranty

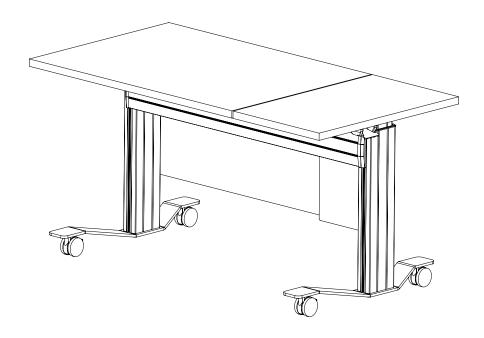

Tools Required for Assembly

- A. Power Driver with Adjustable Torque
- B. #2 Phillips Head Driver Bit
- C. 3/16" Allen Wrench
- D. 5mm Allen Wrench

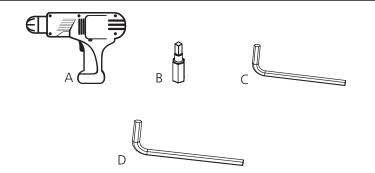

Hardware and Tools Included for Assembly (may have extra)

- E. 5/8" Washer Head Wood Screw x4
- F. 3/8" Button Socket Cap Screw x4






Parts

- G. Acrylic Panel Surface Mount x2
- H. Desk Side Modesty Panel x1
- I. Podium Side Modesty Panel x1






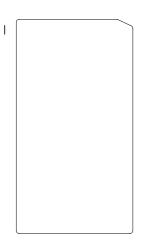

Step 1

- Place the Hooligan desk upside down on a protected surface with the desk legs and underside of the worksurface facing up.
- Using the 5mm allen wrench (D), loosen the bolt to open the clamping portion of one acrylic panel surface mount (G).
- Repeat on the second acrylic panel surface mount (G).

It only needs to be opened wide enough to slide in an acrylic panel.

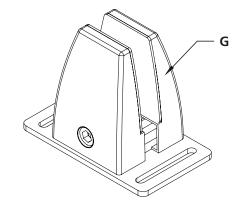




Step 2

• On the podium side of the desk, place the two acrylic panel surface mounts (G). Align the mounts with the pre-drill pilot holes.

 Secure the surface mounts to the underside of the worksurface using four (4) washer head wood screws (E).

 








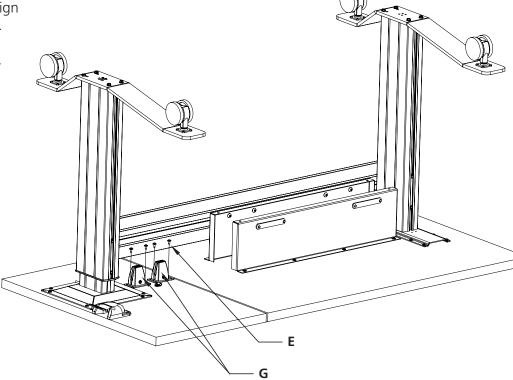


Image above shows second cross support removed for clarification purposes only.

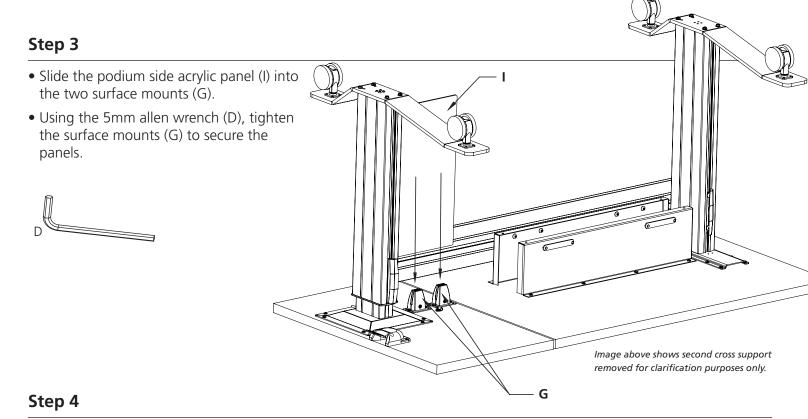


 

- Take the desk side modesty panel (H), and insert the long end of the 5mm allen wrench (D) through the bottom left hole as shown in the image.
- Lift up the modesty panel (H) and insert the allen wrench (which is still in the bottom left hole of the modesty panel) into the bottom hole of the

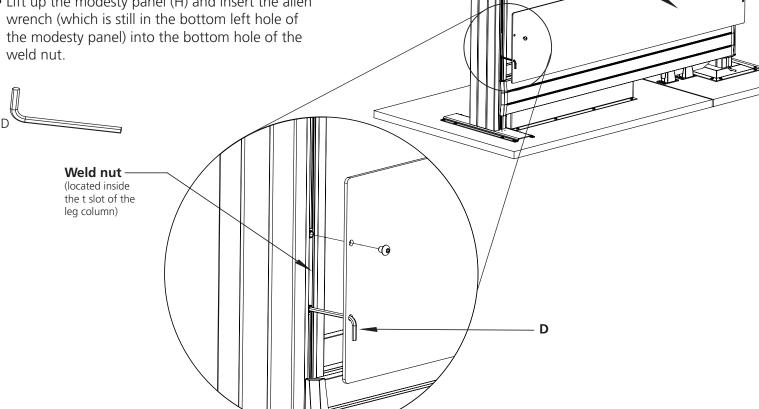

Step 4 continued

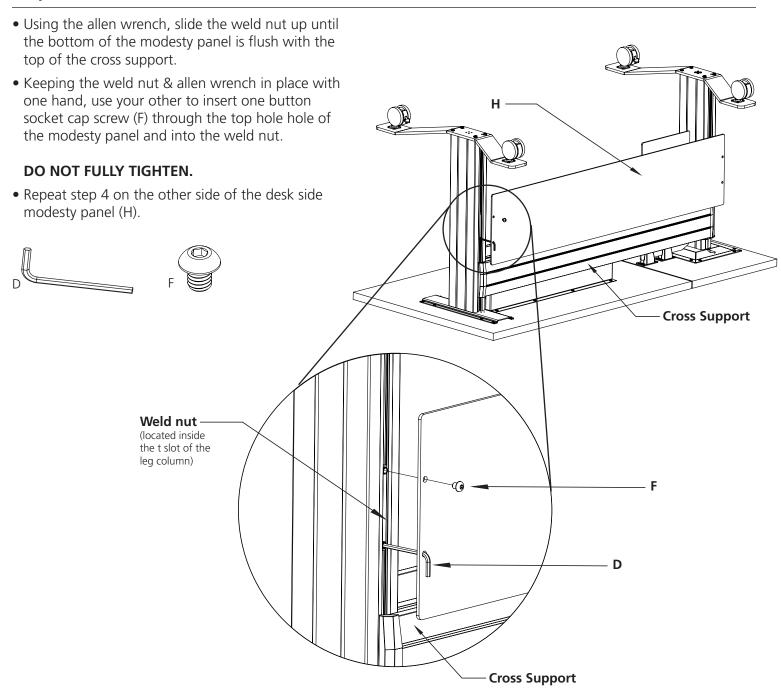

Step 5

- Then, insert the last two button socket cap screws (F) into the remaing holes of the modesty panel. Do not fully tighten.
- Carefully adjust the desk side modesty panel to your chosen position.

We recommend pushing the panel up against the cross support.

- When in place, use the 3/16" allen wrench (C) to secure the panel and tighen all four button socket cap cap screws. See Pro Tip.
- You can now flip the Hooligan desk rightside up and begin use.



Be careful not to over tighten the screws to avoid cracking the acrylic.





