



HEATED WRAP OPERATING INSTRUCTIONS

❖ CONNECTING YOUR POWER BANK

Locate the velcro pocket in the wrap and remove the power bank. Remove the power bank from its package. Remove the cap on the USB-A cable located inside the pocket and plug into the power bank. Place the power bank inside the pocket. Close the velcro pocket and press and hold the power button on the wrap to power it on and to ensure it's connected.

❖ MODE SELECTION

Press and hold the power button to turn on. When on, the power button will be backlit. Each press of the power button will cycle through each mode; high, medium and low. Press and hold the power button to turn off.

❖ CHARGING

Remove the power bank from the velcro pocket. With the included USB charging cable connected to a power source from the USB-A end, plug the USB-C end into the power bank. The highest LED will flash blue to indicate that the product is charging. The blue LEDs will then light up to indicate your charge level. When fully charged, all four blue LEDs will light up.




❖ BATTERY LEVEL

The four blue LEDs on the power bank will indicate battery level. When fully depleted, the first LED will flash.

❖ CARE INSTRUCTIONS

Remove the battery from the velcro pocket and place the cap over the USB-A cable inside the pocket. Machine wash cold on delicate. Withstands 15 washes at 60 minutes each wash.

TEMPERATURE CHART

MODE	TEMPERATURE	RUN TIME
	55 °C / 131 °F	5H
	50 °C / 122 °F	6H
	45 °C / 113 °F	8H