

 
 
Instruction Sheet

16009832

Description: Receptacle Replacement Assembly, Ceramic

Repair Part Number: 12001676

Kit includes:

 74004005 2 - Screws 6-32 x 5/16"	 1555278 2 - Wire Nut	 712142 1 - "L" Bracket	 74007474 1 - Receptacle	 16009832 Instruction Sheet
---	--	--	--	--



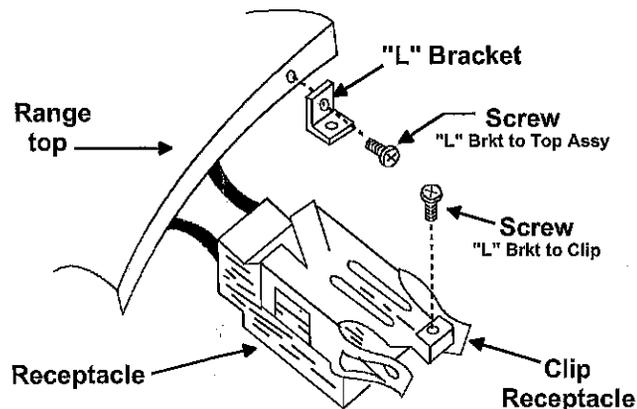
WARNING

To avoid risk of electrical shock, personal injury or death; disconnect electrical power before servicing.

Procedure:

1. Remove screw retaining old receptacle to unit top (vertical flange if applicable).
2. Remove inoperative receptacle block, by cutting the two harness wires approximately 4 from the end of the receptacle block.
3. Install the new receptacle block and mounting clip.
4. Strip $\frac{3}{8}$ " of insulation from range harness wires and attach the new lead wires using the wire nuts (provided).
5. Attach the new receptacle assembly to the range and test operation.

For models with vertical flange: Install the long side of the "L" shaped mounting bracket under the lip of the receptacle bracket and attach with screw (provided). Place the remaining vertical surface of the "L" bracket behind the lip of the unit and attach with screw (provided).



 
 
 
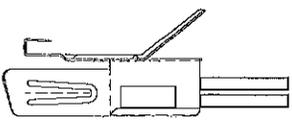
Feuille d'instructions

16009832

Description : Ensemble de remplacement de réceptacle,
céramique

Pièce de rechange numéro : 12001676

La trousse inclut :

 74004005 2 – Vis 6-32 x 5/16 po	 1555278 2 – Coinceurs à câble	 712142 1 – Support en « L »	 74007474 1 – Réceptacle	 16009832 Feuille d'instructions
--	--	--	--	--

AVERTISSEMENT

Pour éviter les risques de choc électrique, de blessures ou de mort, débrancher l'alimentation électrique avant d'effectuer l'entretien.

Étapes à suivre :

1. Enlevez la vis qui retient l'ancien réceptacle à la partie supérieur de l'appareil (rebord vertical si le cas échéant).
2. Enlevez le bloc de réceptacle qui ne fonctionne pas en coupant les deux faisceaux de fils à environ 10 cm de l'extrémité du block de réceptacle.
3. Installez le nouveau bloc de réceptacle et l'attache de montage.
4. Découpez 1 cm d'isolation du faisceau de fils de la cuisinière et fixez les nouveaux fils à l'aide des coinçeurs à câble (fournis).
5. Fixez le nouvel ensemble de réceptacle à la cuisinière et vérifiez son fonctionnement.

Pour les modèles équipés d'un rebord vertical : Installez le plus long côté du support de montage sous la lèvre du support du réceptacle et fixez avec une vis (fournie). Placez le reste de la surface verticale du support en « L » derrière la lèvre de l'appareil et fixez avec la vis (fournie).

