

Before operation, open the battery compartment and remove the round battery spacer disc.



OPERATION

Press & release power button to turn the unit off and on.

When the unit is ON, soft press & release to cycle through light modes.

White > Green > Red > Strobe

If the switch is powered off (full press) and then back on within 8 seconds, the mode sequence is resumed.

After 8 seconds of being off, the next activation will resume from HIGH regardless of the previous mode.



4X ZOOM

Twist the head to narrow or widen the light beam.



BATTERY

This unit is powered by 3x AAA Alkaline batteries.

To replace, simply unscrew the base, remove the battery cartridge, and swap your old batteries for new ones.

Do not mix old and new batteries, or Alkaline and rechargeable batteries.

PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or <u>www.nebolights.com/contact</u>

For more information, detailed video instructions, and warranty registration, visit **NEBOLIGHTS.com**