

# NEBO®

## LUXTREME® NANO



### IMPORTANT

Before using this product, remove it from demo mode by charging it with the included USB.

### CHARGING INSTRUCTIONS


1. Lift the silicone tab to expose the USB-C port
2. Insert the USB-C end of the provided cable into the USB-C port
3. Connect the USB-A end of the cable to a power source
4. The power button will illuminate and serves as a charging status indicator as well as a battery level indicator when the flashlight is in use.

### CHARGING STATUS

**Pulsing Green:** Charging  
**Steady Green:** Fully charged

### BATTERY LEVEL

**Steady Orange:** Battery level is greater than 25%  
**Flashing Orange:** Battery level is less than 25%

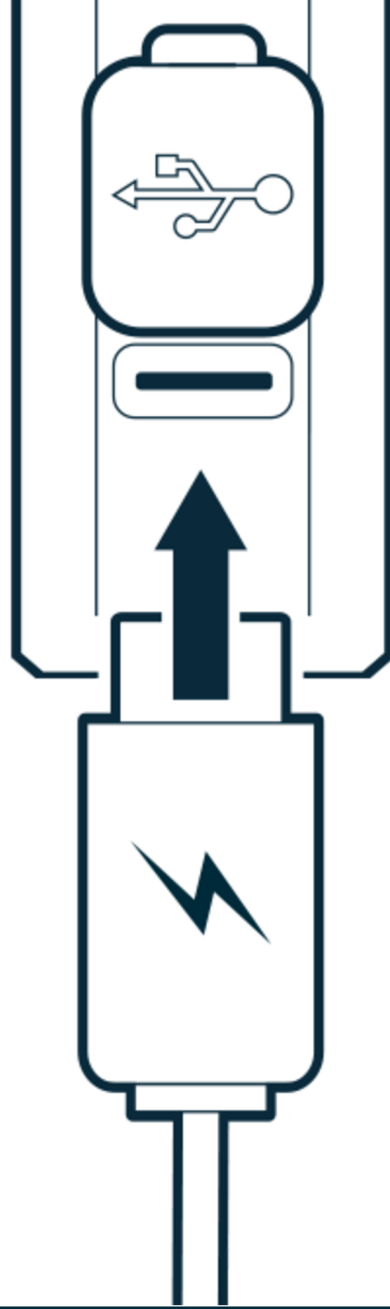

### OPERATION

Press the power button to cycle through light modes: **OFF > HIGH > MEDIUM > LOW**

### TURBO MODE

With the light on in any mode, long press the power button for two seconds. The Turbo Mode will be activated for 30 seconds and then automatically return to the previous light mode.

### STROBE MODE

Quickly double-press the power button to activate the strobe mode. To deactivate strobe mode, single press the power button.

### DIRECT-TO-LOW

From Off, press and hold button.

MODES	OUTPUT (LUMENS)	RUN TIME (HOURS)	BEAM DISTANCE (METERS / YARDS)
TURBO	420	30s	300 / 328
HIGH	80	2	133 / 145
MEDIUM	40	3.5	97 / 106
LOW	12	8	52 / 56
STROBE	-	5	-



If you experience a problem, please do not return to your local store. Contact our Customer Service team at 800-255-6061 or [NEBOLIGHTS.com](http://NEBOLIGHTS.com)

For more information, detailed video instructions, and warranty registration, visit [NEBOLIGHTS.com](http://NEBOLIGHTS.com)

**BATTERY:** Li-Ion, 701240 (3.7V, 300 mAh, 1.11Wh)  
The rechargeable battery comes pre-installed and is not replaceable or serviceable

[NEBOLIGHTS.COM](http://NEBOLIGHTS.COM)