


INSTALLATION INSTRUCTIONS - SFPC

Freeze Protection Control

Designed to protect the air conditioning coil from freezing. To install, simply snap it onto the suction line just outside the evaporator coil. When the SFPC senses temperature at 38 °F it breaks the circuit to the compressor relay, preventing a freeze up. The SFPC then remakes the compressor circuit at 48 °F allowing ample time for the compressor to be off. This differential prevents any short cycling. During the period that the compressor is off the fan is still running, using the cold coil to provide air conditioning.



Disconnect power before servicing equipment.

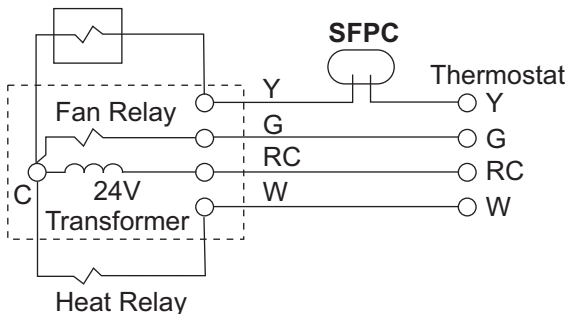

18774

800.333.9125
techsupport@supco.com
www.supco.com