


# NEBO® BLUELINE® 2600 FLEX




The Blueline 2600 Flex is a rugged, flex-powered 2600-lumen flashlight with four light modes, 5x adjustable zoom, and integrated power bank.

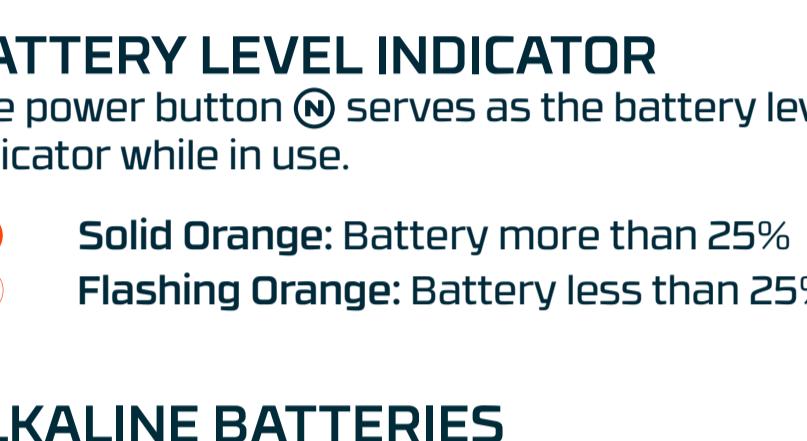


## FLEX-POWER™

Hybrid power system operates on the included rechargeable battery or 6 AAA batteries (not included)

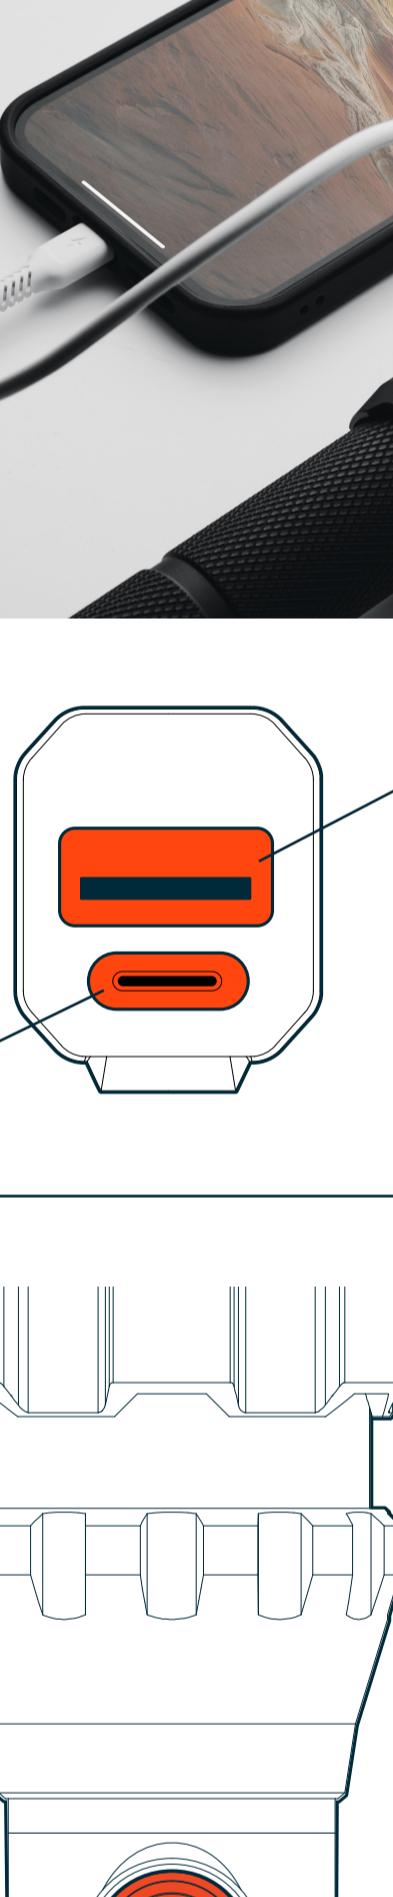

## CHARGING INSTRUCTIONS

To charge, connect the flashlight to a power source using the included USB cable.

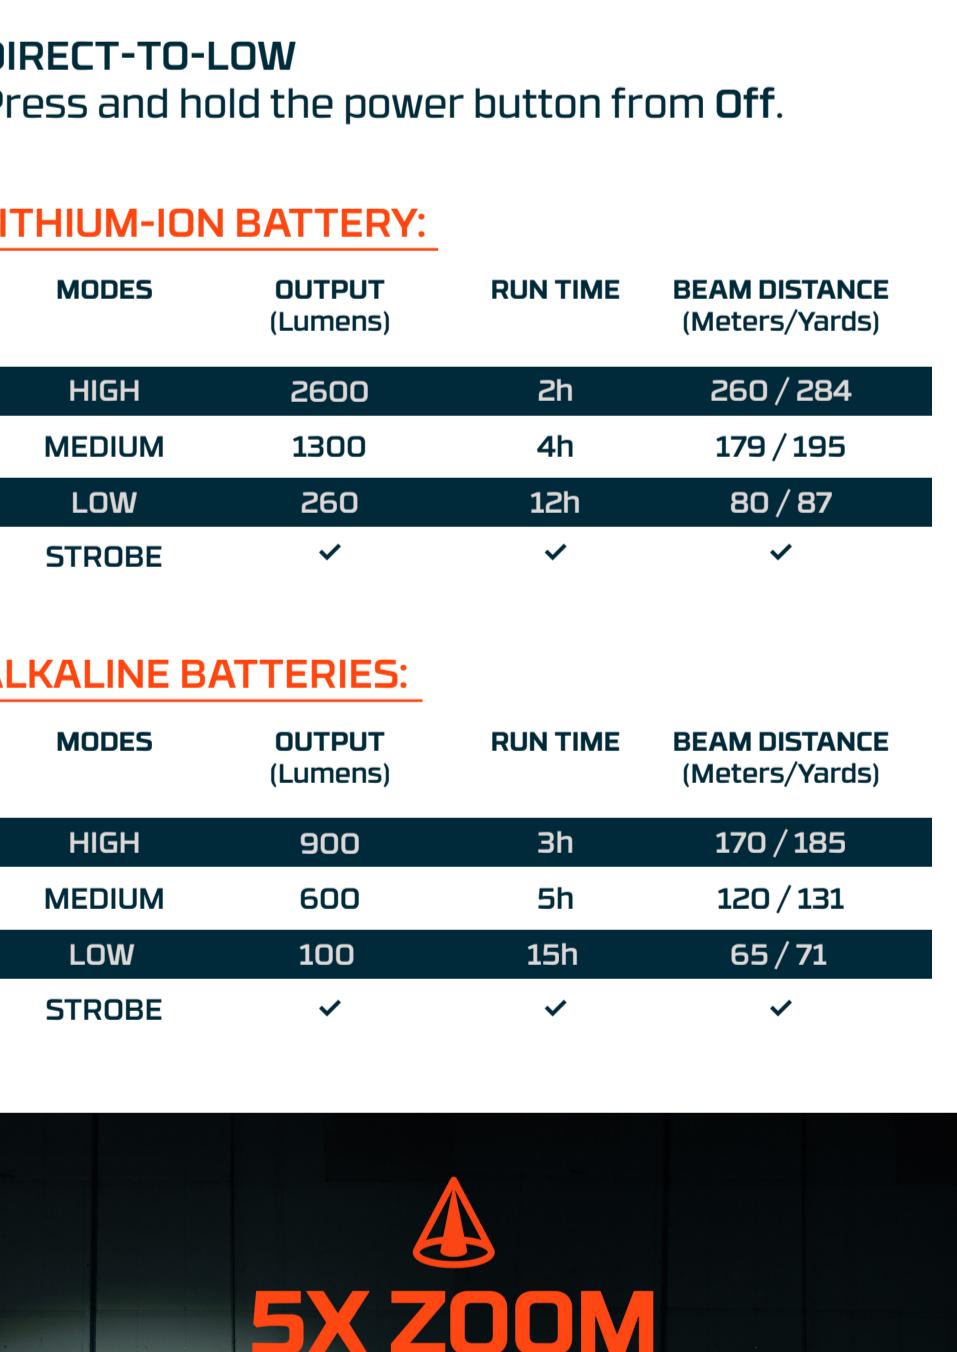

## LITHIUM-ION BATTERY:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 2600            | 2h       | 260 / 284                    |
| MEDIUM | 1300            | 4h       | 179 / 195                    |
| LOW    | 260             | 12h      | 80 / 87                      |
| STROBE | ✓               | ✓        | ✓                            |

## ALKALINE BATTERIES:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 900             | 3h       | 170 / 185                    |
| MEDIUM | 600             | 5h       | 120 / 131                    |
| LOW    | 100             | 15h      | 65 / 71                      |
| STROBE | ✓               | ✓        | ✓                            |

## OPERATION

Press power button to turn the unit on. Press and release repeatedly to cycle through modes:

High > Medium > Low > Off

After 8 seconds of button inactivity, the next press will turn the flashlight Off.

## STROBE

Double-tap the power button to activate Strobe.

## DIRECT-TO-LOW

Press and hold the power button from Off.

## LITHIUM-ION BATTERY:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 2600            | 2h       | 260 / 284                    |
| MEDIUM | 1300            | 4h       | 179 / 195                    |
| LOW    | 260             | 12h      | 80 / 87                      |
| STROBE | ✓               | ✓        | ✓                            |

## ALKALINE BATTERIES:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 900             | 3h       | 170 / 185                    |
| MEDIUM | 600             | 5h       | 120 / 131                    |
| LOW    | 100             | 15h      | 65 / 71                      |
| STROBE | ✓               | ✓        | ✓                            |

## 5X ZOOM

Twist to transition between a wide flood and a focused spot beam.

Wide Beam: Floods a large area with a bright, even light.

Spot Beam: Focuses a bright beam of light on a specific target.

## IPX7 WATERPROOF

Built to perform in extremely rainy and wet conditions.

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 2600            | 2h       | 260 / 284                    |
| MEDIUM | 1300            | 4h       | 179 / 195                    |
| LOW    | 260             | 12h      | 80 / 87                      |
| STROBE | ✓               | ✓        | ✓                            |

## OPERATION

Press power button to turn the unit on. Press and release repeatedly to cycle through modes:

High > Medium > Low > Off

After 8 seconds of button inactivity, the next press will turn the flashlight Off.

## STROBE

Double-tap the power button to activate Strobe.

## DIRECT-TO-LOW

Press and hold the power button from Off.

## LITHIUM-ION BATTERY:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 2600            | 2h       | 260 / 284                    |
| MEDIUM | 1300            | 4h       | 179 / 195                    |
| LOW    | 260             | 12h      | 80 / 87                      |
| STROBE | ✓               | ✓        | ✓                            |

## ALKALINE BATTERIES:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 900             | 3h       | 170 / 185                    |
| MEDIUM | 600             | 5h       | 120 / 131                    |
| LOW    | 100             | 15h      | 65 / 71                      |
| STROBE | ✓               | ✓        | ✓                            |

## OPERATION

Press power button to turn the unit on. Press and release repeatedly to cycle through modes:

High > Medium > Low > Off

After 8 seconds of button inactivity, the next press will turn the flashlight Off.

## STROBE

Double-tap the power button to activate Strobe.

## DIRECT-TO-LOW

Press and hold the power button from Off.

## LITHIUM-ION BATTERY:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 2600            | 2h       | 260 / 284                    |
| MEDIUM | 1300            | 4h       | 179 / 195                    |
| LOW    | 260             | 12h      | 80 / 87                      |
| STROBE | ✓               | ✓        | ✓                            |

## ALKALINE BATTERIES:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 900             | 3h       | 170 / 185                    |
| MEDIUM | 600             | 5h       | 120 / 131                    |
| LOW    | 100             | 15h      | 65 / 71                      |
| STROBE | ✓               | ✓        | ✓                            |

## OPERATION

Press power button to turn the unit on. Press and release repeatedly to cycle through modes:

High > Medium > Low > Off

After 8 seconds of button inactivity, the next press will turn the flashlight Off.

## STROBE

Double-tap the power button to activate Strobe.

## DIRECT-TO-LOW

Press and hold the power button from Off.

## LITHIUM-ION BATTERY:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 2600            | 2h       | 260 / 284                    |
| MEDIUM | 1300            | 4h       | 179 / 195                    |
| LOW    | 260             | 12h      | 80 / 87                      |
| STROBE | ✓               | ✓        | ✓                            |

## ALKALINE BATTERIES:

| MODES  | OUTPUT (Lumens) | RUN TIME | BEAM DISTANCE (Meters/Yards) |
|--------|-----------------|----------|------------------------------|
| HIGH   | 900             | 3h       | 170 / 185                    |
| MEDIUM | 600             | 5h       | 120 / 131                    |
| LOW    | 100             | 15h      | 65 / 71                      |
| STROBE | ✓               | ✓        | ✓                            |

## OPERATION

Press power button to turn the unit on. Press and release repeatedly to cycle through modes:

High > Medium > Low > Off

After 8 seconds of button inactivity, the next press will turn the flashlight Off.

## STROBE

Double-tap the power button to activate Strobe.

## DIRECT-TO-LOW