

# ST08 DUAL POCKET THERMOMETER

To Calibrate:

Choose two points on the dial at least half the scale range apart, for which true temperature standards are available. Put the thermometer shaft (2" minimum) into the agitated liquid (oil or water) together with a standard and check the readings of both. To adjust the reading; hold the hex nut beneath the face with a wrench, then turn the face by hand. Rotate the face until the needle aligns with the correct temperature reading.

Check the second temperature. If the second reading is outside the specified tolerance, re-adjust the dial so that the thermometer readings are within tolerance at both temperature settings.

**800.333.9125 - [techsupport@supco.com](mailto:techsupport@supco.com) - [www.supco.com](http://www.supco.com)**