



Tools Required:

Power Driver W/Adjustable Torque
#2 Phillips head Driver Bit

K&A Manufacturing
6703 Zinser Street
Schofield, WI 54476
Phone: 800.298.4351
Fax: 866.882.9475
www.raproducts.com
Version Dated: 4/9/15

Replace XT Control Box

Step 1: Unplug the power cord for the existing control box and discard it. With the help of an assistant, lay the workstation upside down on a protected surface. Unplug the cords coming from the leg assemblies and the switch. Push the locking tabs to release the plugs.

Step 2: Remove the two screws attaching the control box to the worksurface and set them aside for attaching the new control box. Remove and discard the control box.

Step 4: Attach the new control box to the worksurface in the same location as the old one. You may be able to use one of the original holes. Do not over-tighten the screws. Use a low torque setting on the power driver.

Step 5: Plug the cords from the legs and the switch into the new control box. Make sure the locking tabs on the cords from the legs click in place. Set the workstation upright.

Operation and Reset Procedure

Plug the power cord into a standard 110v receptacle. A power surge protector is recommended. Press the down arrow button until the worksurface reaches its lowest position and the control box clicks. The NewHeights™ is ready for use.

Reset Procedure: Unplug the power for 30 seconds and plug back in. Hold the down arrow button until the unit stops at the bottom. Release the button; then hold the down arrow button until the control box clicks twice.

Troubleshooting: If you are having any problems with the table operation, contact RightAngle™ service at 800-298-4351 or orders@raproducts.com.

Read all the instructions before beginning.