

# INSTALLATION INSTRUCTIONS

## SLS Series--ROLL OUT SWITCH THERMOSTAT AUTO RESET

Specifications - SPST

3 FLA @ 120 VAC, 1.5 FLA @ 240 VAC

12 LRA @ 120 VAC, 6 LRA @ 240 VAC



Disconnect power before  
servicing equipment.

1. Disconnect power.
2. Remove wires from thermostat.
3. Remove screws from thermostat. Keep screws for replacement thermostat.
4. Before installing new thermostat, check to ensure the wire connectors are not damaged or loose.
5. Attach thermostat with screws.
6. Reconnect wires to the thermostat.
7. Reconnect power.

**800.333.9125 - techsupport@supco.com - www.supco.com**