

HOW TO INSTALL SLIME

www.slime.com/install-video



1 Position valve in upper half of tire.



2 Shake vigorously for 30 seconds.



3 Slowly remove valve core with tool in cap.



4 Remove object and allow tire to deflate.



5 Attach hose and squeeze in Slime.



6 Reinstall valve core.



7 Just add air.



8 Drive or ride to distribute sealant.