



Product Questions? Need Technical Assistance?
We're here to help.



1.800.333.9125 ext. 261



techsupport@supco.com

You can also try to search for the product and check the FAQ tab to view answers to commonly asked questions.

Helpful Notes

Soak motor shaft with penetrating oil before pulling hub.
Apply oil to puller shaft as needed.

INSTRUCTIONS

1. Remove shaft set screw
2. Remove all motor mounting bolts
3. Determine hub size and select proper plastic centering bushing
4. Place centering bushing inside of locking hub adaptor
5. Place hub adaptor over hub and tighten set screws
6. Place hub puller over hub adaptor and turn clockwise to lock
7. Attach drill/impact driver to shaft
8. Engage drill/impact driver clockwise to pull hub

SAFETY



WEAR EYE PROTECTION



WEAR GLOVES



FOLLOW ALL COMPANY
SAFETY MANUALS