


HOW TO USE

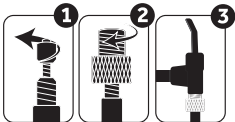

Loosen Presta valve nut.

Twist adapter onto valve.

**Air up, remove adapter and
tighten Presta valve nut.**