 


# NEBO®

## EINSTEIN® 250 HEADLAMP

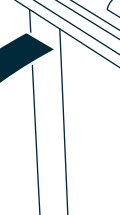 


The Einstein 250 is a one-size-fits all, 250 lumen headlamp with multiple light settings and an adjustable headband for hands-free illumination.



### IMPORTANT

To deactivate demo mode, remove the batteries for 10 seconds and then reinstall.

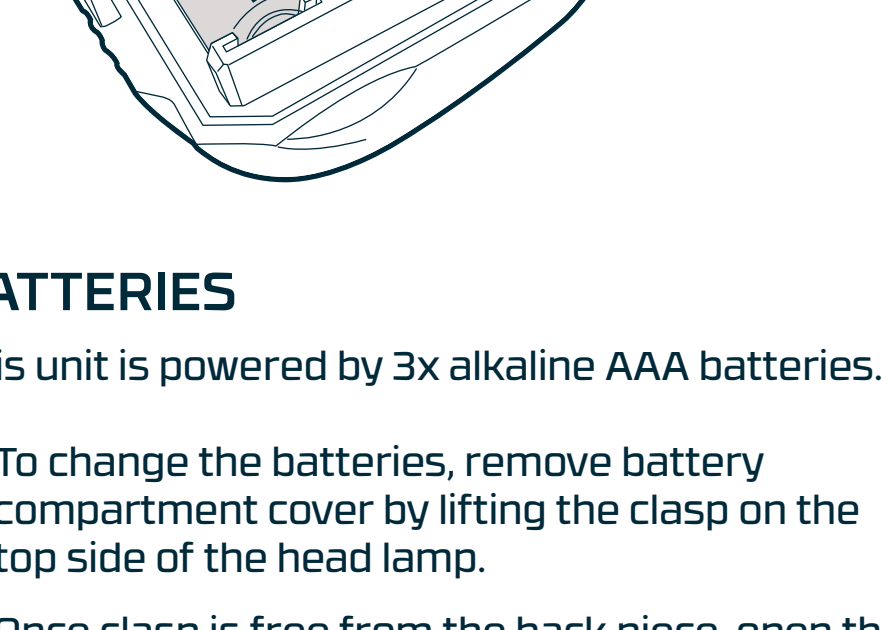


### BATTERIES

This unit is powered by 3x alkaline AAA batteries.

1. To change the batteries, remove battery compartment cover by lifting the clasp on the top side of the head lamp.
2. Once clasp is free from the back piece, open the cover to reveal the battery compartment.
3. Remove old batteries and dispose of properly. Insert new batteries making sure that the negative end ( - ) is facing the spring. Polarity markings are indicated on the battery compartment to assist in proper polarity positions.
4. Reattach the casing by pressing together until it snaps shut.

**DO NOT** mix old and new batteries.

 **DO NOT** mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad, Ni-MH, etc.) batteries.

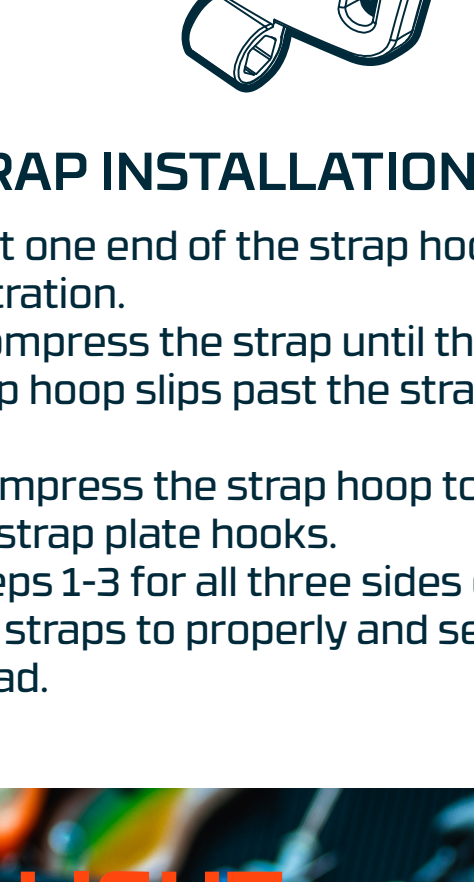

### HEAD STRAP INSTALLATION

1. First, insert one end of the strap hoop as shown in the illustration.
2. Second, compress the strap until the other end of the strap hoop slips past the strap plate opening.
3. Then decompress the strap hoop to slip over the entire strap plate hooks.
4. Repeat steps 1-3 for all three sides of strap.
5. Adjust the straps to properly and securely fit your head.

 
### SPOT LIGHT

Up to 250 Lumens.




### FLOOD LIGHT

Up to 34 hours of area illuminating light.

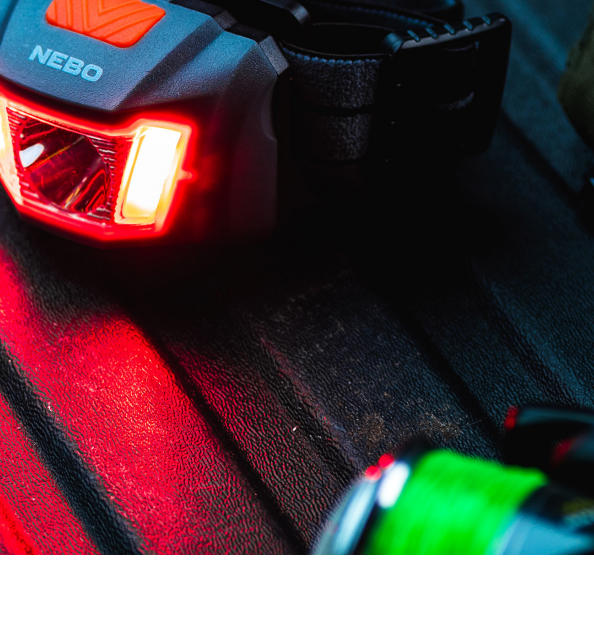

### RED MODE

 Conserve your night vision.

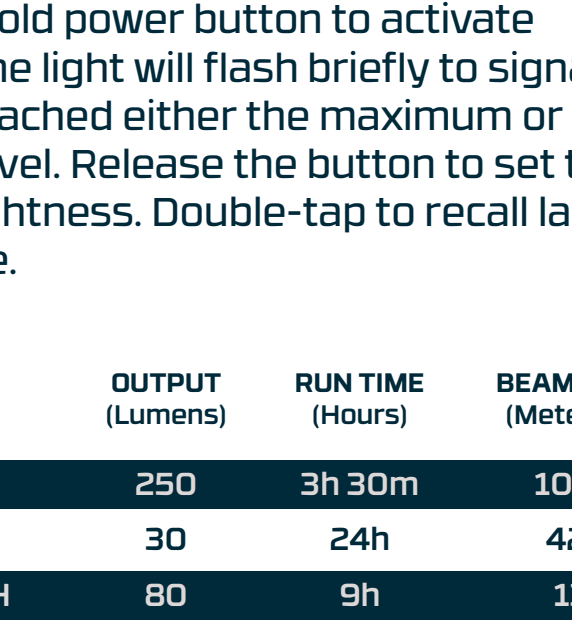

### OPERATION

#### POWER SELECT

Press the power button to cycle through light modes:

**OFF > Spot Light > Flood Light > Red > Red Strobe**

When the unit is off, press and hold the power button to access the Direct-to-Red feature.

#### BRIGHTNESS/DIMMING

All lights modes have continuous dimming and brightening cycling with memory. When ON, press and hold power button to activate dimming; The light will flash briefly to signal that you have reached either the maximum or minimum level. Release the button to set the desired brightness. Double-tap to recall last saved mode.

MODES	OUTPUT (Lumens)	RUN TIME (Hours)	BEAM DISTANCE (Meters/Yards)
SPOT HIGH	250	3h 30m	106 / 115
SPOT LOW	30	24h	42 / 45
FLOOD HIGH	80	9h	13 / 14
FLOOD LOW	7	34h	2 / 2
RED HIGH	-	10h 30m	-
RED LOW	-	40h	-
RED STROBE	-	42h	-

\*LOW MODES ARE SELECTED VIA THE VARIABLE DIMMING FUNCTION.

### WATER-RESISTANT

IPX4 Splash-proof



### PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at 800-255-6061 or [NEBOLIGHTS.com](http://NEBOLIGHTS.com)

For more information, detailed video instructions, and warranty registration, visit [NEBOLIGHTS.com](http://NEBOLIGHTS.com)