


HOW DO I INSTALL SLIME RESCUE™ SEALANT?



Unwrap hose from sealant bottle and screw onto tire valve stem.

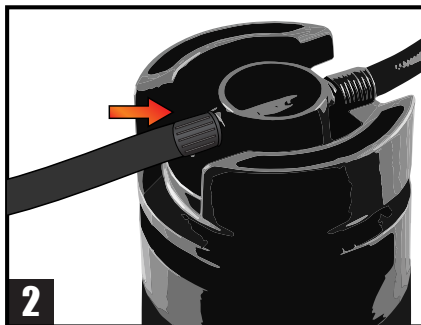

Remove the cap from the valve on the bottle and connect to air source.



Turn on inflator. The inflator will inject sealant and air into tire. Allow tire to fully inflate.



Disconnect inflator and bottle from tire. Drive for 2.0mi (3.2km) and stop to verify that puncture has been sealed.