

INK PEN REFILL

Compatible with standard D1 ink pen refills.

1. Twist the lower grip section of the pen counterclockwise to access the ink compartment.
2. Remove the empty ink cartridge and replace with a new refill.
3. Replace the lower grip section by twisting in a clockwise rotation.



PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or [NEBOLIGHTS.com](https://www.nebolights.com)

For more information, detailed video instructions, and warranty registration, visit [NEBOLIGHTS.com](https://www.nebolights.com)

* 1 year warranty for the Nebo flashlight only.
90 day warranty for wallet, pen and bottle opener.

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copy writing and the selection and arrangement ("Materials") thereof are ALL RIGHTS RESERVED
Copyright © 2024 Alliance Sports Group, L.P.

Alliance Consumer Group
700 Henrietta Creek Road
Roanoke, TX 76262
800.255.6061

Made in China

NEBO[®]

CLASSIC COLLECTION

USER MANUAL

THE CLASSIC™ FLASHLIGHT

CHARGING

Twist the head of the flashlight to expose the charging port. Plug the USB-A end of the charger into a power source and plug the USB-C end into the flashlight.

CHARGING STATUS

The small light near the power switch acts as a charge indicator.

- **Solid Red:** Charging
- **Solid Green:** Charged completely

POWER INDICATOR

When in use, the small light near the power switch acts as a power indicator.


- **Solid Red:** Less than 25%
- **Solid Green:** More than 25%

OPERATION

Slide the power button forward repeatedly to cycle through light modes:
OFF > HIGH > MEDIUM > LOW

After 8 seconds of no slider activity, the next activation will turn the light off.

MODES	OUTPUT (Lumens)	RUNTIME (Hours)	DISTANCE (Meters/Yards)
HIGH	600	3	47 / 51
MEDIUM	300	6	33 / 36
LOW	70	12	16 / 17

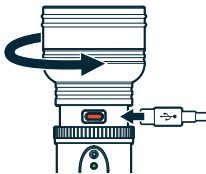

4-IN-1 PEN & PENCIL

OPERATION

1. Hold the pen in a horizontal orientation to allow for gravity-fed operation.
2. Rotate so the preferred color or pencil indicator is facing upwards.
3. Depress the select clicker to extend and use the chosen selection.
4. Press the retract button to deselect.
5. Pull on the select clicker to remove the cap and access the eraser.

Select



Retract



LEAD PENCIL REFILL

Compatible with 0.5mm lead pencil refills.

1. With the 0.5 pencil indicator selected, press and hold the select clicker.
2. Fully insert the lead refill from the bottom.
3. Release the select clicker to retain the lead refill.



0.5mm Lead