


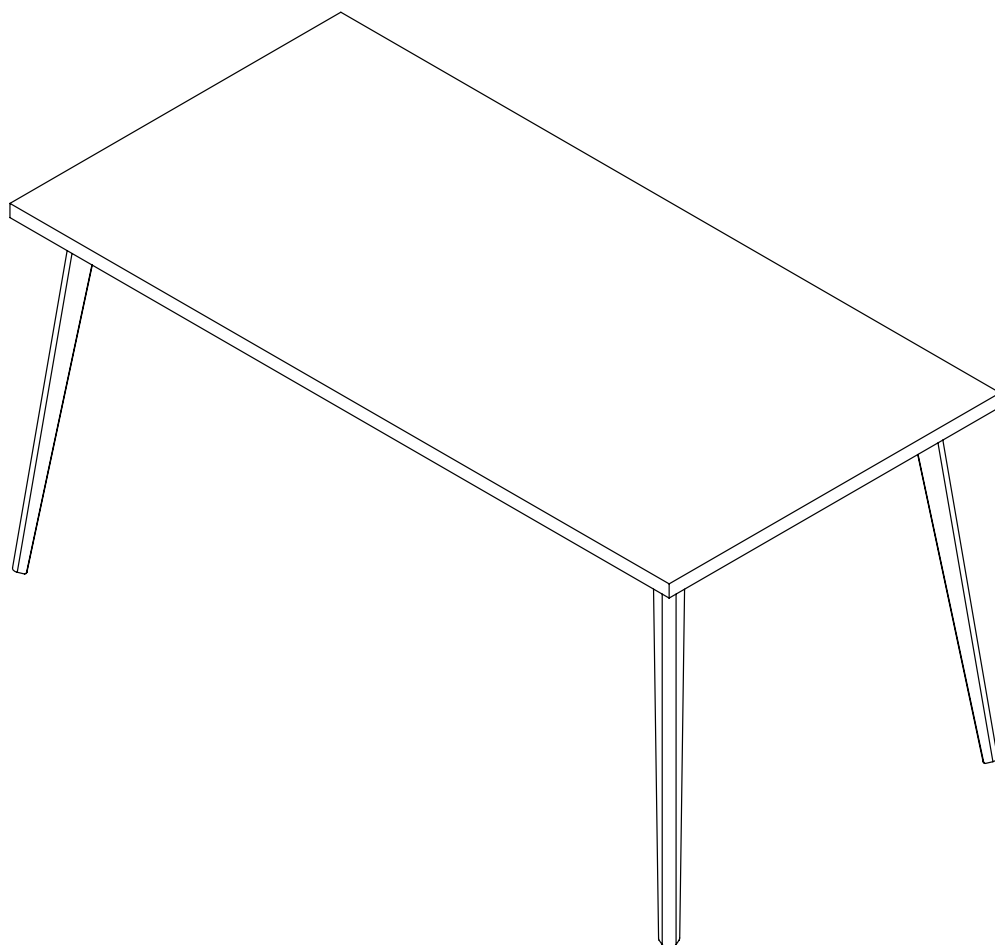

## R-Style™ Tango Assembly Instructions


Warranty: [raproducts.com/warranty](http://raproducts.com/warranty)



## Tools Required for Assembly

---

- A. Power Driver with Adjustable Torque
- B. #2 Square Head Drive Bit
- C. Level

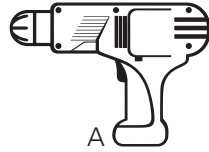

## Hardware and Tools Included for Assembly (may have extra)

---



- D. 5/8" Round Washer Head Wood Screw *x40*  
*\*Desks 48" or smaller only receive 28 screws*



## Tango Parts

---

- E. Post Leg *x4*
- F. U-Channel *x2*  
*\*Desks 48" or smaller will NOT include U-Channel*

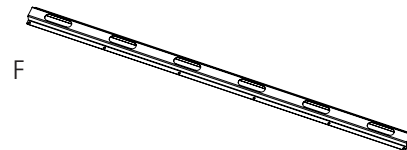
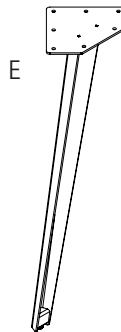


## Step 1

- Lay worksurface on a protected surface with the pilot holes facing up.



**\*The following does NOT apply to desks sized 48" or smaller.**

- Align U-Channel (F) with the pre-drilled pilot holes along the center of the worksurface.
- Attach U-Channel to the worksurface with 5/8" round washer head wood screws (D).
- **Do NOT fully tighten** until all screws are installed.

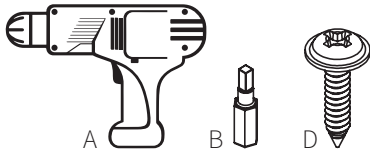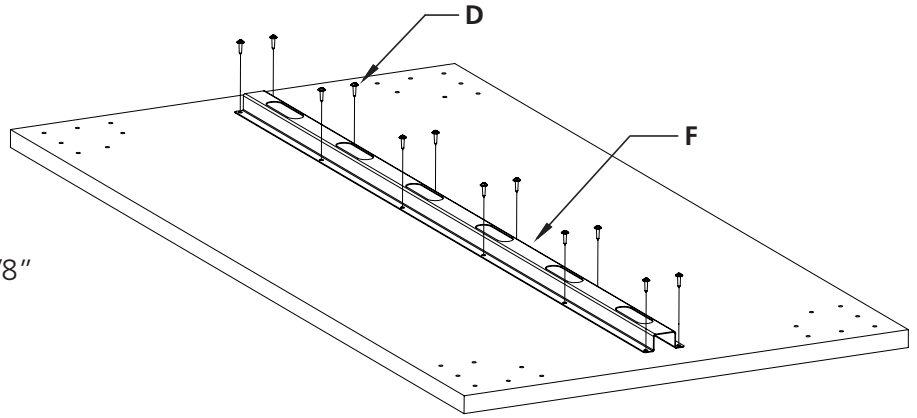

## Step 2

- Align one of the post legs (E) with the predrilled pilot holes.
- Attach the leg to the worksurface with 5/8" round washer head wood screws (D).
- **Do NOT fully tighten** until all screws are installed.
- Repeat to attach remaining 3 legs.

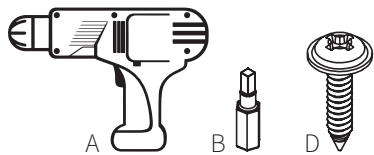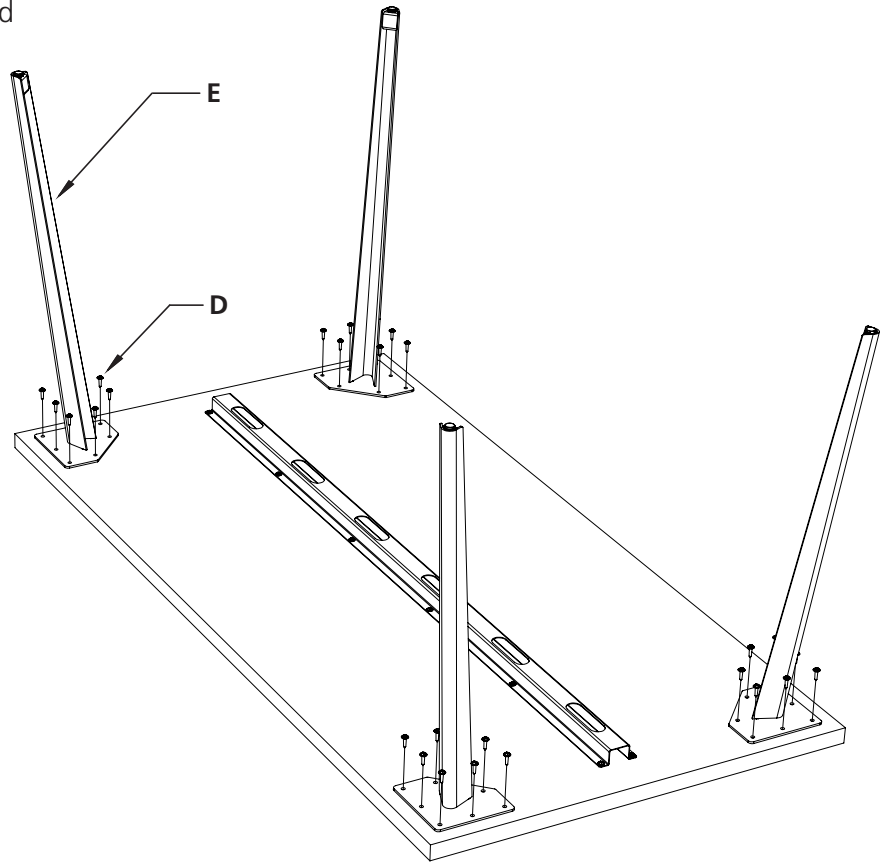

### Step 3

- Carefully flip the table over to stand it rightside up.
- Place the level (C) on the worksurface.
- Level the table by turning the levelers (located at the bottom of the table legs) clockwise or counter-clockwise. Reference your level (C) to identify when the table is properly leveled.
- Reference your level (C) to identify when the table is properly leveled.

