



SSN24

Universal 24 VAC Silicon Nitride (Si^3N^4) Igniter & Flame Rod Assembly Kit



Igniter Flame Rod Assembly Warning


Fire or Explosion Hazard. Disconnect power supply before removing any connector. Turn off gas supply at appliance service valve before starting igniter-flame rod assembly removal. Have a qualified service technician replace the igniter assembly. **Failure to do so can result in property damage, personal injury and/or death.**

Sealed Unit Parts Co., Inc.
PO Box 21, 2230 Landmark Place
Allenwood, NJ 08720 USA
www.supco.com

Installation Instructions

1. Read these instructions carefully.
2. Turn off power at circuit breaker or fuse box.
Turn off gas supply at appliance service valve.
3. Hold bottom of the assembly with one hand and with the other hand remove the spring clip by pulling it away from the pilot burner (Fig. 1)
4. Remove assembly from the pilot burner.
5. Disconnect the wire leads from the ignition system control module.
6. Discard old assembly.
7. Make sure the assembly is oriented in the proper direction for installation in the pilot burner.
8. Insert assembly into the pilot burner until assembly is flush with pilot burner bracket. Secure with new spring clip.
9. Connect the igniter-flame rod assembly keyed plug to igniter connector on the ignition system control.
10. Turn on power and gas supply.

Fig. 1

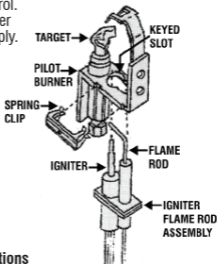

Lighting Instructions

1. Set thermostat to call for heat.
2. Watch the pilot burner during ignition sequence. See if:
 - a. Igniter glows and pilot lights.
 - b. Igniter ceases to glow red after the pilot is lit.
 - c. Main burner lights.
3. If ignition sequence is not as described above, verify installation instructions and troubleshoot the assembly.