


Removing Posts & Stakes

1. Make sure all nails, screws, wire and fittings are removed from stakes or posts before using the PostJak.
2. Lift the handle of the PostJaK until the jaws are fully open.
3. Position the PostJak so that the stake/post is located both in the top groove (Image 1) and in the lower groove (Image 2), between the jaws.
4. Push down on the handle, the jaws will lock onto the stake/post and begin to lift it out of the ground.
5. Repeat this action as necessary until the stake/post is fully removed.

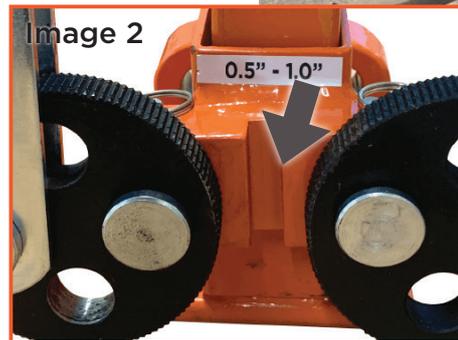

Swapping PostJak yoke to suit Stakes or Posts

The unique yoke design allows the PostJak be used to remove both posts and stakes up to 1" wide with the Standard yoke supplied. This can be done by rotating the yoke (additional yoke sizes are available to match your needs). **To rotate the yoke:**

1. Remove the quick release pins on top of the yoke, behind the jaws - see Image 3.
2. Remove the large silver pins that mount the jaws to the yoke - see Image 3.
3. With the yoke now free, the top pivot pin can now be removed - see Image 4
4. Slide the yoke up and off the main shaft and turn it 180° - Stakes or Posts.
5. Remember to replace the top pivot pin.
6. Insert the silver pins that mount through the jaws and lock into place with the quick release pins.
7. The PostJak is now ready for use.



Extracts posts and stakes with ease

Distributed by Titan Post Drivers, Blairsville, PA

www.titanpostdrivers.com