


NEBO[®]

ASSIST™ JUMP STARTER

LOOKING FOR THE ASSIST 800?
[CLICK HERE](#)




CONTROLS AND INDICATORS

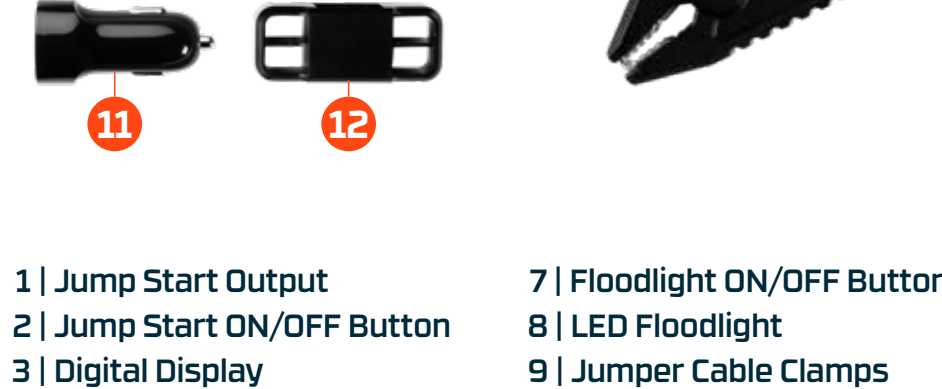


- 1 | Jump Start Output
- 2 | Jump Start ON/OFF Button
- 3 | Digital Display
- 4 | USB ON/OFF Button
- 5 | USB-A Output
- 6 | USB-C Bi-Directional Port
- 7 | Floodlight ON/OFF Button
- 8 | LED Floodlight
- 9 | Jumper Cable Clamps
- 10 | USB-A to USB-C Cable
- 11 | 12V Car Charger
- 12 | Clamp Organizer

DIGITAL DISPLAY REFERENCE GUIDE

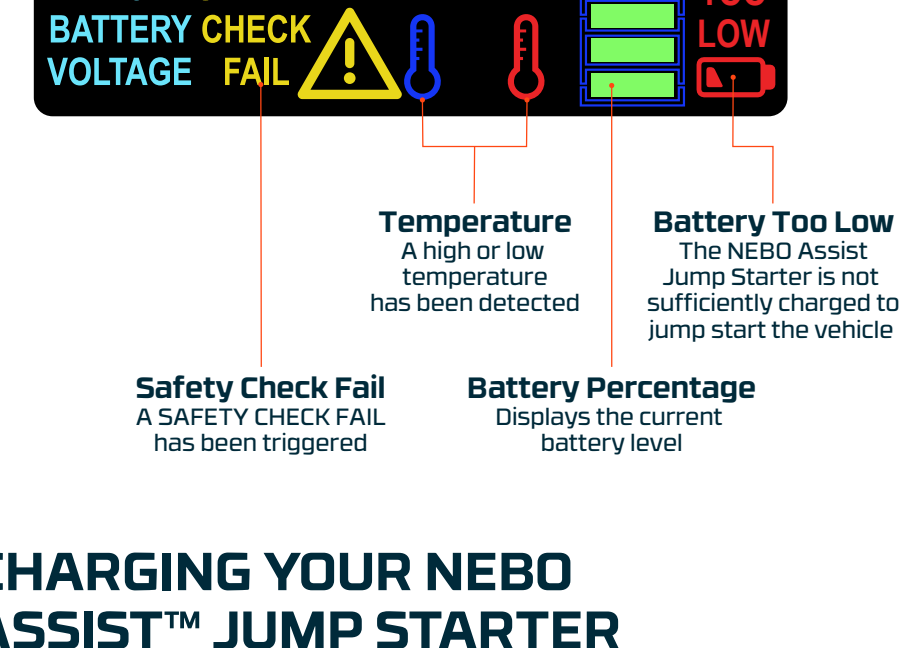


CHARGING YOUR NEBO ASSIST™ JUMP STARTER

- CHARGING IN YOUR VEHICLE:**
1. Connect the Assist™ Jump Starter to the 12V DC output socket (cigarette lighter) in your vehicle, using the supplied USB Cable and 12V Car Charger. (Fig. 1)
 2. USB-C bi-directional port will begin charging automatically when a device is detected.
 3. The LCD screen will display 100% when fully charged. (This could take up to 4 hours).

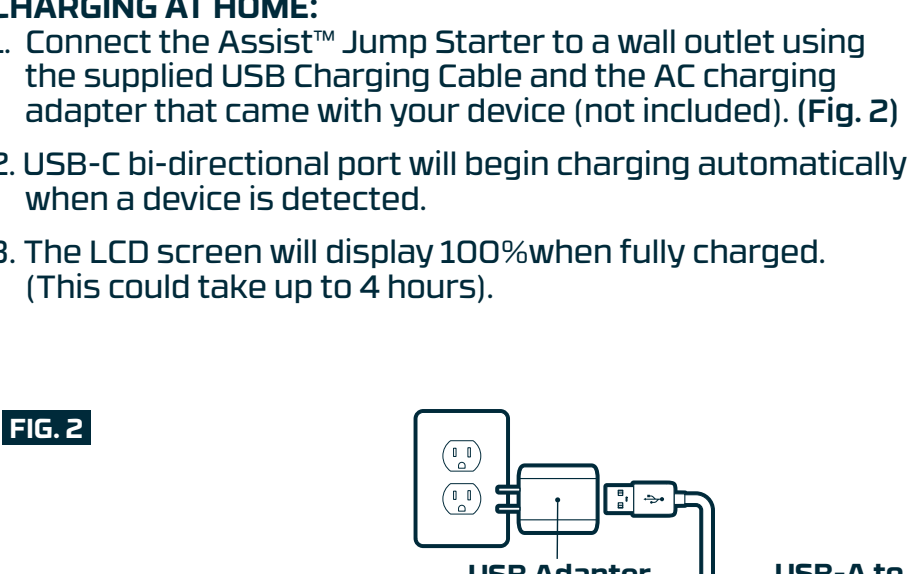

- CHARGING AT HOME:**
1. Connect the Assist™ Jump Starter to a wall outlet using the supplied USB Charging Cable and the AC charging adapter that came with your device (not included). (Fig. 2)
 2. USB-C bi-directional port will begin charging automatically when a device is detected.
 3. The LCD screen will display 100% when fully charged. (This could take up to 4 hours).

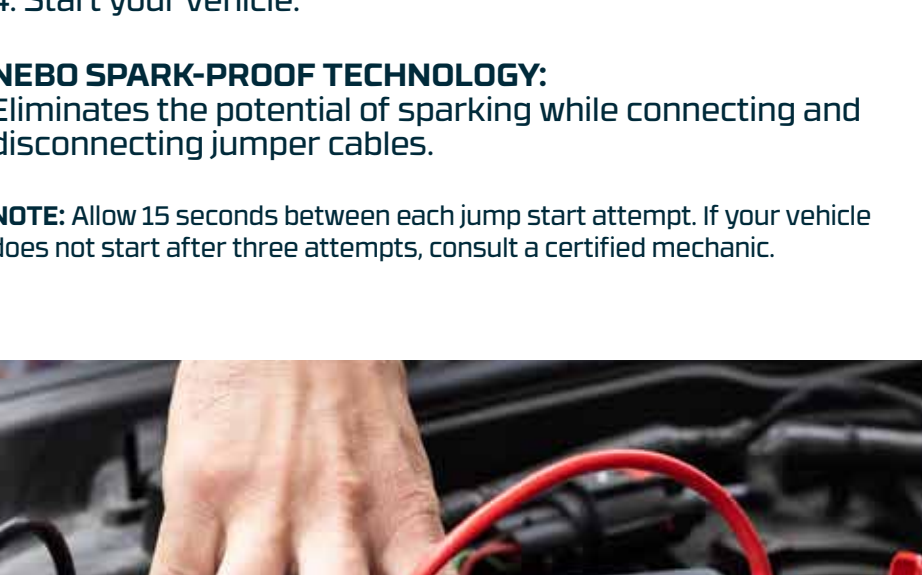


JUMP STARTING YOUR VEHICLE

1. Plug the jumper cables into the jump start output.
2. Attach the jumper cable clamps to the vehicle battery.
 - Red clamp on positive terminal (+)
 - Black clamp on negative terminal (-)
3. Press the "Jump Start" button and wait for a solid green light.
4. Start your vehicle.

NEBO SPARK-PROOF TECHNOLOGY:
Eliminates the potential of sparking while connecting and disconnecting jumper cables.

NOTE: Allow 15 seconds between each jump start attempt. If your vehicle does not start after three attempts, consult a certified mechanic.

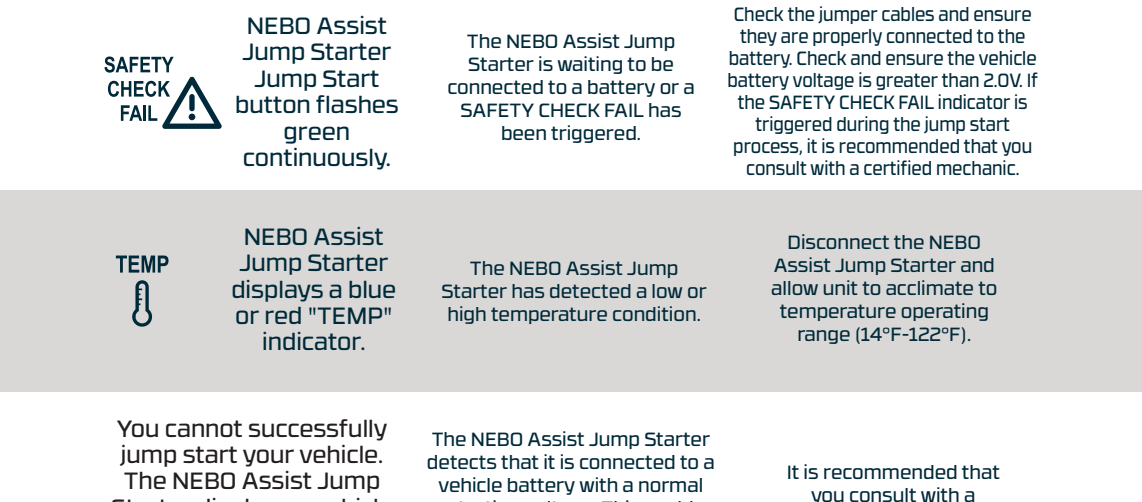

JUMP START TROUBLESHOOTING


CONDITION	POTENTIAL CAUSE	SOLUTION
NEBO Assist Jump Starter button has been pressed but nothing happens.	The USB ON/OFF Button has been pressed.	The jump start output can not be used in conjunction with the USB output mode. Ensure that the USB mode is off.
BATT TOO LOW	The NEBO Assist Jump Starter is not sufficiently charged to jump start the vehicle.	Recharge the NEBO Assist Jump Starter and verify at least 50% charged. Then try the jump start process again.
SAFETY CHECK FAIL	The jumper cables have not been properly connected to the vehicle battery.	Check the jumper cables and ensure that the red clamp is connected to the positive terminal (+) and the black clamp is connected to the negative terminal (-).
SAFETY CHECK FAIL	The NEBO Assist Jump Starter is waiting to be connected to a battery or a SAFETY CHECK FAIL has been triggered.	Check the jumper cables and ensure they are properly connected to the battery. Check and ensure the vehicle battery voltage is greater than 2.0V. If the SAFETY CHECK FAIL indicator is triggered during the jump start process, it is recommended that you consult with a certified mechanic.
TEMP	The NEBO Assist Jump Starter has detected a low or high temperature condition.	Disconnect the NEBO Assist Jump Starter and allow unit to acclimate to temperature operating range (14°F-122°F).
You cannot successfully jump start your vehicle. The NEBO Assist Jump Starter displays a vehicle battery voltage greater than 12.0V.	The NEBO Assist Jump Starter detects that it is connected to a vehicle battery with a normal starting voltage. This could indicate that another vehicle component is faulty.	It is recommended that you consult with a certified mechanic.
NEBO Assist Jump Starter and ON/OFF button flashes red and blue.	This could occur when attempting to jump start a vehicle while other electrical components (i.e. headlights, heater, radio, etc.) are on.	Turn off your headlights and any other components that may drain your car battery and try the jump start process again.
	The vehicle battery may be faulty.	It is recommended that you consult with a certified mechanic.

CHARGING YOUR ELECTRONIC DEVICES

- CHARGING USING USB-A OUTPUT PORTS:**
1. Plug the USB-A to USB-C cable into the USB-A output port, located on the front of your NEBO Assist Jump Starter.
 2. Turn on the USB ON/OFF Button to begin charging your device.
 3. Disconnect the USB cable and press the USB ON/OFF button.

- CHARGING USING USB-C BI-DIRECTIONAL PORT:**
1. Plug the USB-C to USB-C cable that came with your device (not included) into the USB-C bi-directional port, located on the back of your NEBO Assist Jump Starter.
 2. USB-C bi-directional port will begin to charge automatically when a device is detected.
 3. Disconnect the USB-C cable and press the USB ON/OFF button. The NEBO Assist Jump Starter's charging USB charging feature will automatically power off after 30 minutes of inactivity.


NOTE: The USB-C bi-directional port supports 20W PD/QC 3.0.

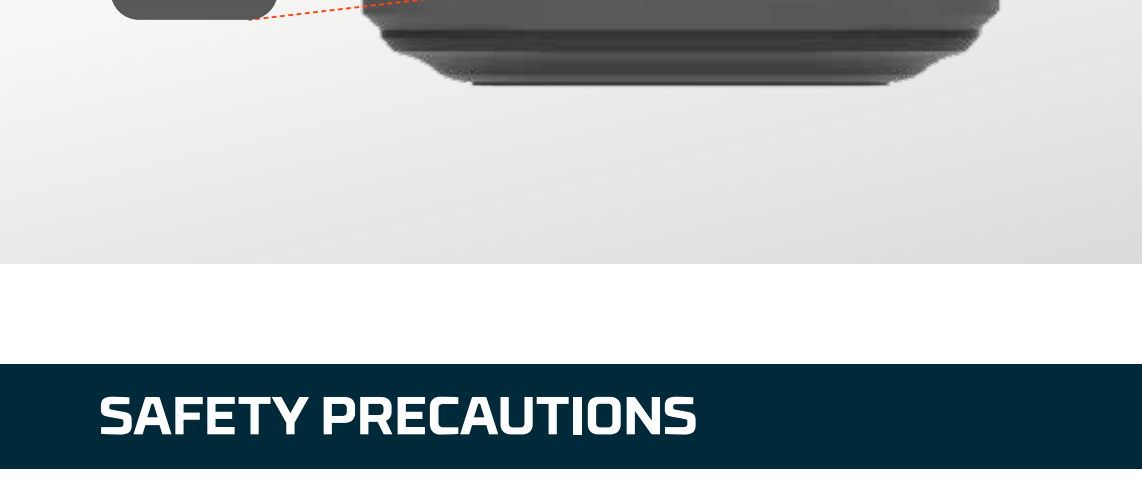

USING THE FLOODLIGHT

1. Floodlight ON/OFF Button **once** = ON White Floodlight
2. Floodlight ON/OFF Button **twice** = ON Red Floodlight
3. Floodlight ON/OFF Button **three** times = ON Emergency Red S.O.S.
4. Floodlight ON/OFF Button **four** times = OFF. The floodlight will automatically turn off after 2 hours of inactivity.

NOTE: Do not look directly into the LED floodlight.

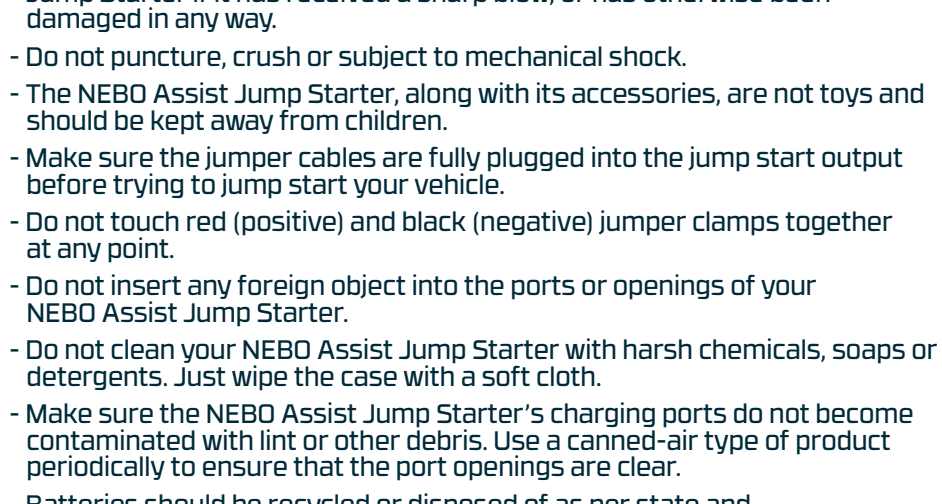

SAFETY PRECAUTIONS

- Read all instructions before using the product.
- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your NEBO Assist Jump Starter may cause electric shock to users and damage equipment.
- Keep your NEBO Assist Jump Starter dry and away from moisture and corrosive materials. The NEBO Assist Jump Starter should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your NEBO Assist Jump Starter to moisture, water, rain, or snow.
- Keep your NEBO Assist Jump Starter away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your NEBO Assist Jump Starter may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the NEBO Assist Jump Starter during operation.
- Do not disassemble your NEBO Assist Jump Starter. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your NEBO Assist Jump Starter if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- The NEBO Assist Jump Starter, along with its accessories, are not toys and should be kept away from children.
- Make sure the jumper cables are fully plugged into the jump start output before trying to jump start your vehicle.
- Do not touch red (positive) and black (negative) jumper clamps together at any point.
- Do not insert any foreign object into the ports or openings of your NEBO Assist Jump Starter.
- Do not clean your NEBO Assist Jump Starter with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Make sure the NEBO Assist Jump Starter's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.

PRODUCT GUARANTEE

If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or **NEBOpower.com**.

For more information, detailed video instructions, and warranty registration, visit **NEBOpower.com**.