









HOW TO USE

Remove battery tab from back of tire gauge before first use.

1. Push the center  button to turn on your gauge. When the screen reads 0.0, it is ready to measure pressure in psi units. Continue pushing the button to measure pressure in BAR or kPa.
2. Press the tire gauge head firmly onto the tire valve stem until the tire gauge beeps and a reading appears on your display.
3. Press and hold the center  button for 1 second to turn on the light. The light will automatically turn off after 30 seconds.
4. To use the programmable pressure feature, press and hold either the left  or right  button until the background disappears and TARGET blinks. Then click the  or  to set the gauge to your specific tire pressure goal.

NOTE: You may continue to use the gauge even though the previous reading is still displayed by following the instructions above. The tire gauge will automatically turn off within two minutes if not in use. This unit has replaceable batteries. Please visit Slime.com for the battery replacement guide. For the most accurate reading, check your air pressure when tires are cold.