 


NEBO®

RAMBLER® 100 POWER STATION

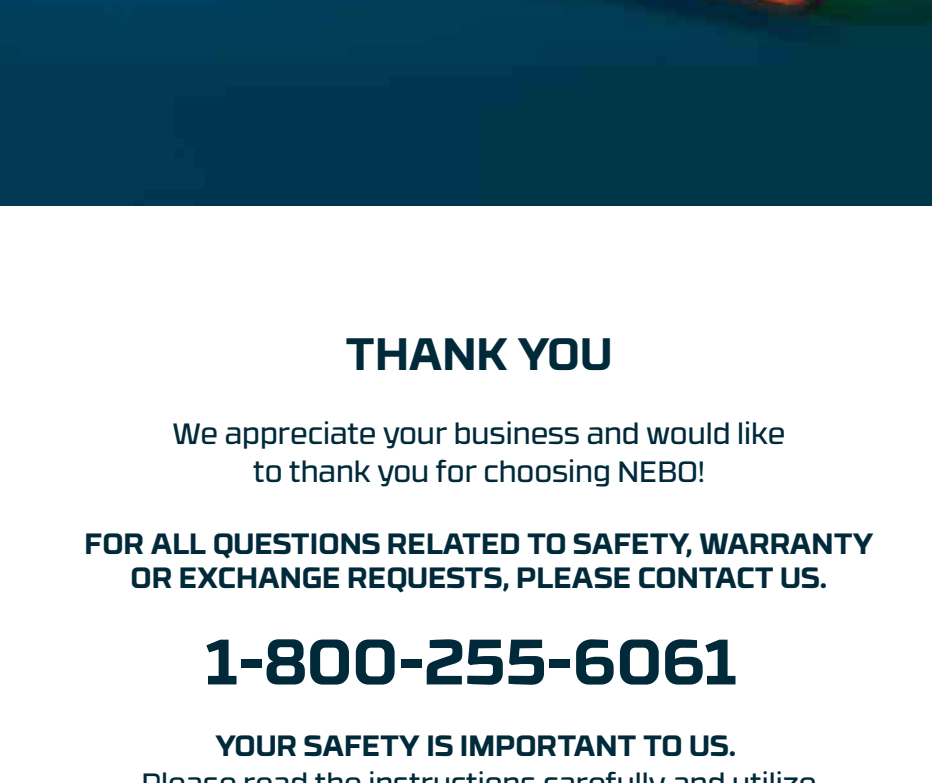

THANK YOU

We appreciate your business and would like to thank you for choosing NEBO!

FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY OR EXCHANGE REQUESTS, PLEASE CONTACT US.

1-800-255-6061


YOUR SAFETY IS IMPORTANT TO US.

Please read the instructions carefully and utilize the proper precautions before operating this equipment. Save instructions for future reference.

SAFETY PRECAUTIONS


- Read all instructions before using the product.
- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your NEBO RAMBLER 100 may cause electric shock to users and damage equipment.
- Keep your NEBO RAMBLER 100 dry and away from moisture and corrosive materials. The NEBO RAMBLER 100 should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your NEBO RAMBLER 100 to moisture, water, rain, or snow.
- Keep your NEBO RAMBLER 100 away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your NEBO RAMBLER 100 may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the NEBO RAMBLER 100 during operation.
- Do not disassemble your NEBO RAMBLER 100. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your NEBO RAMBLER 100 if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- The NEBO RAMBLER 100, along with its accessories, are not toys and should be kept away from children.
- Do not insert any foreign object into the ports or openings of your NEBO RAMBLER 100.
- Do not clean your NEBO RAMBLER 100 with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Make sure the NEBO RAMBLER 100's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.

CONTROLS AND INDICATORS

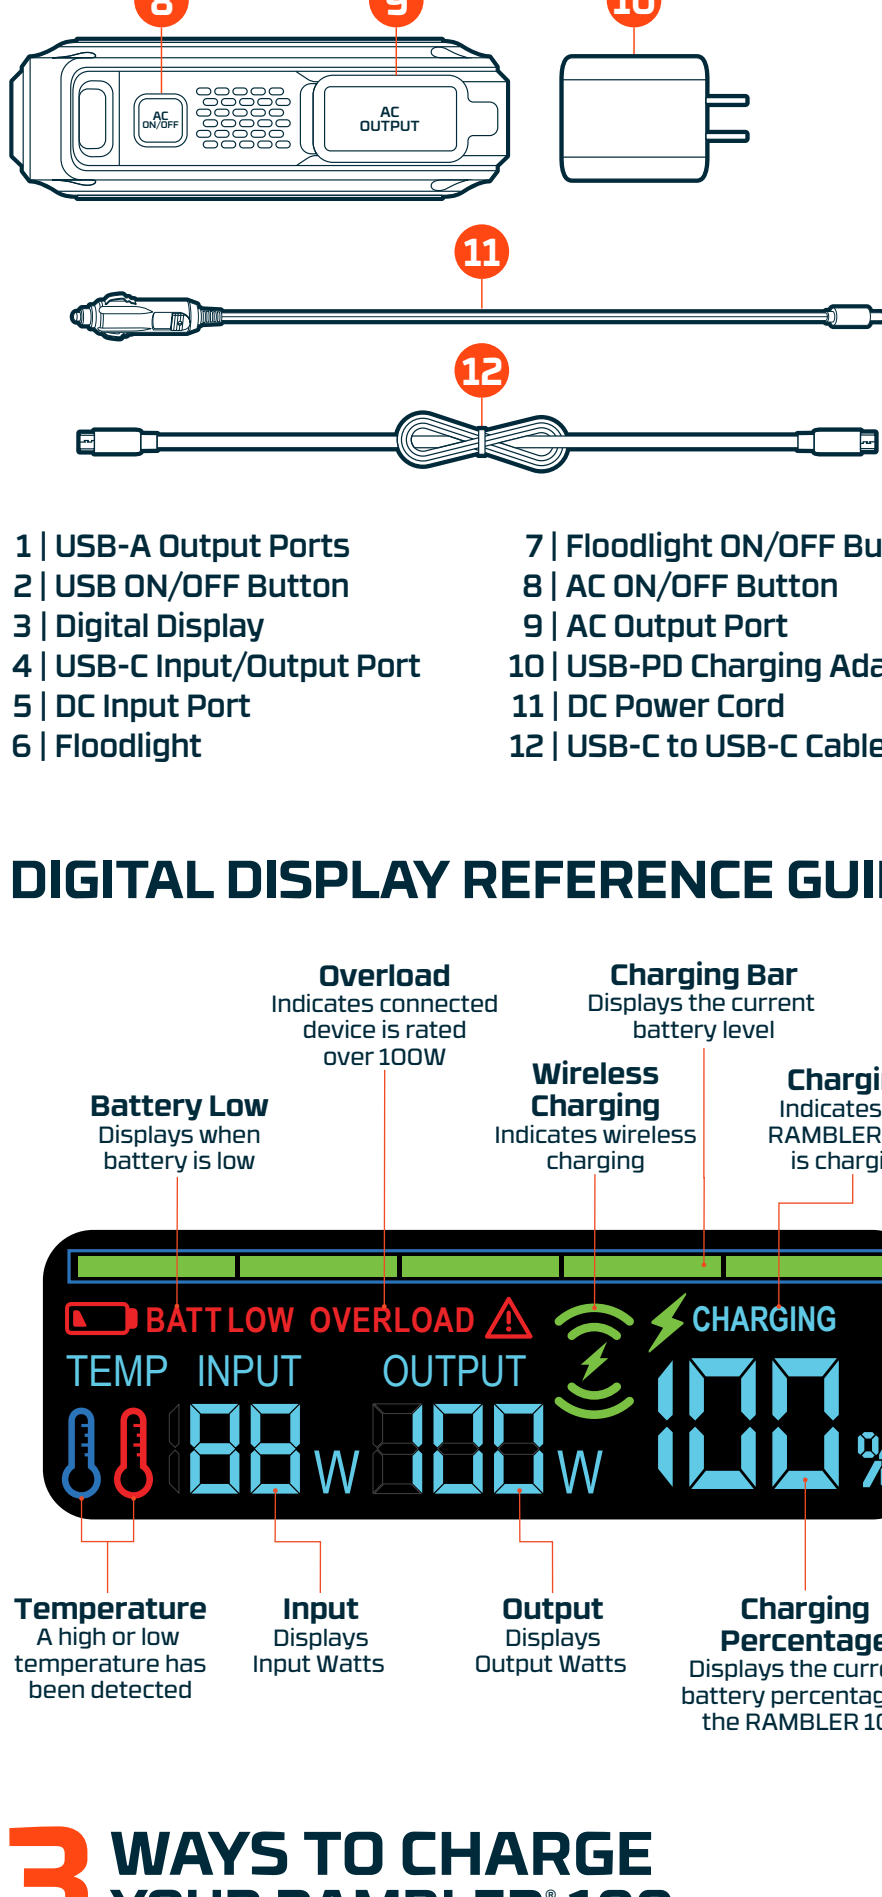

- 1 | USB-A Output Ports
- 2 | USB ON/OFF Button
- 3 | Digital Display
- 4 | USB-C Input/Output Port
- 5 | DC Input Port
- 6 | Floodlight
- 7 | Floodlight ON/OFF Button
- 8 | AC ON/OFF Button
- 9 | AC Output Port
- 10 | USB-PD Charging Adapter
- 11 | DC Power Cord
- 12 | USB-C to USB-C Cable

DIGITAL DISPLAY REFERENCE GUIDE

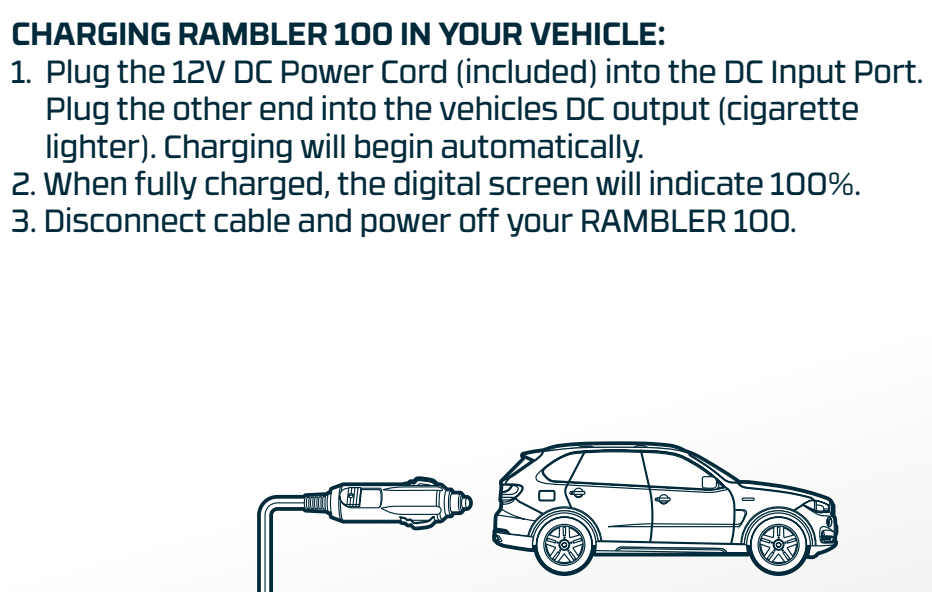


- Battery Low** Displays when battery is low
- Overload** Indicates connected device is rated over 100W
- Charging Bar** Displays the current battery level
- Wireless Charging** Indicates wireless charging
- Charging** Indicates the RAMBLER 100 is charging
- Temperature** A high or low temperature has been detected
- Input** Displays Input Watts
- Output** Displays Output Watts
- Charging Percentage** Displays the current battery percentage of the RAMBLER 100

3 WAYS TO CHARGE YOUR RAMBLER 100


CHARGING YOUR RAMBLER 100 AT HOME:

1. Connect the USB-C Cable to the USB-PD Charging Adapter (included). Plug the other end into the USB-C Charging Port. Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%. (Full charge could take up to 2.5 hours.)
3. Disconnect cable and power off your RAMBLER 100.

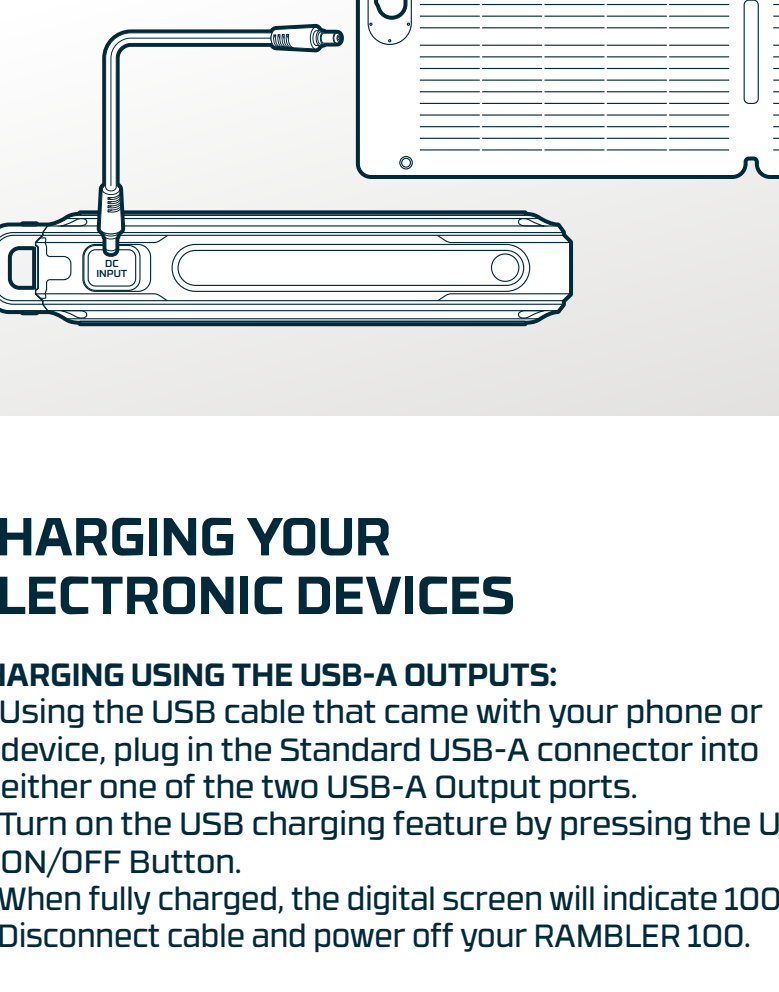

CHARGING RAMBLER 100 IN YOUR VEHICLE:


1. Plug the 12V DC Power Cord (included) into the DC Input Port. Plug the other end into the vehicle's DC output (cigarette lighter). Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%.
3. Disconnect cable and power off your RAMBLER 100.

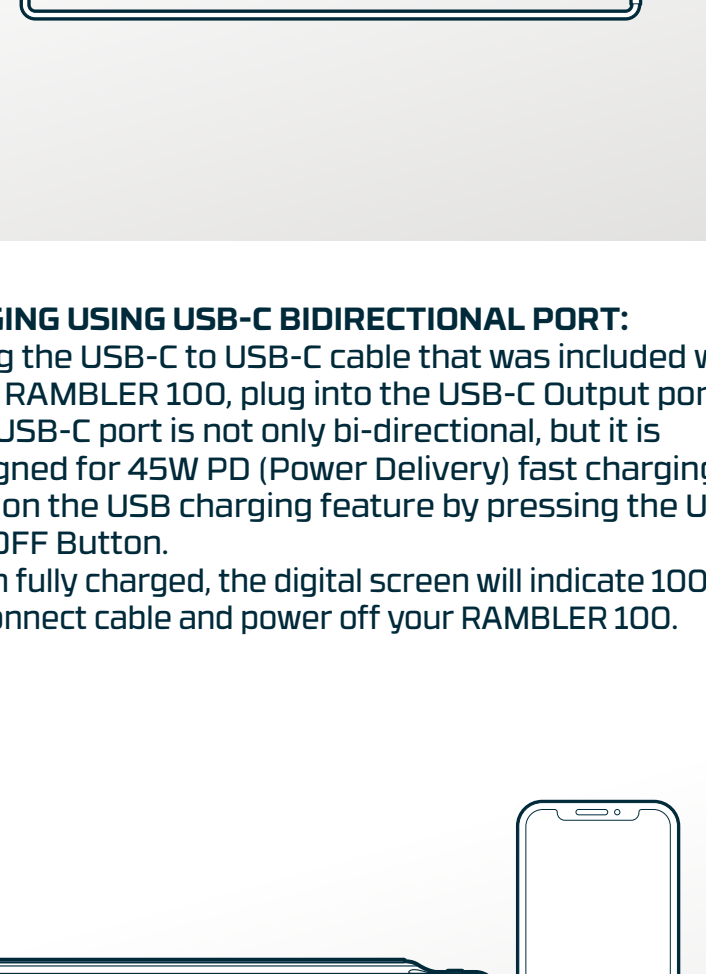

CHARGING WITH A SOLAR PANEL (Sold Separately):

1. Connect the DC5525 cable that came with your solar panel to the DC Input port. Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%.
3. Disconnect cable and power off your RAMBLER 100.

 
NOTE: Charging speed will vary based on a number of factors including weather, obstructions and solar panel angle and positioning.

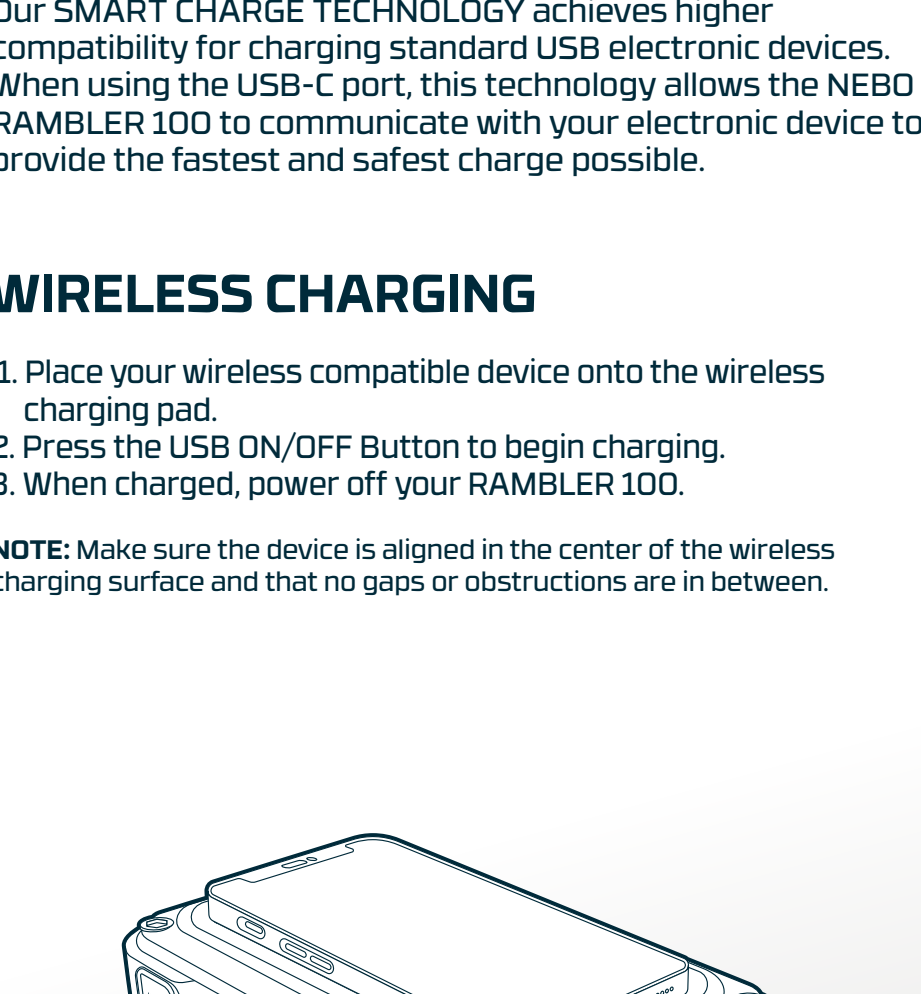

CHARGING YOUR ELECTRONIC DEVICES


CHARGING USING THE USB-A OUTPUTS:

 1. Using the USB cable that came with your phone or device, plug in the Standard USB-A connector into either one of the two USB-A Output ports.
2. Turn on the USB charging feature by pressing the USB ON/OFF Button.
3. When fully charged, the digital screen will indicate 100%.
4. Disconnect cable and power off your RAMBLER 100.

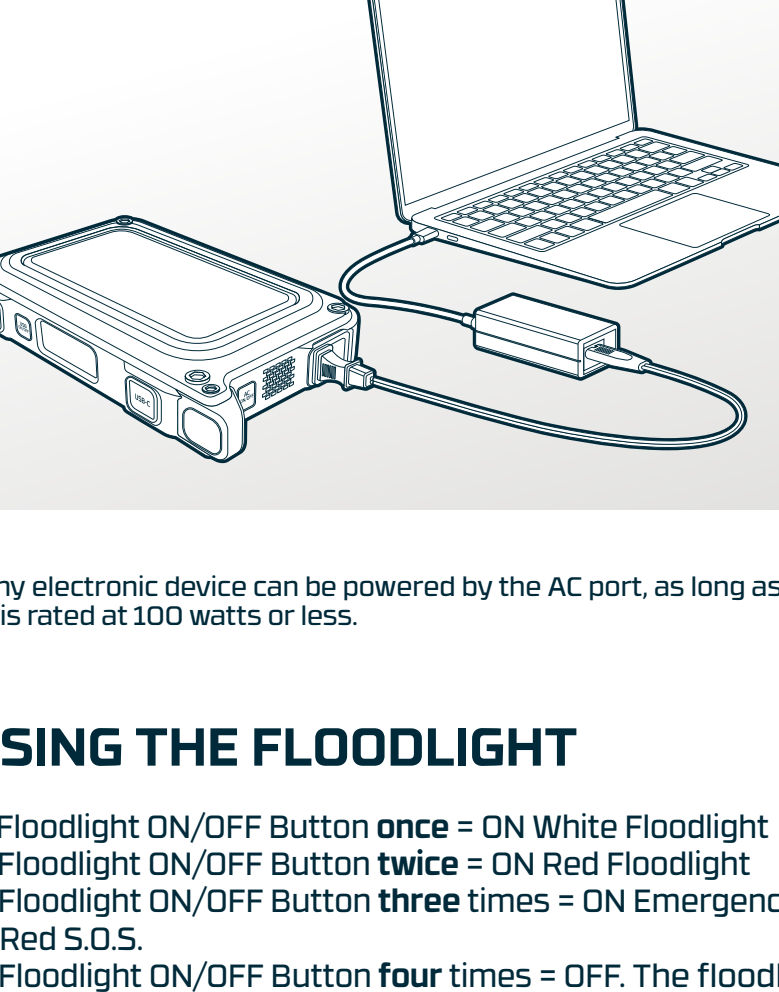

CHARGING USING USB-C BIDIRECTIONAL PORT:

1. Using the USB-C to USB-C cable that was included with your RAMBLER 100, plug into the USB-C Output port. The USB-C port is not only bi-directional, but it is designed for 45W PD (Power Delivery) fast charging.
2. Turn on the USB charging feature by pressing the USB ON/OFF Button.
3. When fully charged, the digital screen will indicate 100%.
4. Disconnect cable and power off your RAMBLER 100.

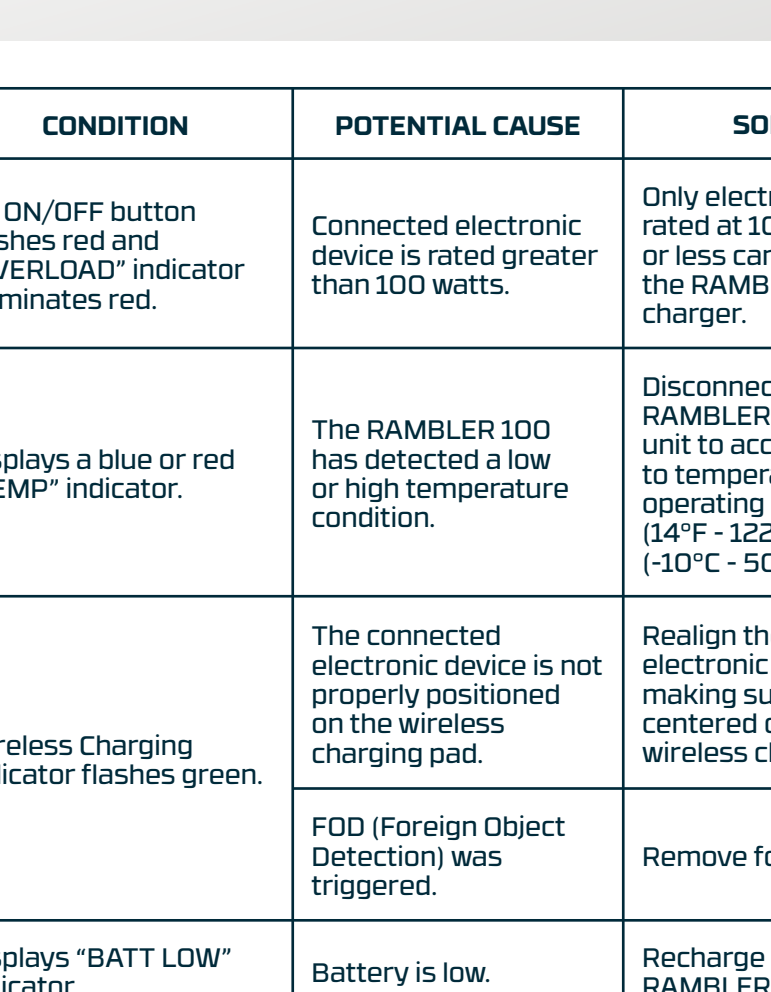

NOTE: The NEBO RAMBLER 100 USB charging feature will automatically power off after 30 minutes of inactivity.

NEBO SMART CHARGE TECHNOLOGY

Our SMART CHARGE TECHNOLOGY achieves higher compatibility for charging standard USB electronic devices. When using the USB-C port, this technology allows the NEBO RAMBLER 100 to communicate with your electronic device to provide the fastest and safest charge possible.

WIRELESS CHARGING

1. Place your wireless compatible device onto the wireless charging pad.
2. Press the USB ON/OFF Button to begin charging.
3. When charged, power off your RAMBLER 100.

NOTE: Make sure the device is aligned in the center of the wireless charging surface and that no gaps or obstructions are in between.

CHARGING YOUR LAPTOP

1. Connect the AC power plug from your laptop (or other electronic device*) into the AC port, as shown below.
2. Press the AC ON/OFF Power Button to begin charging.
3. When charged, disconnect cable and power off your RAMBLER 100.

NOTE: Make sure the AC power plug is fully plugged into the AC port before pressing the AC Power ON/OFF Button.

*Any electronic device can be powered by the AC port, as long as it is rated at 100 watts or less.

USING THE FLOODLIGHT

1. Floodlight ON/OFF Button **once** = ON White Floodlight
2. Floodlight ON/OFF Button **twice** = ON Red Floodlight
3. Floodlight ON/OFF Button **three** times = ON Emergency Red S.O.S.
4. Floodlight ON/OFF Button **four** times = OFF. The floodlight will automatically turn off after 2 hours of inactivity.

NOTE: Do not look directly into the LED floodlight.

CONDITION	POTENTIAL CAUSE	SOLUTION
AC ON/OFF button flashes red and "OVERLOAD" indicator illuminates red.	Connected electronic device is rated greater than 100 watts.	Only electronic devices rated at 100 watts or less can be used with the RAMBLER 100 charger.
Displays a blue or red "TEMP" indicator.	The RAMBLER 100 has detected a low or high temperature condition.	Disconnect the RAMBLER 100 and allow unit to acclimate to temperature operating range (14°F - 122°F) (-10°C - 50°C).
Wireless Charging Indicator flashes green.	The connected electronic device is not properly positioned on the wireless charging pad.	Realign the connected electronic device making sure that it is centered on the wireless charging pad.
	FOD (Foreign Object Detection) was triggered.	Remove foreign object.
Displays "BATT LOW" indicator.	Battery is low.	Recharge the RAMBLER 100.

PRODUCT GUARANTEE

If you experience a problem, please do not return to your local store. Contact our Customer Service team at 800-255-6061 or www.NEBOpower.com

For more information, detailed video instructions, and warranty registration, visit NEBOpower.com.