


HOW TO INSTALL SLIME



1 Position valve in upper half of tire.

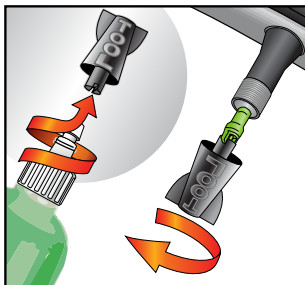

2 Slowly remove valve core with tool in cap.




3 Allow tire to fully deflate.




4 Remove object (if possible).




5 Attach hose and squeeze in Slime.

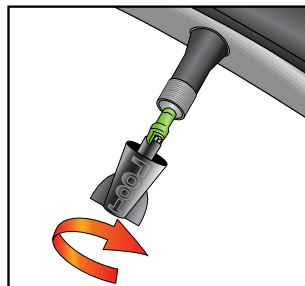

6 Reinstall valve core.

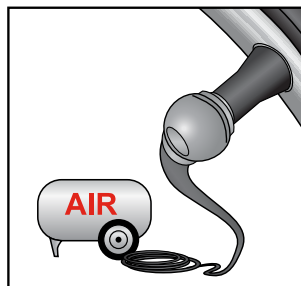

7 Just add air.

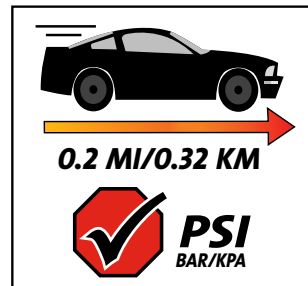

8 Drive. Stop. Verify seal and check pressure.