


NEBO

Just

Flipit400

Bright light right where you need it.

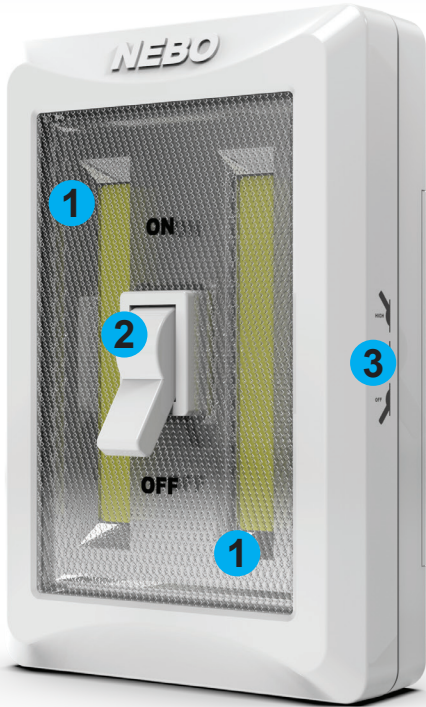

Front

- 1 C-O-B LEDs
- 2 ON/OFF Switch
- 3 Light Mode Directions

Back

- 1 Battery Compartments
- 2 Hook & Loop Double Sided Tape
- 3 Magnets
- 4 Drywall Screw Holes (screws not included)


BATTERIES

Flipit400 is powered by 3 AA batteries (included).

- To change batteries, slide battery compartment cover(s) off, as shown.
- Remove old batteries and dispose of properly.
- Insert new batteries with negative end facing the spring.
- Replace battery compartment covers.



TWO LIGHT MODES

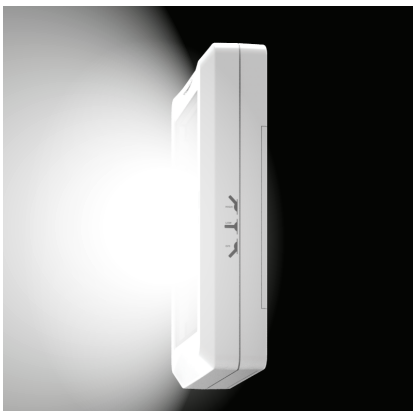

HIGH
400 LUMENS
5 Hours / 28 Meters



LOW
100 LUMENS
20 Hours / 16 Meters



LIGHT MODES
Marked on the side for proper usage