

Before operating or charging, open the battery compartment and remove the round battery spacer disc.



RECHARGEABLE

Use the included charging cable to recharge the unit. Power button will indicate battery level.

POWER INDICATOR

Steady Orange: Battery more than 25% Flashing Orange: Battery less than 25%

CHARGING INDICATOR

Steady Red: Battery charging Steady Green: Battery fully charged



OPERATION

Press & release power button to turn the unit off and on and cycle through light modes:

High > Low > Off

When light is ON for 8 seconds or longer, the next button press will turn the unit off. The next time the product is turned on it will return to the last mode used.

Strobe: Double-tap button **Turbo:** Press and hold power button

Smart Power Control[™] (SPC) seamlessly transitions through light modes.



PIVOTING HEAD

Twist the head to pivot 90°.





BATTERY

This unit is powered by a Li-lon battery.

PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or <u>www.nebolights.com/contact</u>

For more information, detailed video instructions, and warranty registration, visit **NEBOLIGHTS.com**