



# AIRLOCK DIGITAL GAUGE

## CHANGING THE GAUGE BATTERIES



**1**  
*Remove 4 screws from back of gauge body.*



**2**  
*Gently separate the 2 halves of the gauge body.*



**3**  
*Pull both gauge halves apart completely to expose batteries.*



**4**  
*Remove old batteries from gauge being careful not to break small battery contact wires.*



**5**  
*Insert 3 new L1154F batteries into gauge with positive side facing the top of the gauge. Gauge will turn on when inserted correctly.*



**6**  
*Rejoin gauge halves taking care not to pinch any wires. Reinsert and tighten 4 gauge body screws.*