 


# NEBO®

 
## RAMBLER™ 200 POWER STATION

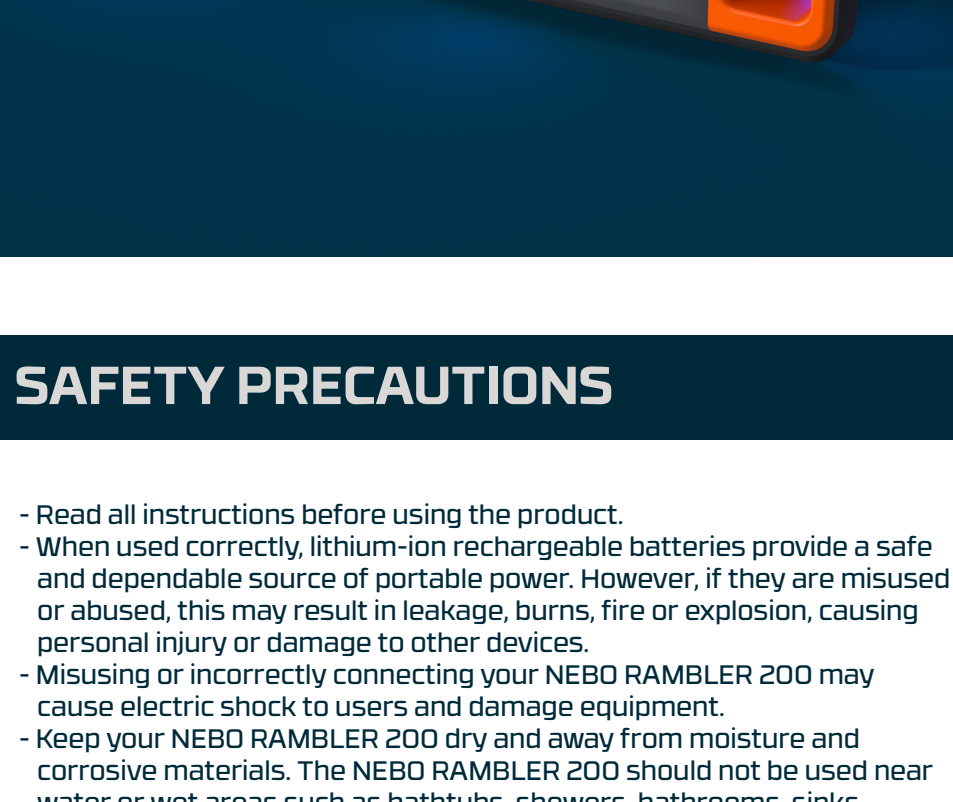

### SAFETY PRECAUTIONS


- Read all instructions before using the product.
- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your NEBO RAMBLER 200 may cause electric shock to users and damage equipment.
- Keep your NEBO RAMBLER 200 dry and away from moisture and corrosive materials. The NEBO RAMBLER 200 should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your NEBO RAMBLER 200 to moisture, water, rain, or snow.
- Keep your NEBO RAMBLER 200 away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your NEBO RAMBLER 200 may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the NEBO RAMBLER 200 during operation.
- Do not disassemble your NEBO RAMBLER 200. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your NEBO RAMBLER 200 if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- The NEBO RAMBLER 200, along with its accessories, are not toys and should be kept away from children.
- Do not insert any foreign object into the ports or openings of your NEBO RAMBLER 200.
- Do not clean your NEBO RAMBLER 200 with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- Make sure the NEBO RAMBLER 200's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.

### CONTROLS AND INDICATORS

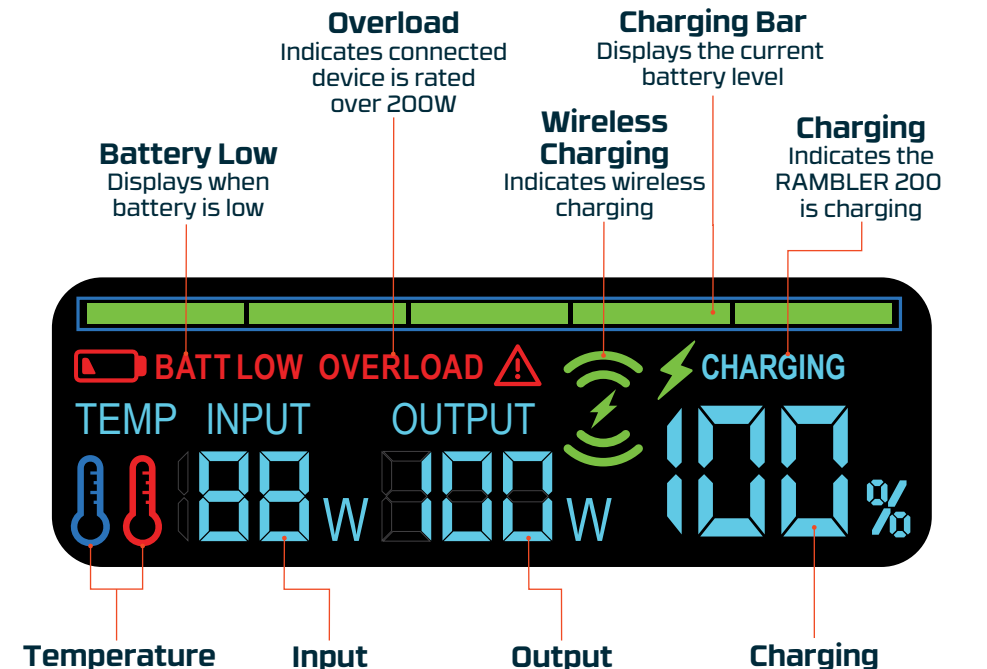

- 1 | DC Output Port
- 2 | DC ON/OFF Button
- 3 | Digital Display
- 4 | USB ON/OFF Button
- 5 | USB Output Ports
- 6 | DC Input Port
- 7 | LED Floodlight
- 8 | Floodlight ON/OFF Button
- 9 | AC ON/OFF Button
- 10 | AC Output Port
- 11 | DC Power Cord
- 12 | AC Charging Adapter


### DIGITAL DISPLAY REFERENCE GUIDE

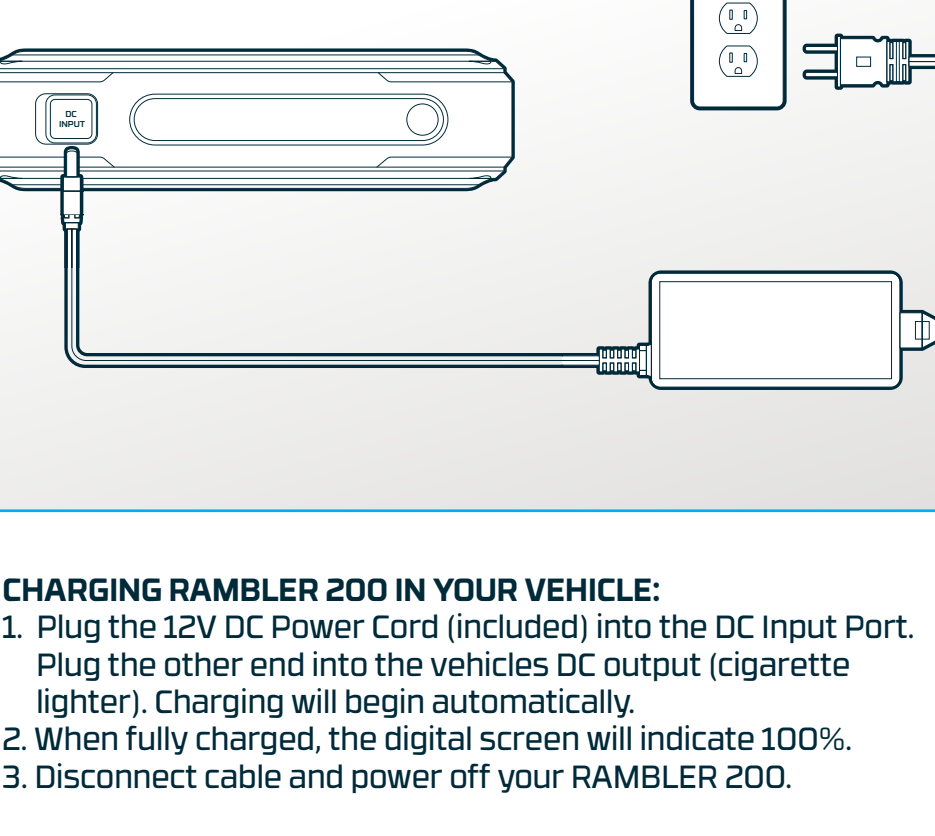 

### 3 WAYS TO CHARGE YOUR RAMBLER 200


#### CHARGING YOUR RAMBLER 200 AT HOME:

 - (Charging will begin automatically)
1. Connect a USB-C PD charger (included) to the USB-C port. Connect the included AC adapter to the DC input port.
  2. When fully charged, the digital screen will indicate 100%. (Full charge could take up to 6 hours.)
  3. Disconnect cable from your RAMBLER 200.

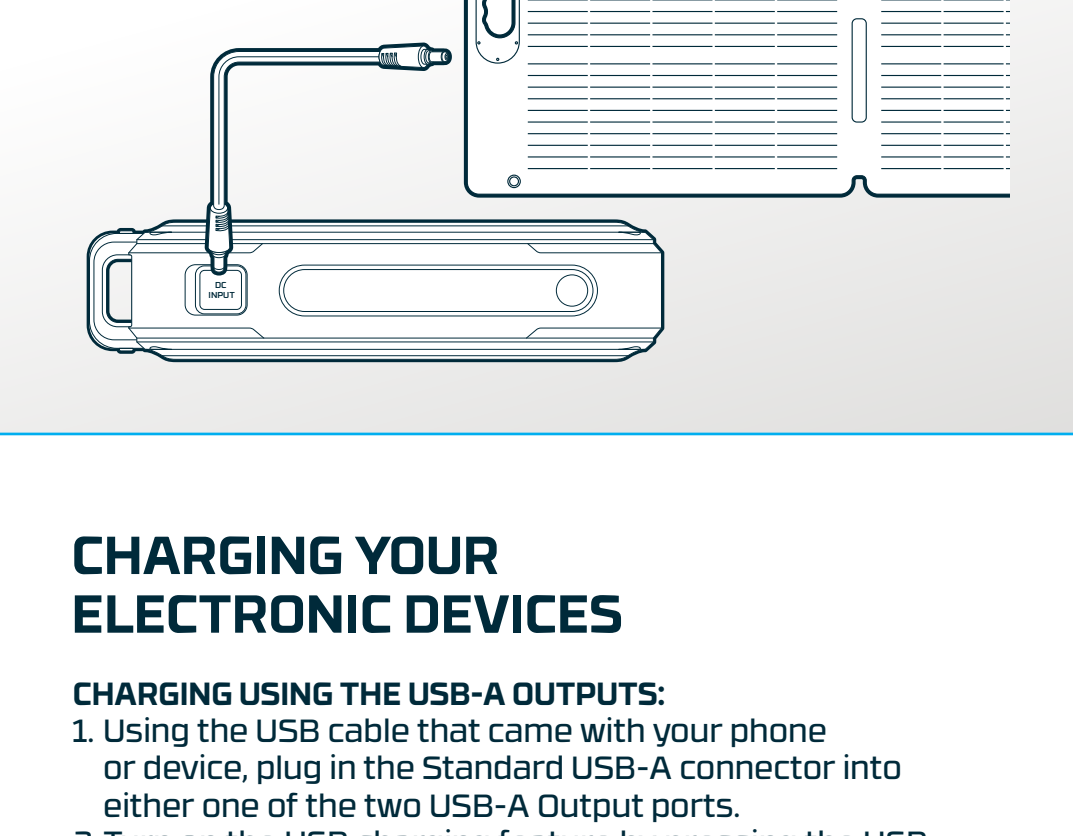

#### CHARGING RAMBLER 200 IN YOUR VEHICLE:

 
1. Plug the 12V DC Power Cord (included) into the DC Input Port. Plug the other end into the vehicles DC output (cigarette lighter). Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%.
3. Disconnect cable and power off your RAMBLER 200.

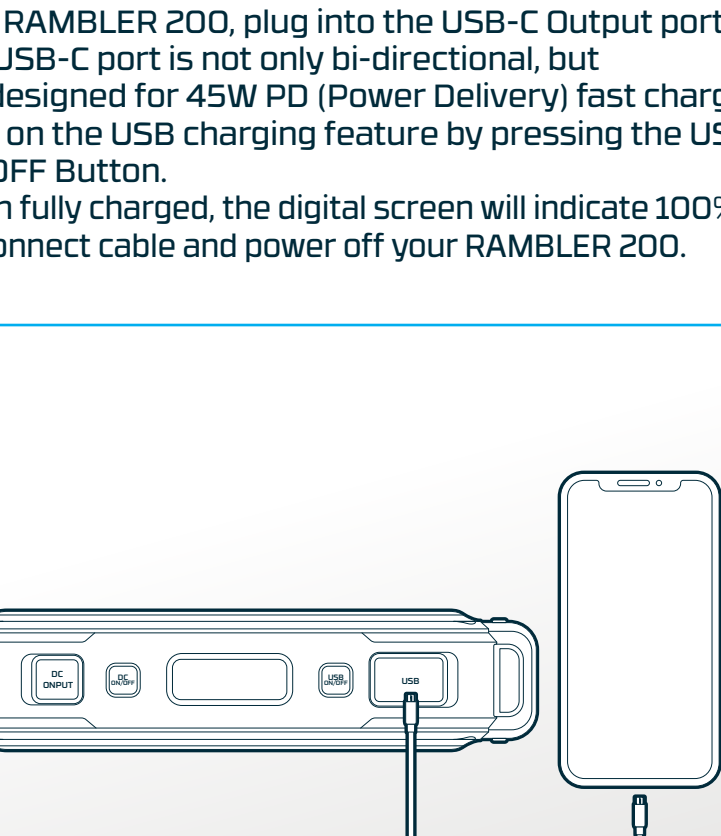

#### CHARGING WITH A SOLAR PANEL (Sold Separately):

1. Connect the DC5525 cable that came with your solar panel to the DC Input port. Charging will begin automatically.
2. When fully charged, the digital screen will indicate 100%.
3. Disconnect cable and power off your RAMBLER 200.

 
**NOTE:** Charging speed will vary based on a number of factors including weather, obstructions and solar panel angle and positioning.

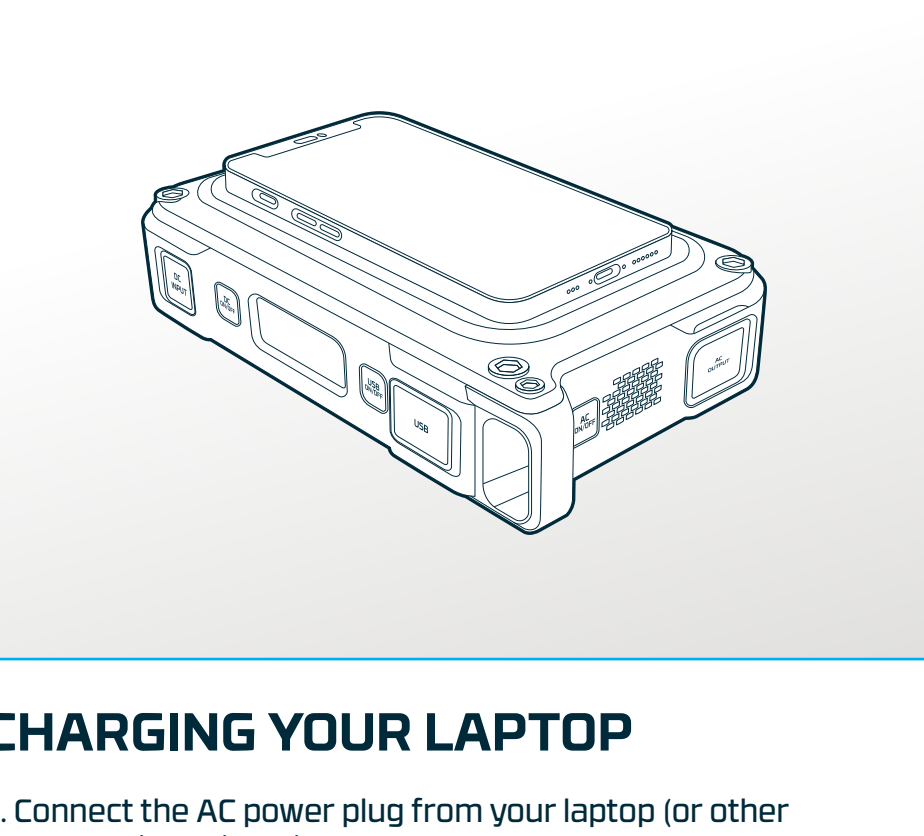

### CHARGING YOUR ELECTRONIC DEVICES

#### CHARGING USING THE USB-A OUTPUTS:

 1. Using the USB cable that came with your phone or device, plug into the Standard USB-A connector into either one of the two USB-A Output ports.
2. Turn on the USB charging feature by pressing the USB ON/OFF Button.
3. When fully charged, disconnect the cable from your RAMBLER 200.

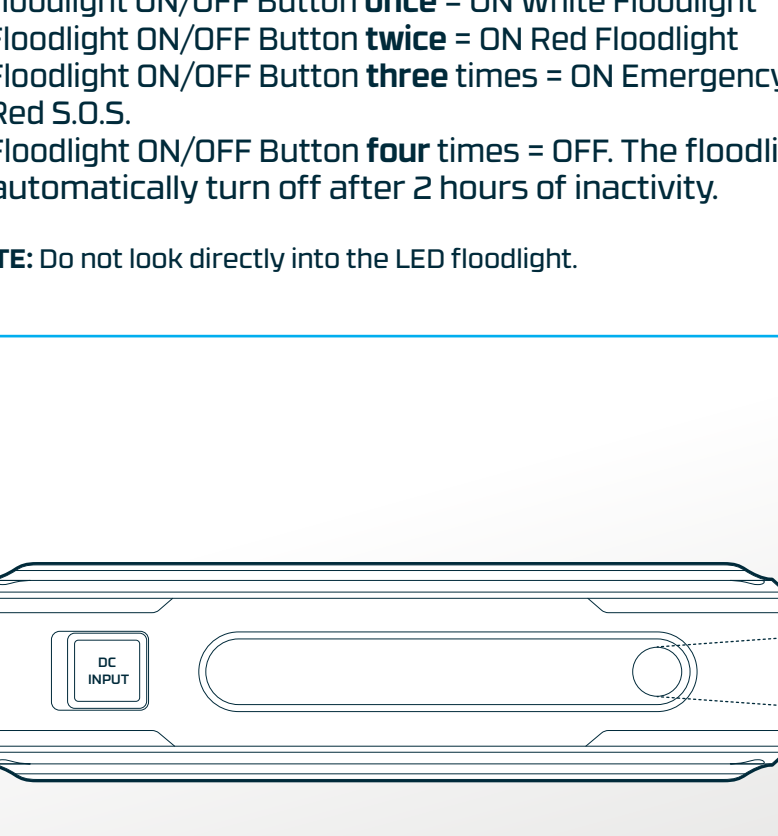

**NOTE:** The NEBO RAMBLER 200 USB charging feature will automatically power off after 30 minutes of inactivity.

### NEBO SMART CHARGE TECHNOLOGY

Our SMART CHARGE TECHNOLOGY achieves higher compatibility for charging standard USB electronic devices. This technology allows the NEBO RAMBLER 200 to identify the fastest and safest charge possible. The AC button will flash green while doing a safety check and turn solid green before it begins to charge. You may notice that the output wattage may vary slightly, or charging stop as it determines this level.

### WIRELESS CHARGING

1. Place your wireless compatible device onto the wireless charging pad.
2. Press the USB ON/OFF Button to begin charging.
3. When charged, power off your RAMBLER 200.

**NOTE:** Make sure the device is aligned in the center of the wireless charging surface and that no gaps or obstructions are in between.



### CHARGING YOUR LAPTOP

1. Connect the AC power plug from your laptop (or other electronic device\*) into the AC port, as shown below.
2. Press the AC ON/OFF Power Button to begin charging. The indicator light will flash while the unit checks to make sure it is safe to turn on the AC output.
3. When charged, disconnect cable and power off your RAMBLER 200.

**NOTE:** Make sure the AC power plug is fully plugged into the AC port before pressing the AC Power ON/OFF Button.



\*Any electronic device can be powered by the AC port, as long as it is rated at 200 watts or less.

### USING THE FLOODLIGHT

1. Floodlight ON/OFF Button **once** = ON White Floodlight
2. Floodlight ON/OFF Button **twice** = ON Red Floodlight
3. Floodlight ON/OFF Button **three** times = ON Emergency Red S.O.S.
4. Floodlight ON/OFF Button **four** times = OFF. The floodlight will automatically turn off after 2 hours of inactivity.

**NOTE:** Do not look directly into the LED floodlight.



CONDITION	POTENTIAL CAUSE	SOLUTION
AC ON/OFF button flashes red and "OVERLOAD" indicator illuminates red.	Connected electronic device is rated greater than 200 watts.	Only electronic devices rated at 200 watts or less can be used with the RAMBLER 200 charger.
Displays a blue or red "TEMP" indicator.	The RAMBLER 200 has detected a low or high temperature condition.	Disconnect the RAMBLER 200 and allow unit to acclimate to temperature operating range (14°F - 122°F) (-10°C - 50°C).
Wireless Charging Indicator flashes green.	The connected electronic device is not properly positioned on the wireless charging pad.	Realign the connected electronic device making sure that it is centered on the wireless charging pad.
	FOD (Foreign Object Detection) was triggered.	Remove foreign object.
Displays "BATT LOW" indicator.	Battery is low.	Recharge the RAMBLER 200.

### PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or **www.NEBOpower.com**

For more information, detailed video instructions, and warranty registration, visit **NEBOpower.com**.