DIRECTIONS FOR USE (READ WARNINGS BEFORE USE):



1 Position valve at 6 o'clock on tire.




2 Shake vigorously for 30 seconds.



3 Twist nozzle onto the tire valve firmly.



4 Wait 30 seconds for full can to dispense into tire, then untwist.

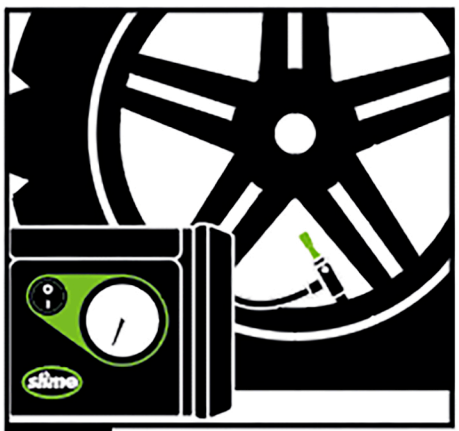

5 Inflate tire to recommended pressure.



6 Drive to disperse sealant inside the tire. Stop to check pressure and seal.