




**R-Style Sneeze Guard - Acrylic Shields
Free Standing Mount Instructions**

Warranty: raproducts.com/warranty

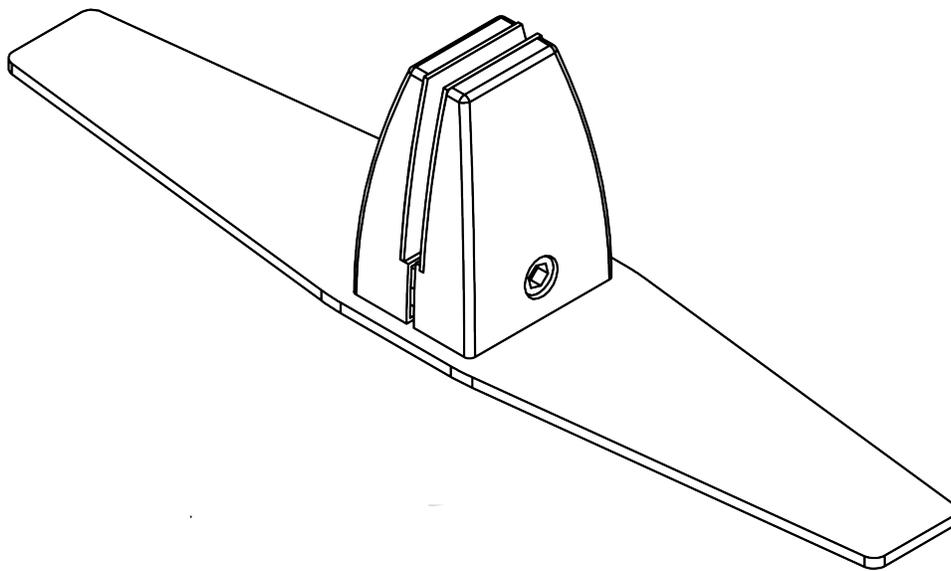


A. 3/16" Allen Wrench



Step 1

- Lay the free standing mounts evenly along the worksurface. Slide the panel into the free standing mounts.

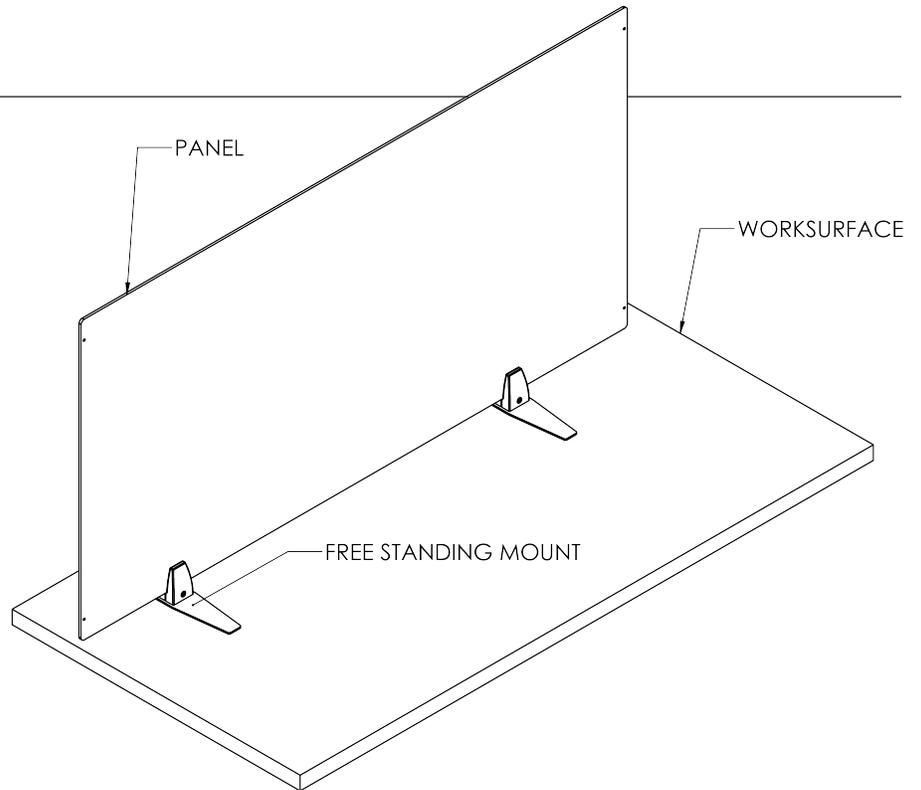

Step 2

- Tighten the set screws on the free standing mounts.

