


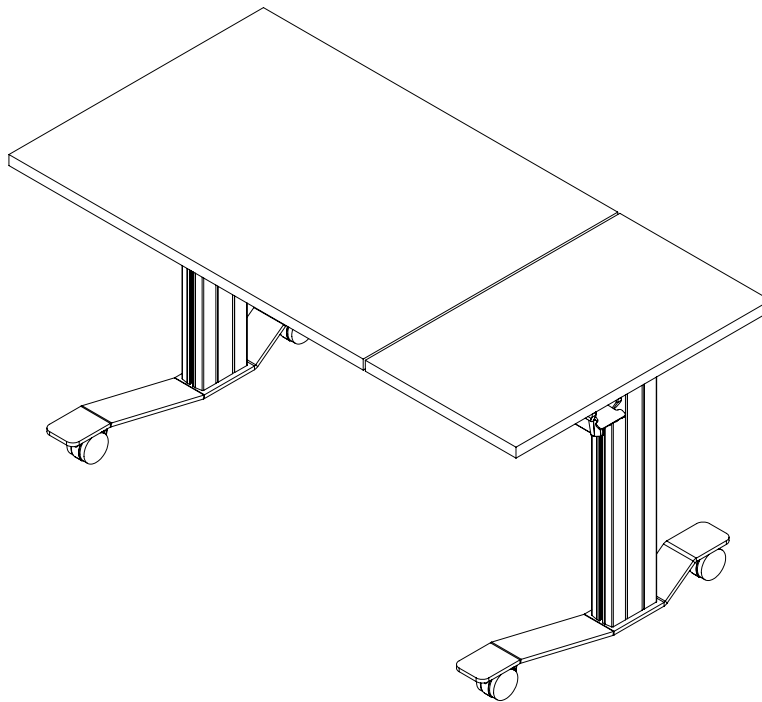

NewHeights™ Hooligan Teacher's Desk Instructions


Optional Modesty Panel Assembly Instructions Provided Separately (#54681)

Warranty: raproducts.com/warranty




Tools Required for Assembly

- A. Power Driver with Adjustable Torque
- B. #2 Phillips Head Driver Bit
- C. Level

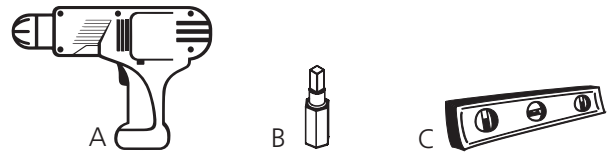


Hardware and Tools Included for Assembly *(may have extra)*

- D. 3/16" Allen Wrench
- E. 5/8" Washer Head Wood Screw **x28**
- F. 3/8" Button Socket Cap Screw **x16**
- G. Cord Clip **x1**
- H. Weld Nuts **x16**

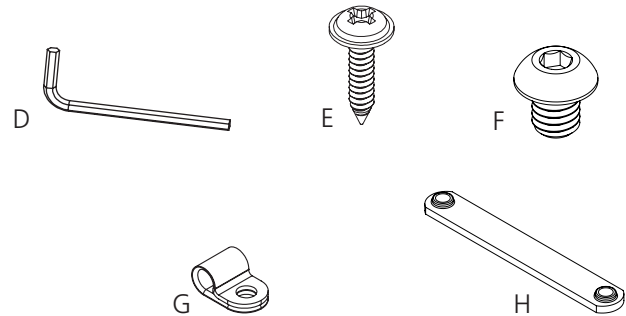



Parts

- I. Cross Support **x2**
- J. Cross Support End Cap **x4**
- K. Worksurface Support Bracket **x2**
- L. Lifting Pedestal Leg *(adjustment paddle is connected to the leg)* **x1**
- M. Stationary Leg **x1**

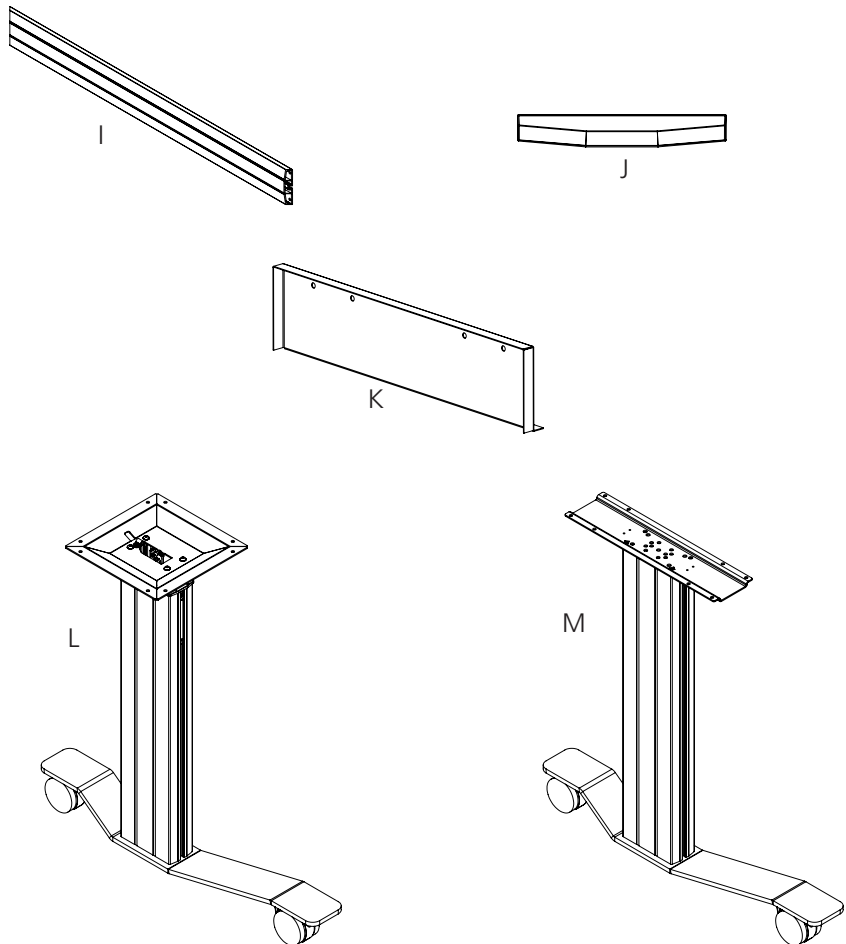



Step 1

- Lay the podium worksurface (the smaller of the two) on a protected surface with the pilot holes facing up.
- Place the lifting pedestal leg (L) onto the podium worksurface and align with the predrilled holes.
- Attach the leg to the worksurface with eight 5/8" washer head wood screws (E).
- **Do NOT fully tighten** until all screws are installed.

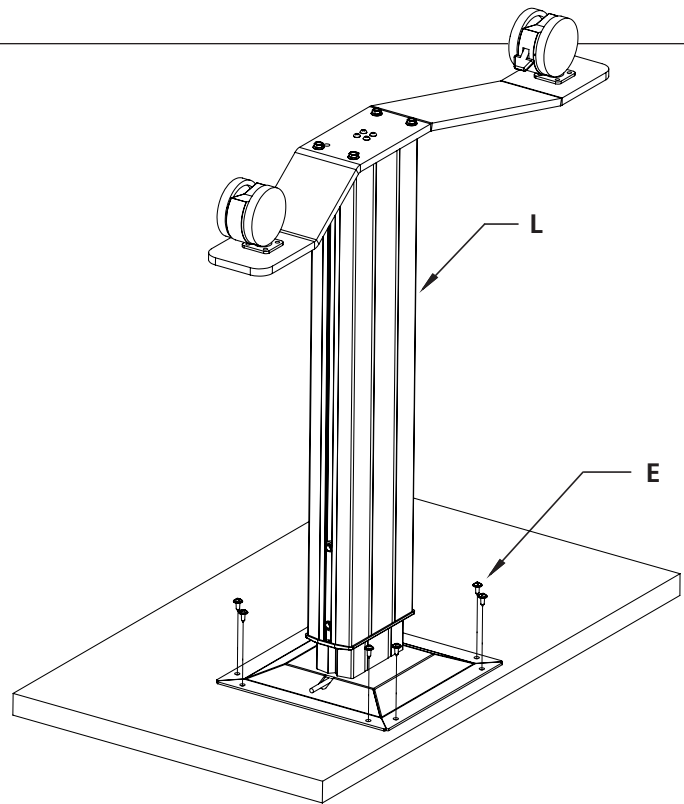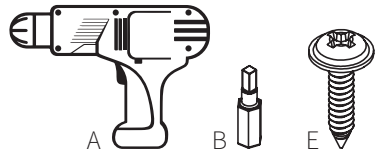



Step 2

- Align the adjustment paddle (it's connected to the lifting pedestal leg) with the pre-drilled pilot holes on the lectern worksurface. **Make sure the paddle's cord is positioned as shown in the image.**
- Attach paddle to worksurface using four 5/8" round washer head wood screws (E).
- **Do NOT fully tighten** until all screws are installed.
- Attach cable clamp (G) to the paddle cable and secure it directly to the worksurface using one 5/8" washer head wood screw (E). Be sure to leave some slack in the cable. No pilot holes are provided.

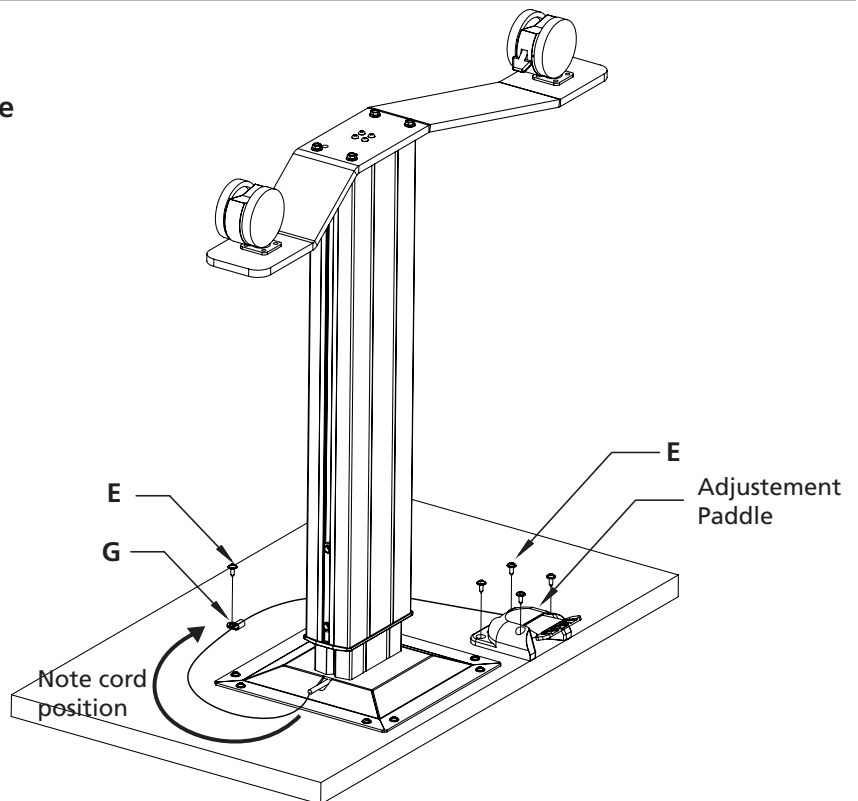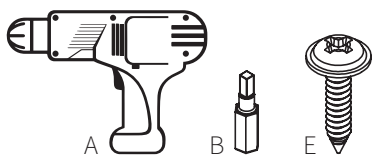



Step 3

- Lay the main worksurface (the larger of the two) on a protected surface with the pilot holes facing up.
- Place the stationary leg (M) onto the main worksurface and align with the predrilled holes.
- Attach the leg to the worksurface with eight 5/8" washer head wood screws (E).
- **Do NOT fully tighten** until all screws are installed.

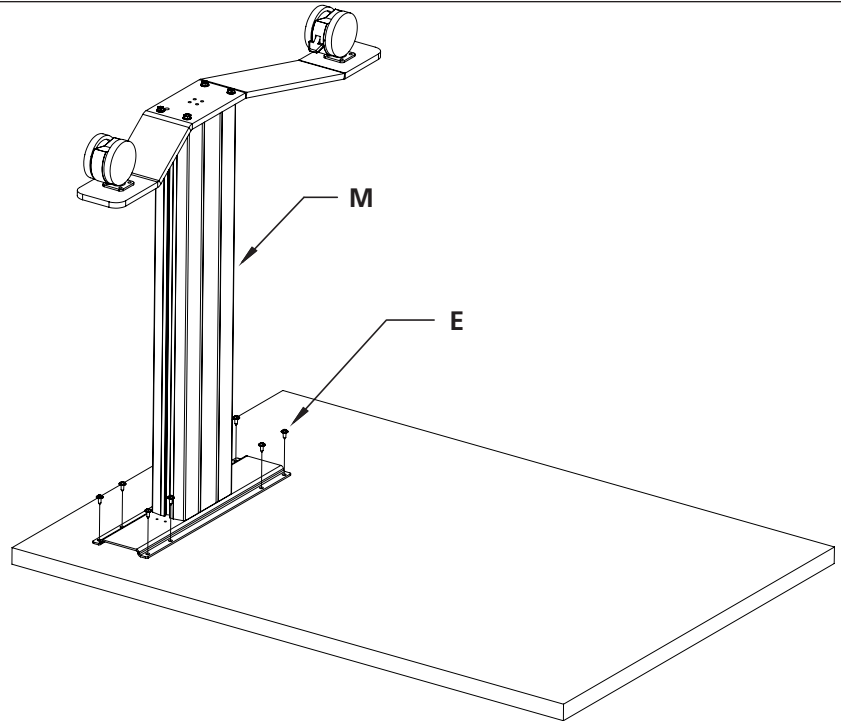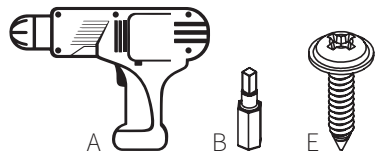


Step 4

- Install two weld nuts (H) onto one of the worksurface support brackets (K). Secure using two 3/8" button socket cap screws (F) per weld nut.
- **Do NOT fully tighten the screws.** This will be done in a later step.
- Repeat this step on for the second worksurface support bracket (K).

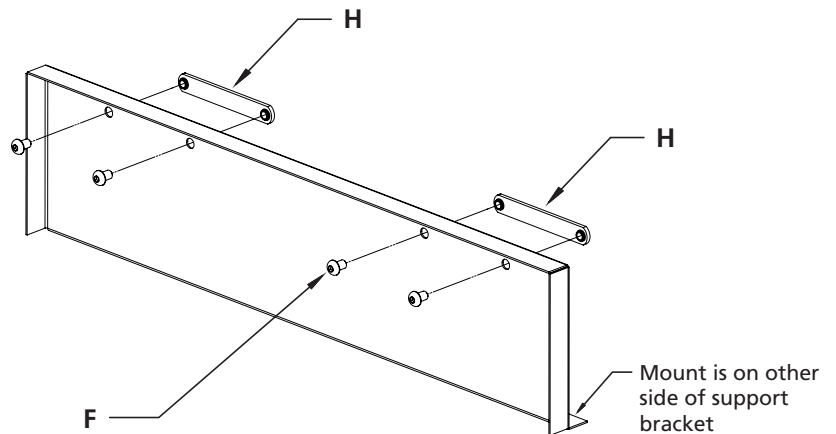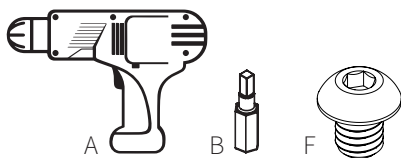


VIEW OF OPPOSITE SIDE OF SUPPORT BRACKET BELOW

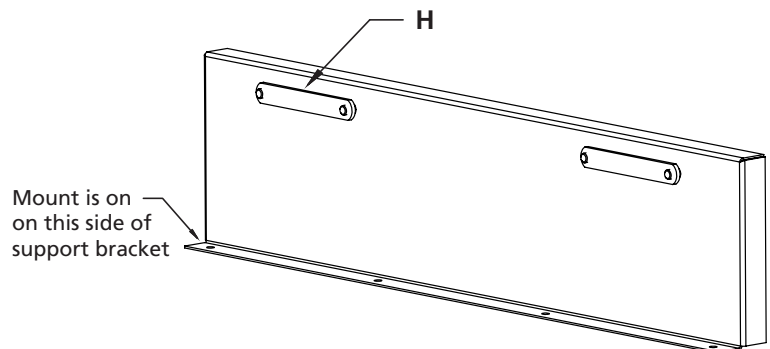



Step 5

- Slide one of the cross supports (I) onto one of the assembled worksurface support brackets (K).
- The cross support should slide right onto the two weld nuts.
- Repeat this step for the second cross support (I) and worksurface support bracket (K).

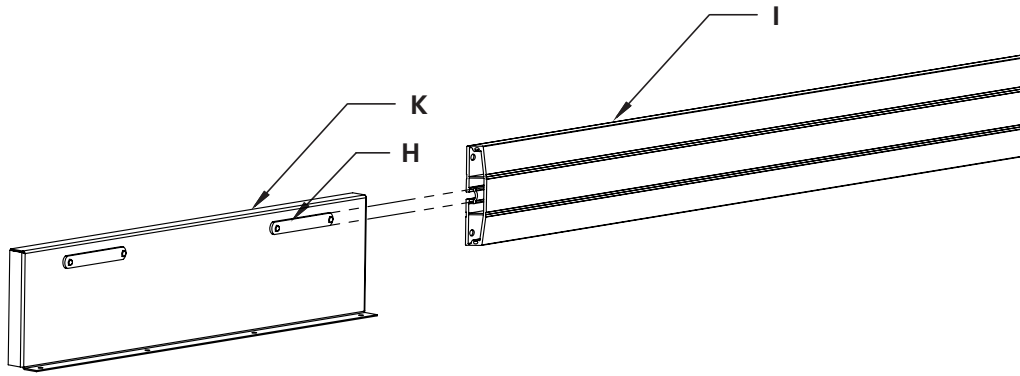



Step 6

- Position one cross support assembly (from step 5) on one side of desk legs. The worksurface support bracket should be facing towards the inside of the desk.
- Align the cross support over the leg stickers. Attach using four 3/8" button socket cap screws (F).
- Make sure the cross support is level.
- **Do NOT fully tighten the screws.**
- Repeat this step for the second cross support assembly.

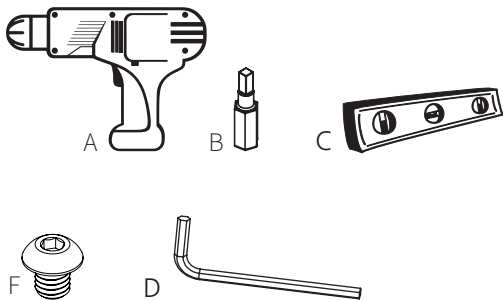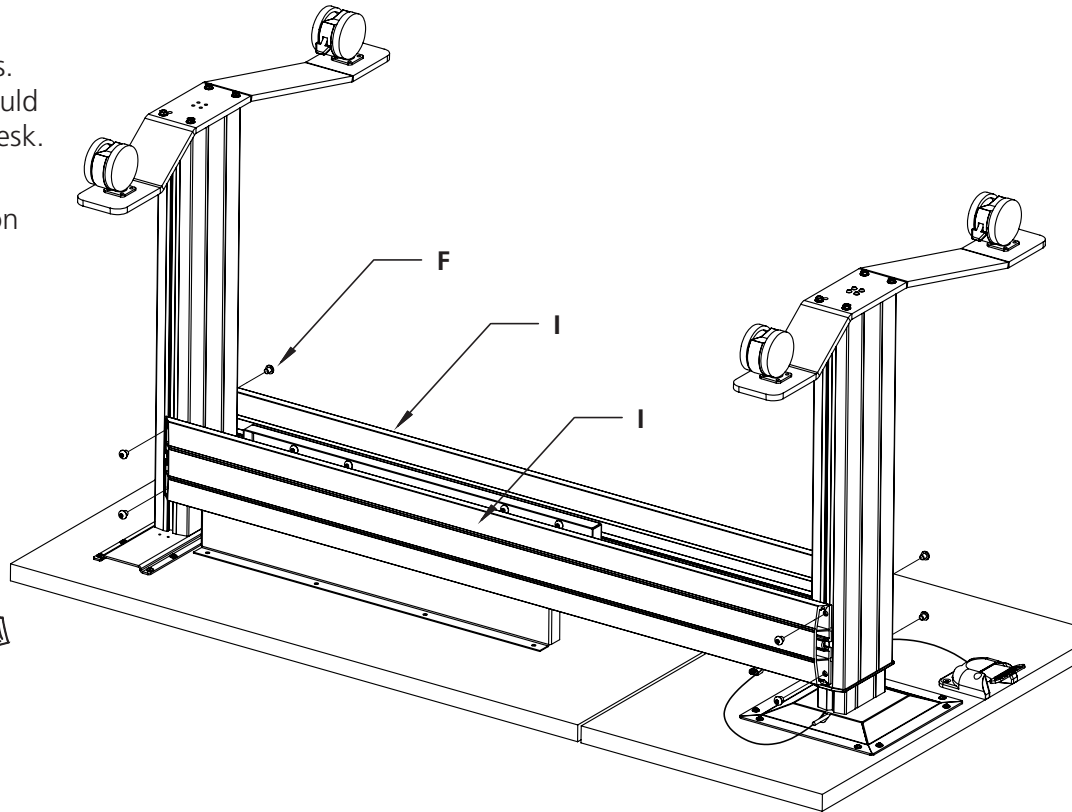


Step 7

- Slide one worksurface support bracket (K) along the worksurface to align with the pre-drilled pilot holes.
- Attach the bracket to the worksurface using four 5/8" washer head wood screws (E).
- **Do NOT fully tighten the screws until all are installed.**
- Tighten the button socket cap screws on the worksurface support brackets (from step 4) and on the cross supports (from step 6).
- Repeat this step for the other worksurface support bracket.

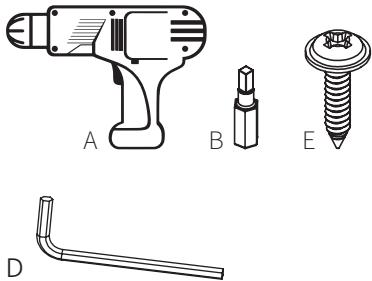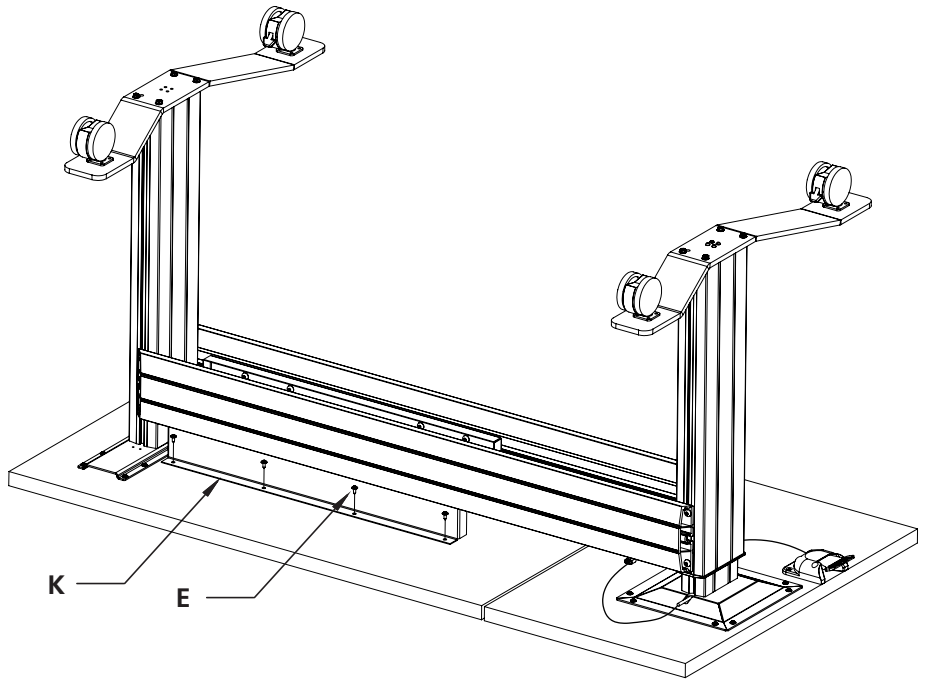

Step 8

- Insert two cross support end caps (J) on each cross support.
- Flip Hooligan desk rightside up and begin use.

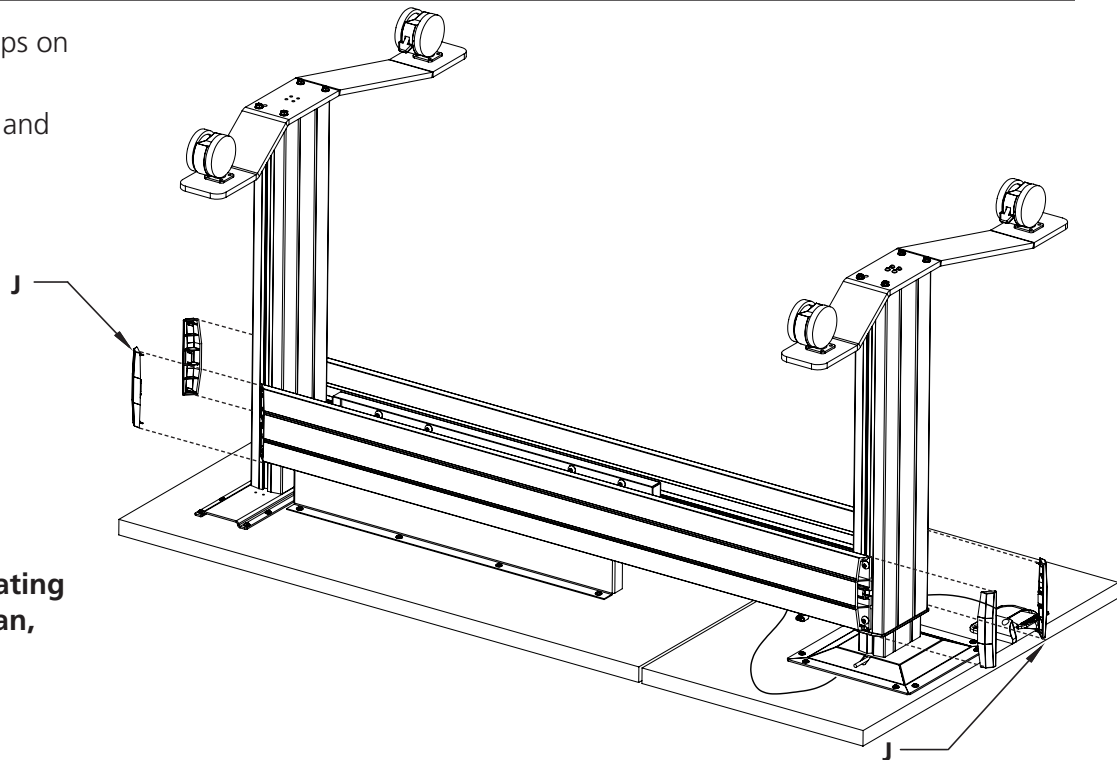

If you've purchased a coordinating modesty panel for the Hooligan, separate product instructions (#54681) are provided.