

Pole with Clamp/Grommet Attachment User's Manual


Grommet Type Table Thickness Table Thickness 3/4"~ 1 3/4"

Clamp Type




Unscrew Hand-Turn Screw and separate Hand-Turn Screw and Long Metal Plate from the Mount.



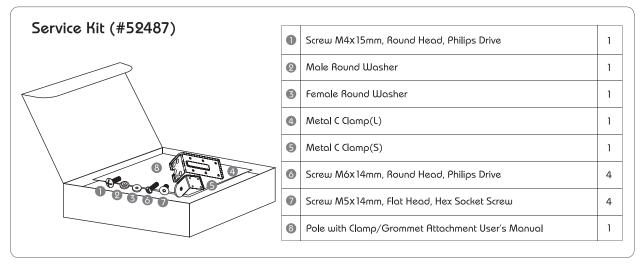

Depends on the desk thickness, assemble 2 pieces of metal clamp at suitable screw holes with 4 screws (M5x15mm, round head, Philips Drive).

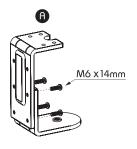



Remark

Desk thickness >50mm(1.97"), refer to chart A left. Desk thickness<50mm(1.97"), refer to chart B left.



Step 3 Get Screw (M4x15mm, Round Head, Philips Drive), Male & Female Round Washers from Service Kit.












Step 4 Assemble Hand-Turn Screw with C Clamp.

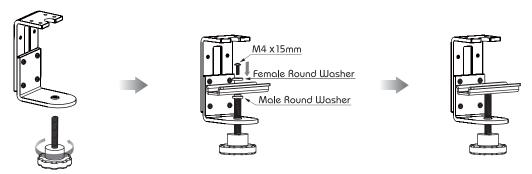

Assemble C Clamp with Mount by driving 3 Screws M5x15mm, flap head, Hex Socket Screws.

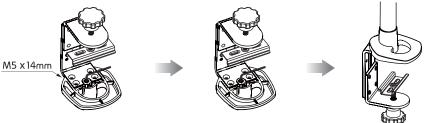

Step 6 Stick EVA cushion to mount bottom. Mount assembly is completed for installation onto desk.

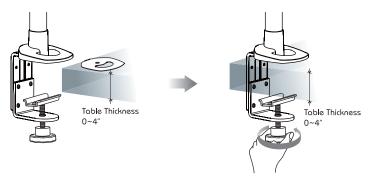

Install Mount with Swivel Arm, Spring Arm, and Monitor Bracket.

Parts & Hardware

Parts		ϘΤΥ	Remark	Parts	ϘΤΥ	Remark
Mount with Pole, Pole Cap, and Adjustment Ring		1	No Adjustment Ring on 82mm Clamp Mount	Female Round Washer	1	Inside Service Kit
Hand-Turn Screw(Attached with Mount)	© —	1		Metal C Clamp(L)	1	Inside Service Kit
EVA Cushion (Attached with Mount)	(1		Metal C Clamp(S)	1	Inside Service Kit
Long Metal Plate(Attached with Mount)		1		Screw M6x14mm, Round Head, Philips Drive	4	Inside Service Kit
Screw M4x15mm, Round Head, Philips Drive	Ð	1	Inside Service Kit	Screw M5x14mm, Flat Head, Hex Socket Screw	4	Inside Service Kit
Male Round Washer	0	1	Inside Service Kit	Pole with Clamp/Grommet Attachment User's Manual	1	Inside Service Kit

Tool

Tools Item	ϘΤΥ	Remark
M3 Wrench	1	Inside Service Kit of Monitor Bracket
#3 Philips Screw Driver	1	Prepared by users



info@raproducts.com www.raproducts.com 800.298.4351