

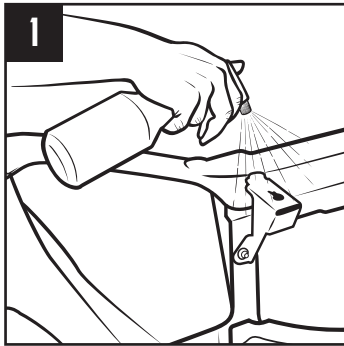


SURFACE PREPARATION


Clean the surface with Isopropyl alcohol.

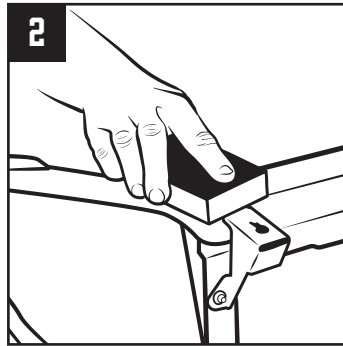

Sand with P240-320 sandpaper.

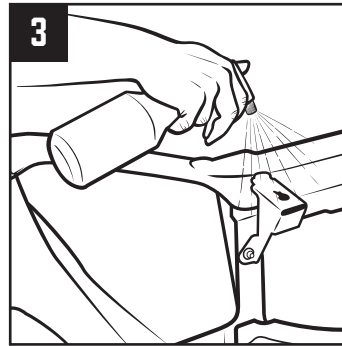


Blow off and re-clean with isopropyl alcohol.

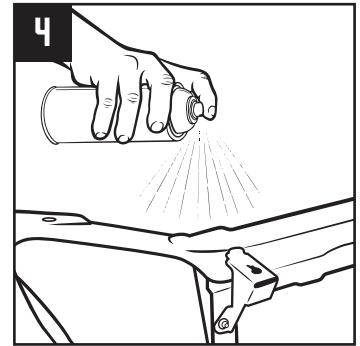


Apply Seymour E-Coat.

Note: For fiberglass and SMC do not oversaturate exposed fibers with isopropyl alcohol.

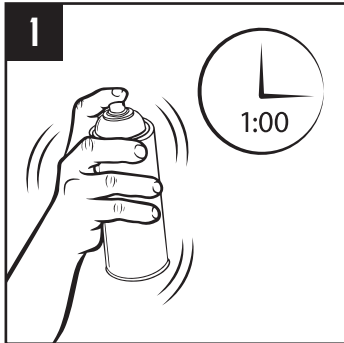APPLICATION INSTRUCTIONS


Shake the can at least one minute after rattle is heard and occasionally during use.

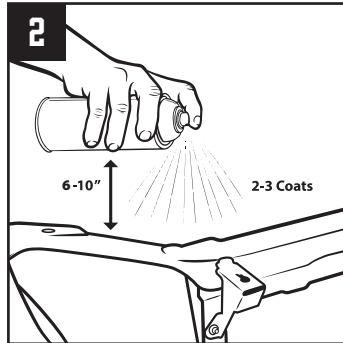

Distance: 6-10"

Coats: 2-3

Can be top coated with most automotive basecoats.

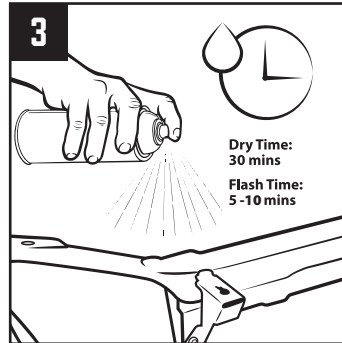

Flash time: 5-10 min.

Dry time: 30 min. @ 70°F.

Note: If more than 3 coats are required to achieve hiding, the additional coats will need longer flash and dry times.