

Seal Smart™

Compression Connectors


Cable Preparation & Termination



1. Strip cable to dimensions shown on on chart.
2. Fold exposed braid back over cable jacket, leaving smooth foil attached to dielectric.
3. Trim center conductor to proper length, see (A) dimension.
4. Insert cable into rear of connector. Insertion depth is shown on chart (C).
5. Crimp until compression ring is fully seated in connector body.

PLATINUM TOOLS®

North Carolina, USA
 platinumtools.com

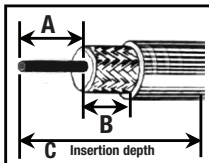

**Cable &
 Connector Type**

RG 11/7 'F'

**Stripping
 Dimensions**

A	B	C
5/16"	1/4"	1 1/4"



©Platinum Tools 2022
 800.749.5783
 18311_IS_V1_0222