

SPECIFICATIONS

Input.....	120 VAC, 60 Hz
Tank Capacity.....	10.1 fluid ounces
Suggested fill capacity.....	8.5 fluid ounces
Rated Power.....	900-1050 watts
Steam Pressure.....	40.6 psi
Injected Steam Capacity.....	28 gram/minute
Functioning Temperature...	275°F
Fuser Temperature.....	336.2°F
Dimensions.....	11.22" x 5.71" x 9.45"
Net weight.....	3.53 lbs.

SAFETY

1. Do not leave machine unattended.
2. To prevent electrical shock, do not immerse the power cord in liquids.
3. Do not use if power cord or plug is damaged.
4. Always make sure the tank has water before turning the unit on.
5. During operation, the safety cap must be tightened so the tank is sealed.
6. Make sure the steamer is upright when in use. If tilted more than 45°, boiling water will be sprayed out with the steam.
7. Do not direct steam toward people, animals or electrical products.
8. Before refilling water, unplug the power cord.
9. Always unplug the power cord before cleaning the steamer.
10. Do not add any chemicals to the tank.
11. The filling aperture must not be opened during use.
12. Never overfill the tank. This may cause the steam pressure to rise above recommended levels.



SEALED UNIT PARTS CO., INC.
PO BOX 21, 2230 LANDMARK PLACE
ALLENWOOD, NJ 08720 USA
www.supco.com

INSTRUCTIONS DFSTEAMER



Read all instructions carefully before using this steam cleaner.

FEATURES

The high-temperature and high-pressure steam is ideal for de-icing A/C coils. You can also use the steamer to clear away dirt and stains on the equipment and surrounding area. The DFSteamer has an automatic heating control, and is able to generate steam continuously. No chemical agents are needed, making the DFSteamer environmentally friendly.

SAFETY

Once the boiler is empty, the steamer will turn off. The DFSteamer also has a built-in safety shutoff valve that will automatically open and release pressure.

OPERATING INSTRUCTIONS

1. Unpack the product and verify all parts are included and not damaged.
2. Before use, please read the instructions carefully.
3. Place the DFSteamer on a level surface and remove the Safety Cap. Press down on the cap and turn counter clockwise to remove.
4. Insert the funnel and use the measuring cup to fill the water tank.
DO NOT OVERFILL!!
5. Remove the funnel and replace the Safety Cap. Make sure the cap is tightened properly.
6. Plug in the steamer and the indicator light will turn on. The tank takes approximately three minutes to heat to the desired temperature. The indicator light will go out when the DFSteamer is ready.
7. Slide the safety switch forward (located on top of the steam button). Lightly press the steam button to check whether steam spays out of the nozzle.
8. After verifying that the steamer is ready, release the button and attach suitable accessories according to your needs.
9. Once the accessories are attached, press the steam button down and pull back on the safety switch. This will lock the button down in a fixed position so the unit will emit steam continuously.
10. In order to stop the steamer, move the safety switch forward and the steam button will rise up shutting off the unit.

REFILL WATER DURING OPERATION


1. Unplug the power cord.
2. Hold down the steam button to release pressure until there is no steam.
3. Slowly unscrew the safety cap but do not remove it. Residual steam may still discharge. Place the steamer in a cool place to cool down for about five minutes.
4. After the unit has cooled down, remove the safety cap and refill.
5. Replace the safety cap and tighten.
6. Plug in the steamer and let it heat up for use.

CLEANING THE MACHINE AFTER USE

1. Unplug the power cord.
2. Hold down the steam button to release pressure until there is no steam.
3. Slowly unscrew the safety cap but do not remove it. Residual steam may still discharge. Place the steamer in a cool place to cool down for about five minutes.
4. Empty remaining water from the tank and clean the external surface with a dry cloth.
5. Replace safety cap and tighten.

PARTS LIST

1. Body
2. Short sprayer nozzle
3. Safety cap
4. Steam button
5. Handle
6. Power cord
7. Power indicator
8. Funnel
9. Measuring cup
10. Nylon round brush
11. Bent spray nozzle
12. Long spray nozzle
13. Spray nozzle extension
14. General spray nozzle
15. Door/window spray nozzle
16. Tower sleeve

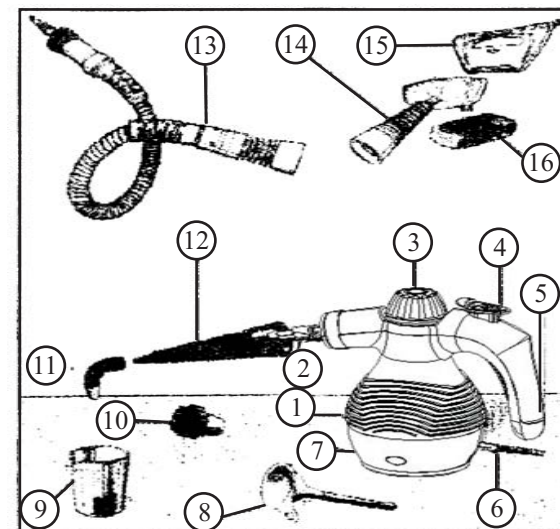

CORRECT DISPOSAL OF THIS PRODUCT

