


NEBO[®]

SLIM[®] MINI 500



CHARGING

Insert one end of the charging cable into the charging port on the light and the other end into a power source.

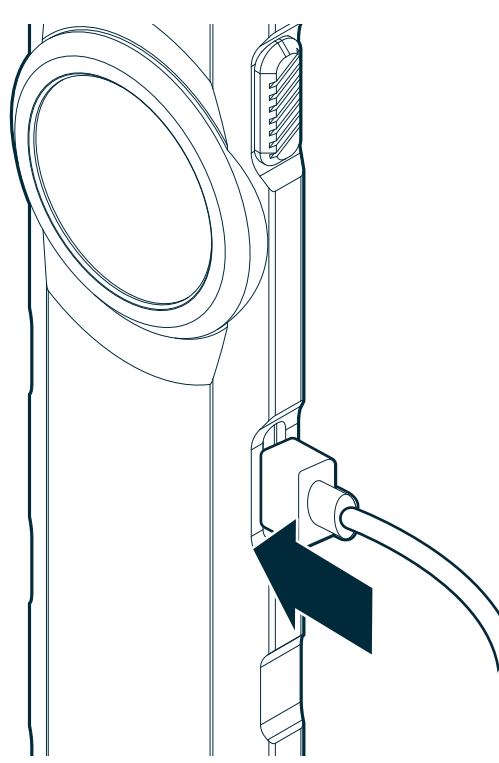


CHARGING STATUS

The LEDs within the lens of the light serve as the charging status indicator while the light is plugged in.

- **Solid Red:** Charging
- **Solid Green:** Charged completely

OPERATION

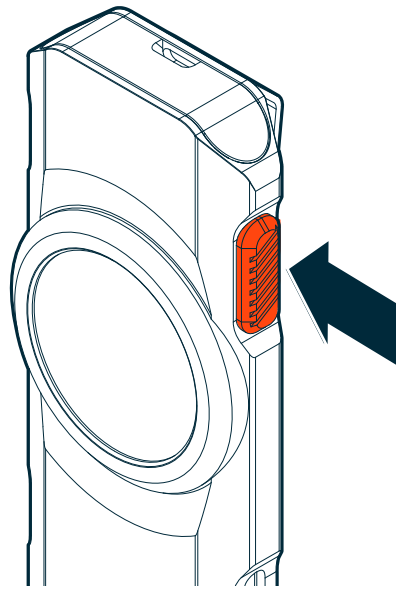

Press the power button repeatedly to cycle through light modes:

HIGH > LOW > GREEN > RED > OFF

TURBO: Press and hold power button from ON. The light will revert to the previous mode after 30 seconds.

DIRECT-TO-RED: Press and hold power button from OFF. If the button is pressed again within 8 seconds of activation, the above mode cycle is reversed.

LOCKOUT: triple press the power button from OFF to toggle LOCKOUT ON and OFF.

MODES	OUTPUT (Lumens)	RUN TIME (Hours)	BEAM DISTANCE (Meters)
TURBO	500	30s*	100
HIGH	250	2h	80
LOW	50	5h	30
GREEN	✓	✓	✓
RED	✓	✓	✓

PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at 800-255-6061 or [NEBOLIGHTS.com](https://www.nebolights.com)

For more information, detailed video instructions, and warranty registration, visit [NEBOLIGHTS.com](https://www.nebolights.com)