
Assembly Video: https://youtu.be/AzcN2S43ub0

NewHeights™ Presidente Reception 3-Leg Assembly Instructions

Warranty: raproducts.com/warranty



READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.

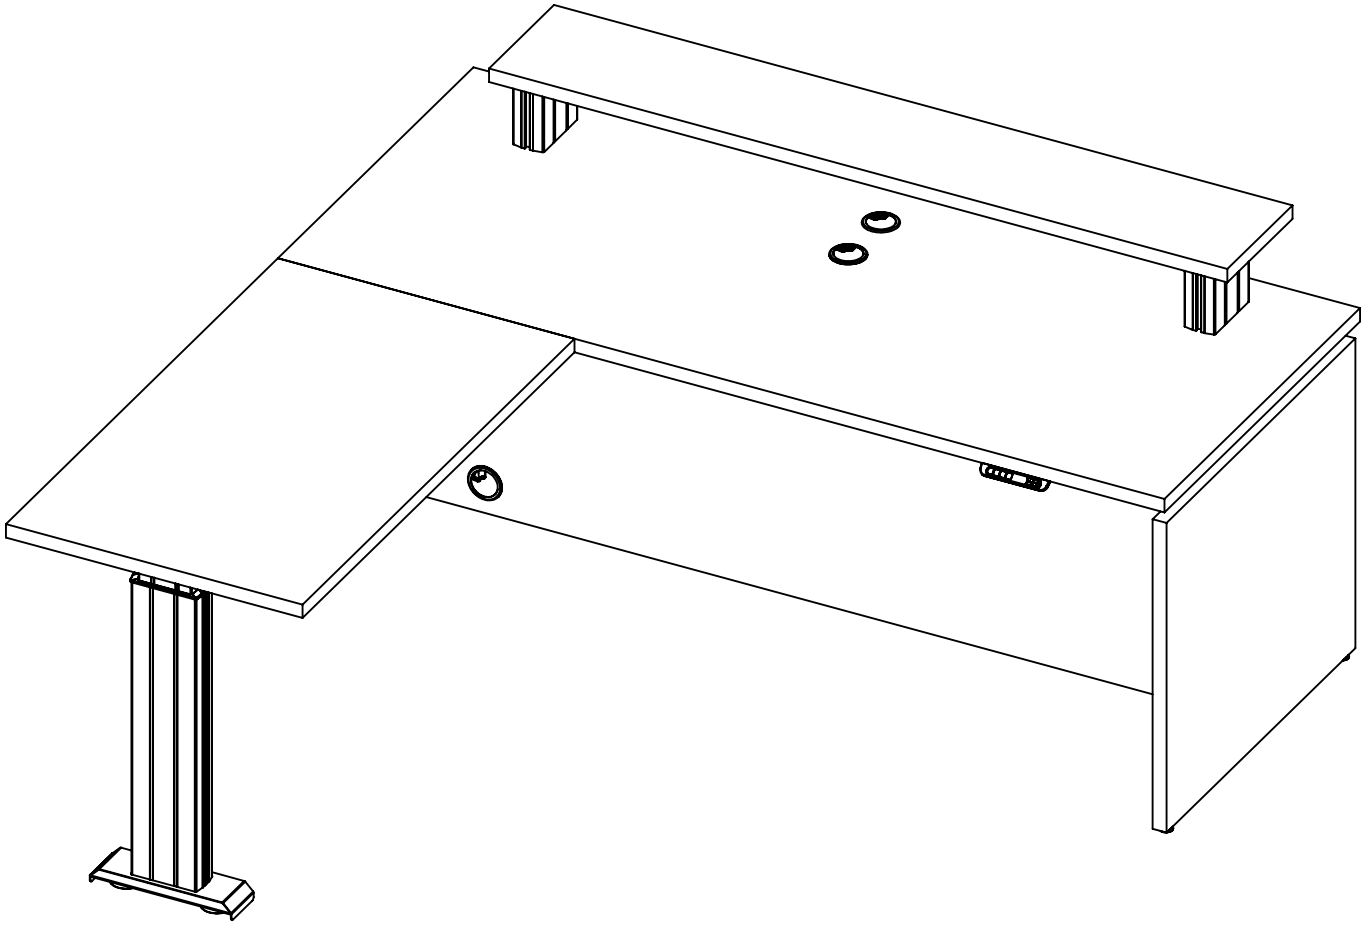

WARNING

USE THIS PRODUCT ONLY AS INSTRUCTED.
FAILURE TO COMPLY WITH ALL INSTRUCTIONS AND WARNINGS MAY RESULT IN SERIOUS PROPERTY DAMAGE OR BODILY INJURY.

Basic Safety Instructions

1. **Intended Use.** This Product is exclusively designed for use as indoor office furniture in compliance with all instructions and safety warnings in the user manual. Any different use, or use extending beyond the intended use, may result in property damage or bodily injury and is prohibited. This Product should not be used, operated or maintained with additional components not authorized by RightAngle Products.

   BY USING THIS PRODUCT OR ANY FEATURE OF THIS PRODUCT, YOU AGREE TO COMPLY WITH ALL PRODUCT TERMS AND POLICIES, INCLUDING WITHOUT LIMITATION ANY SAFETY WARNINGS AND INSTRUCTIONS, PROVIDED BY RIGHTANGLE PRODUCTS AND ITS AFFILIATES. RIGHTANGLE PRODUCTS SHALL ASSUME NO LIABILITY FOR ANY DAMAGE OR INJURY CAUSED BY USE OF THE PRODUCT A) IN VIOLATION OF ANY SAFETY WARNINGS OR INSTRUCTIONS; B) NOT AUTHORIZED BY RIGHTANGLE PRODUCTS; OR C) BY EVENTS BEYOND RIGHTANGLE PRODUCT'S CONTROL.



DANGER

DO NOT SIT, STAND OR CRAWL ON OR UNDER THE PRODUCT.
MAKE SURE NO OBSTACLES ARE IN THE PRODUCT'S PATH.
MAKE SURE ALL CORDS ARE LONG ENOUGH TO ACCOMMODATE ANY CHANGE IN HEIGHT.
DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.

---

2. **Electrical Height Adjustment.** The height of this Product may be adjusted electronically. Contact with electrical voltage may cause serious injury and death. Only use the Product in compliance with these instructions. This Product should not be used in environments with high levels of humidity or moisture.



KEEP CORDS AND ELECTRICAL COMPONENTS AWAY FROM HEAT AND LIQUIDS.
DO NOT OPEN ANY OF THE COMPONENTS: LEGS, CONTROL BOX, OR KEPYAD.
DO NOT USE WITH A DAMAGED PLUG OR CORD.
DO NOT INSERT ANYTHING INTO ANY SEAM OR OPENING.

---

3. **Setup and Use.** This Product should only be used and operated in good condition. When in use, no one should sit, stand or crawl on or under the Product. There is a danger of crushing, shearing, injury or damage. Keep the entire range of motion of the Product clear of all obstacles. Devices and object on the Product can tip over, fall or be crushed by the Product.



KEEP HANDS AND FINGERS CLEAR.
KEEP ALL OBSTACLES CLEAR OF THE PRODUCT'S PATH.

---

4. **Users.** This Product is not intended for use with children, individuals with restricted physical, sensory or mental capabilities, or individuals who lack experience or knowledge, unless they are supervised by a person who is responsible for their safety or they have received instructions from a person who is responsible for their safety concerning how the Product must be used. Children should be closely supervised to ensure that they do not play with the Product and its height adjustment mechanism to avoid risk of physical injury or electric shock.




KEEP CHILDREN AWAY FROM THE PRODUCT, ITS CONTROL UNITS, AND KEYPADS.

Tools Required for Assembly


Assembly Requires Two People

A. Power Driver with Adjustable Torque
B. #2 Phillips Head Driver Bit
C. #2 Square Head Drive Bit
D. 3/16" Hex Head Driver Bit or Allen Wrench
E. 3/16" Allen Wrench
F. Phillips Screwdriver

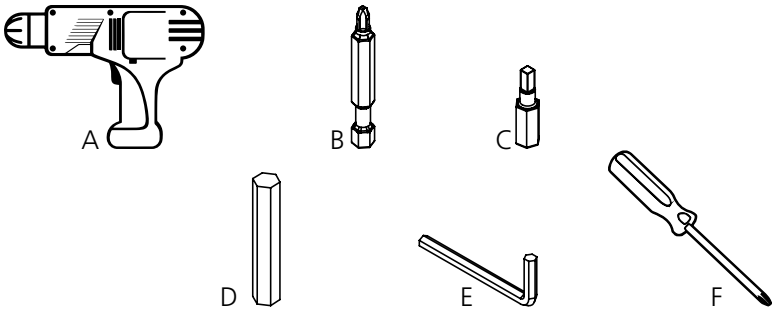


Hardware Included for Assembly *(may have extra)*

G. 3/8-16 x 1" Black Adjustable Glide *x4*
H. SlimFix Bolt for 5mm Hole Zinc *x24*
I. 5/16"-18x3/8" Button Socket Cap Screw *x4*
J. Peel and Stick Screw Cover Caps Black *x8*
K. 10 X 5/8" Round Washer Head Drive Screw *x64*
L. 8 x 3/4" Pan Head Recex Drive Screw *x4*
M. Cable Clamp 3/16 Black *x1*
N. 5/16-18- Weld Nut *x2*
O. 10-32 x 6"Ph Pan Hd Machine Screw *x4*
P. Grommet Insert *x4*

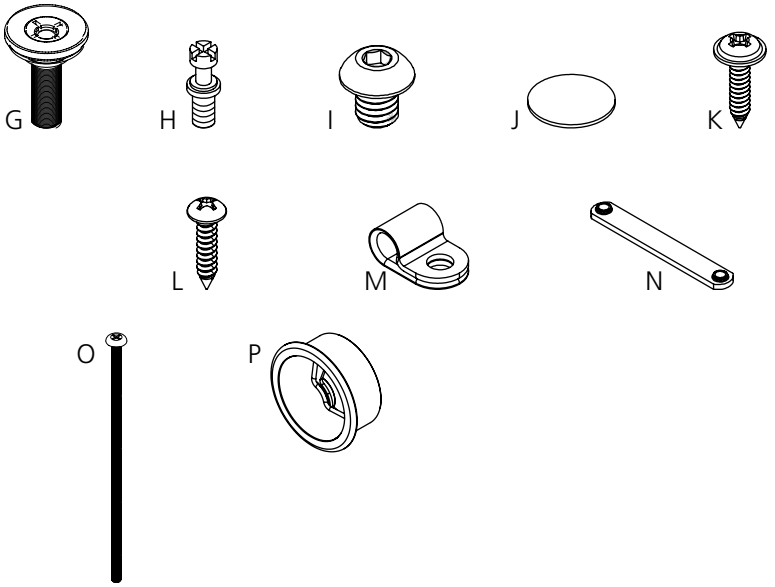



Parts


Q. Three Motor Control Box Including GyroSense *x1*
R1. Two Button Up/Down Switch *x1*
R2. Four Button Programmable Up/Down Switch *x1*
Optional - If you have a programmable switch, please refer to the installation instructions included with the switch.
S. U-Channel *x2* **(not incl. for 48" Presidente)**
T. Front Brackets *x2*
U. Support Covers *x2*
V. 3" x 5" plate *x2*

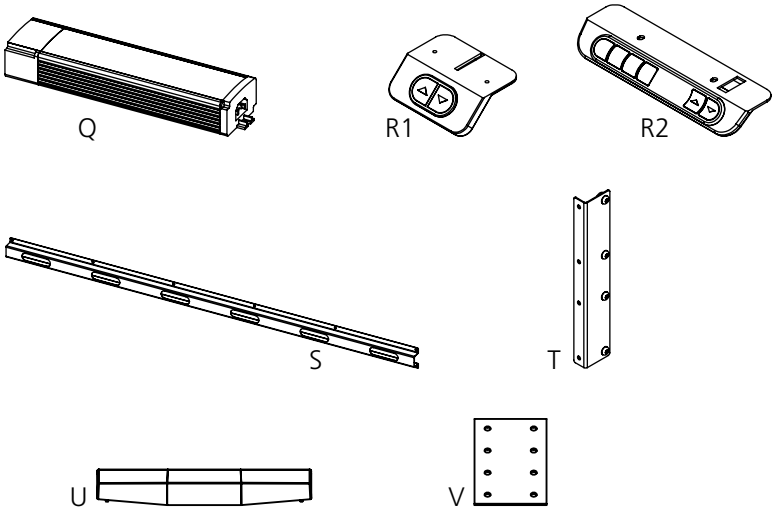


Step 1

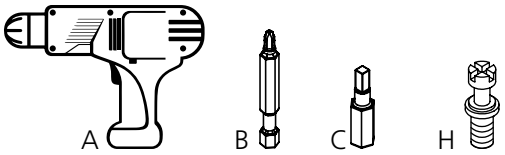
A
B
C
H

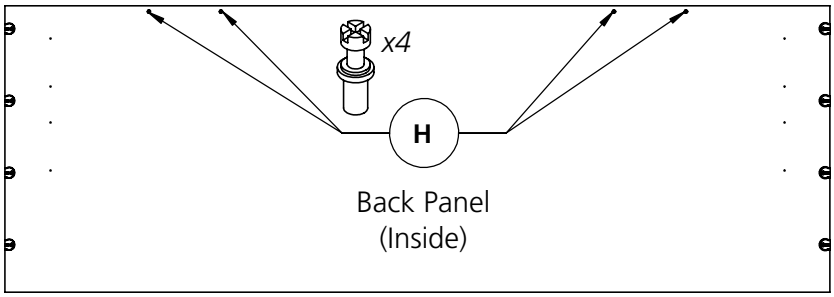

x4
H
Back Panel
(Inside)

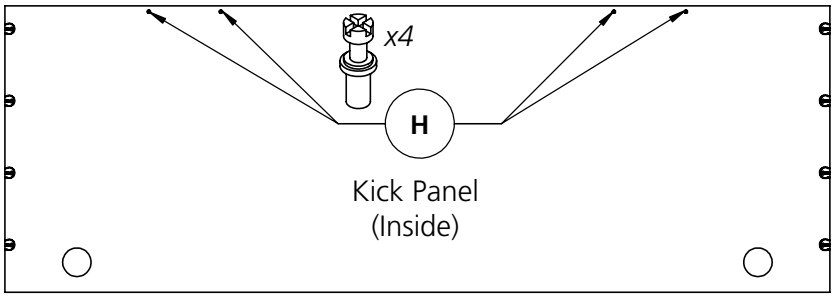

x4
H
Kick Panel
(Inside)


Step 2

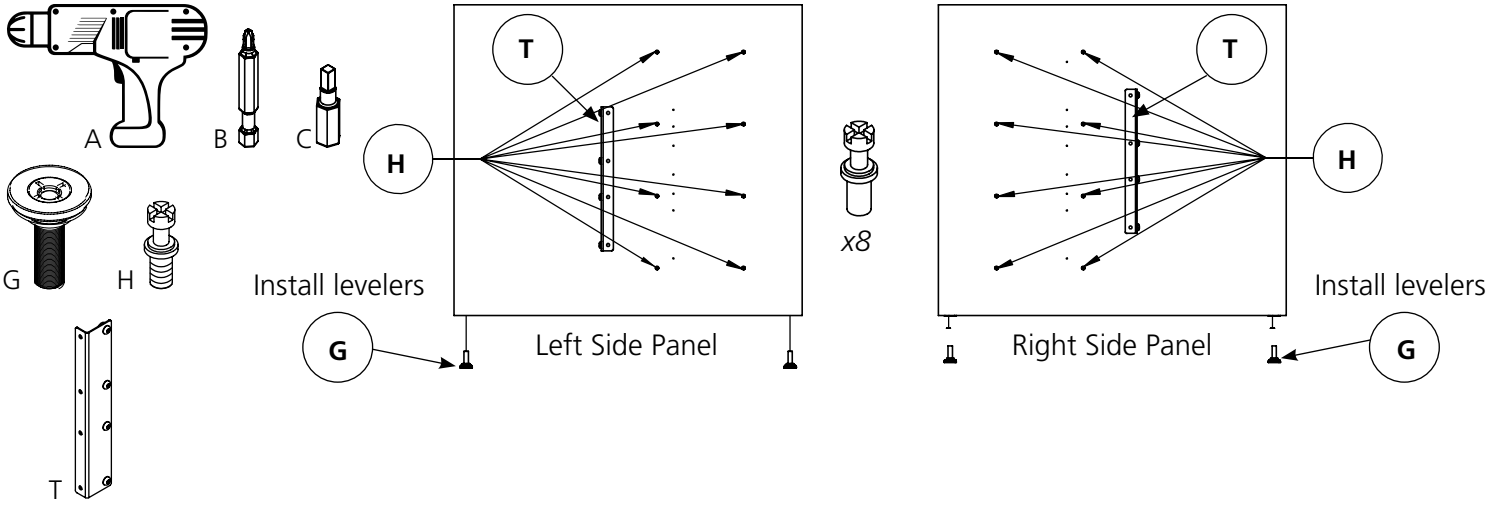
A
B
C
G
H
T
H
T
Install levelers
G
Left Side Panel
x8
T
H
Install levelers
Right Side Panel
G


Step 3

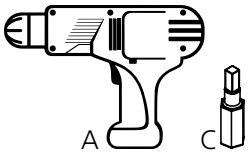

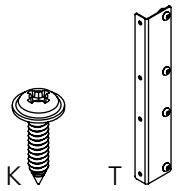

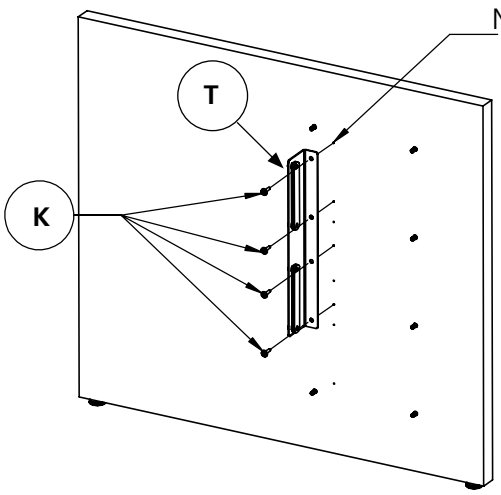




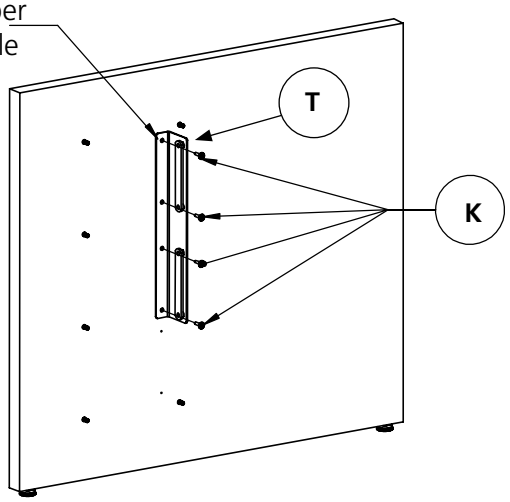


Step 4

- Tighten cams to join side panels to back panel.

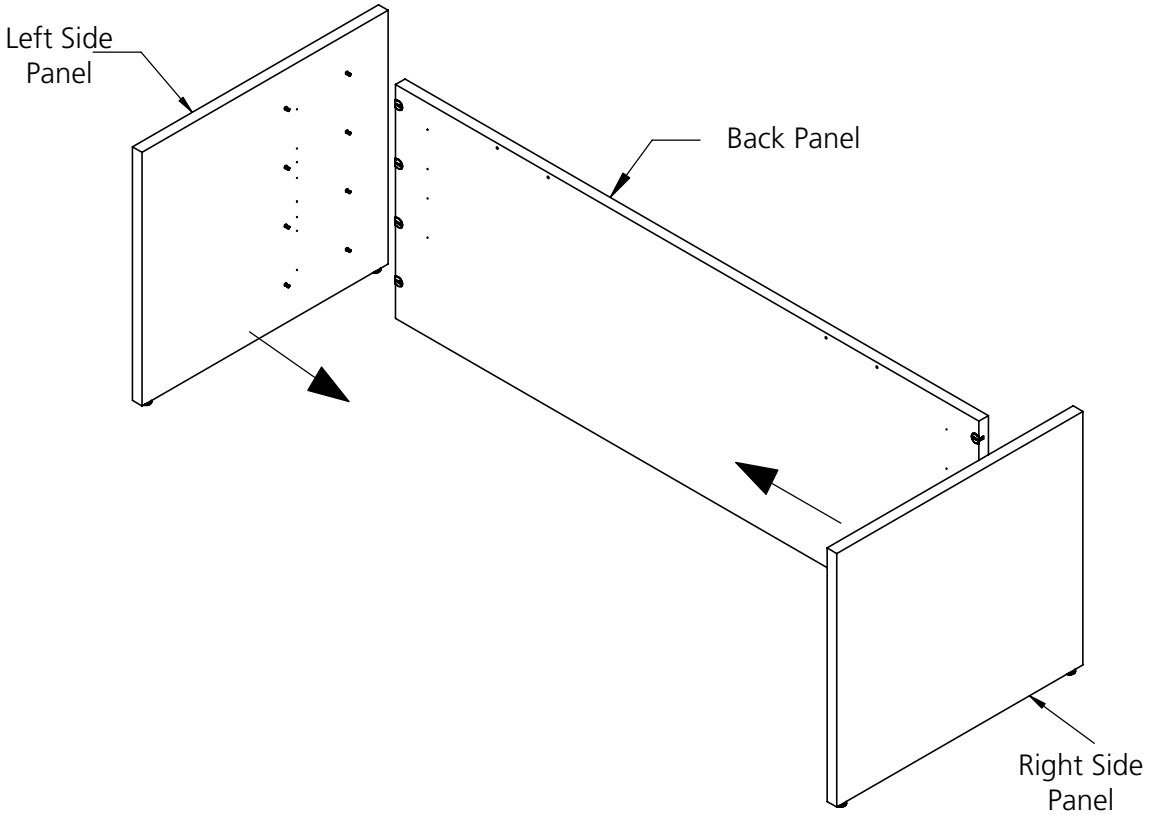


Step 5


- Slide the weld nuts on the side brackets into the grooves at the front of the columns.

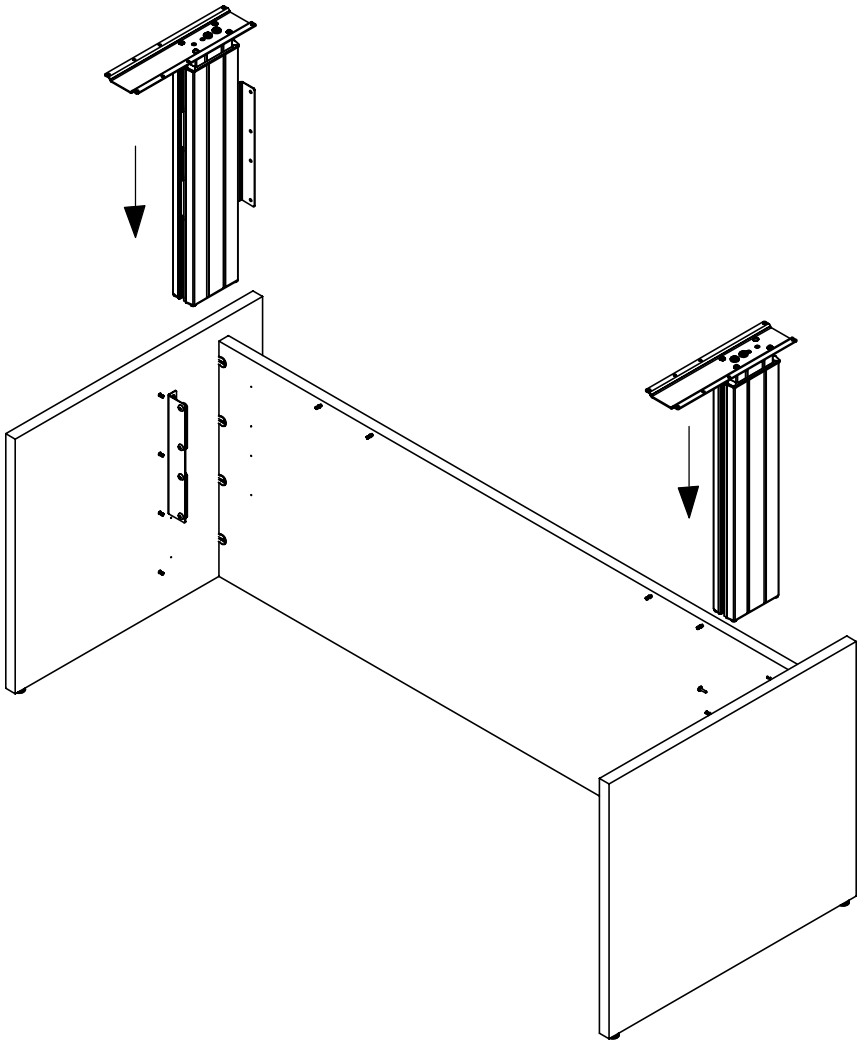

Step 6

- Drive the wood screws into the pilot holes. Then tighten the machine screws. Left hand shown. Right hand same.

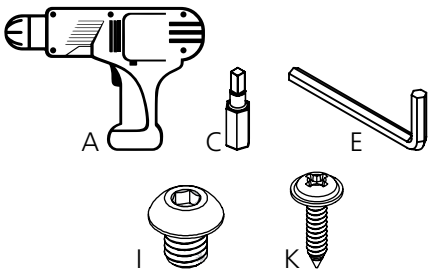


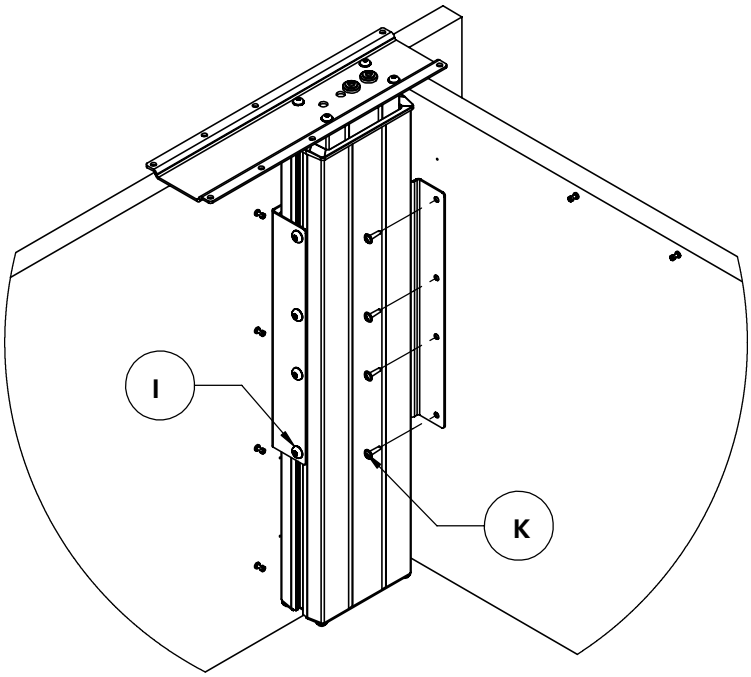


Step 7

- Tighten cam locks through holes in kick panel. Reversed direction.


Counter Clockwise = Tighten
Clockwise = Loosen

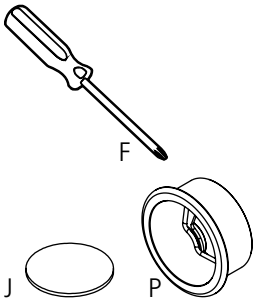

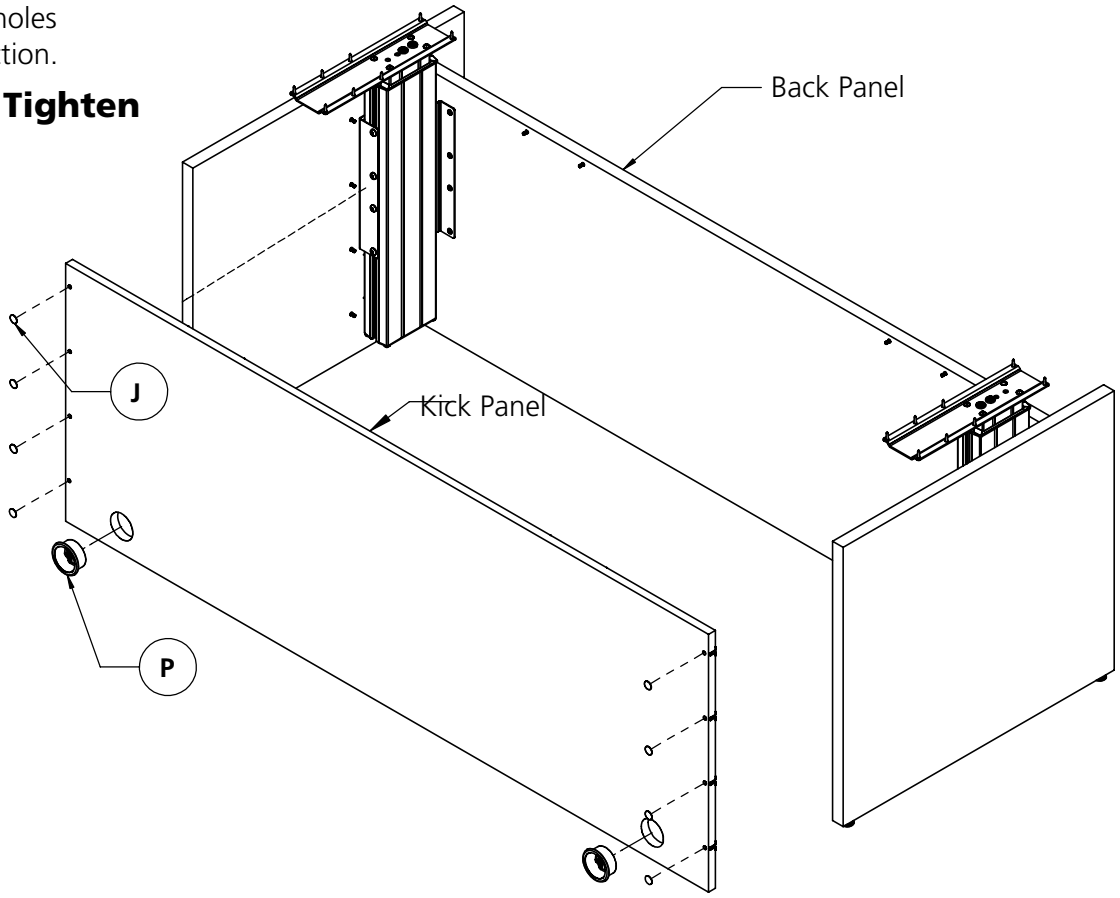

Step 8


- Slide the cross braces between the back panel and kick panel under the slim fix bolts.
- Raise up and engage the bolts into the cams. Tighten the cam locks.

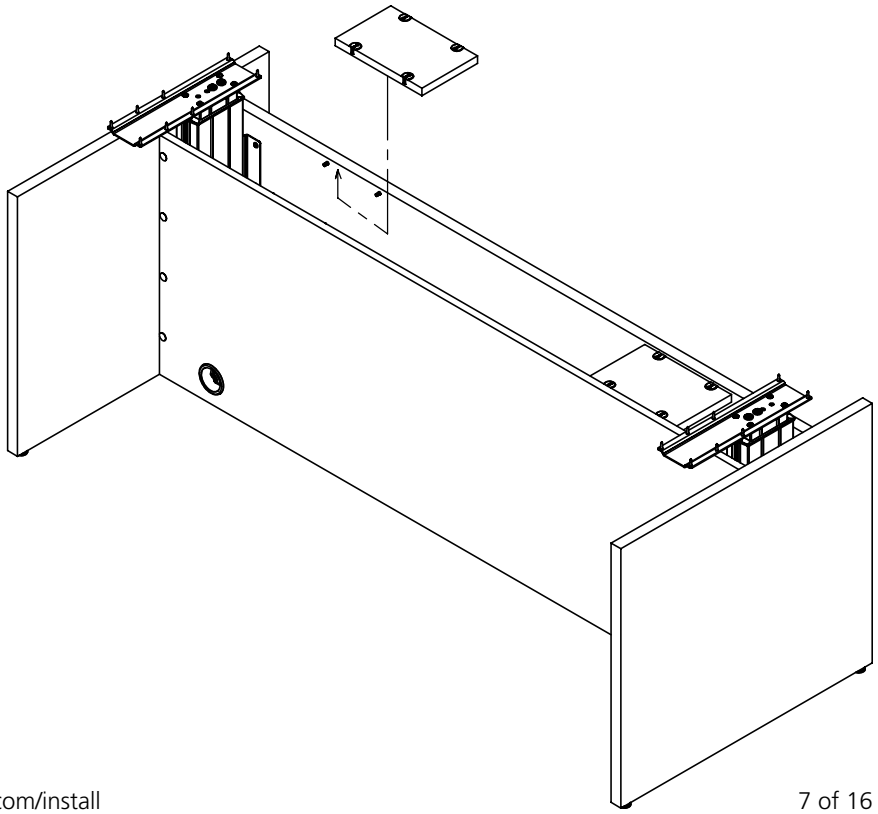

Step 9

Note: refer to modesty panel instruction #53901

- Install switch, u-channel, plates, and control box on the bottom of the worksurface.
- Note: Install modesty panel **(optional).** Refer to modesty panel instruction #53901.

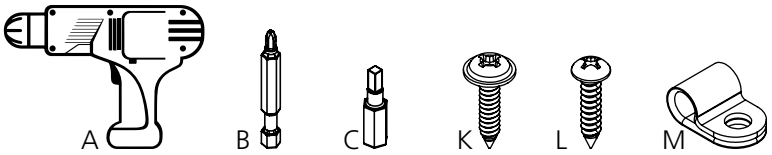


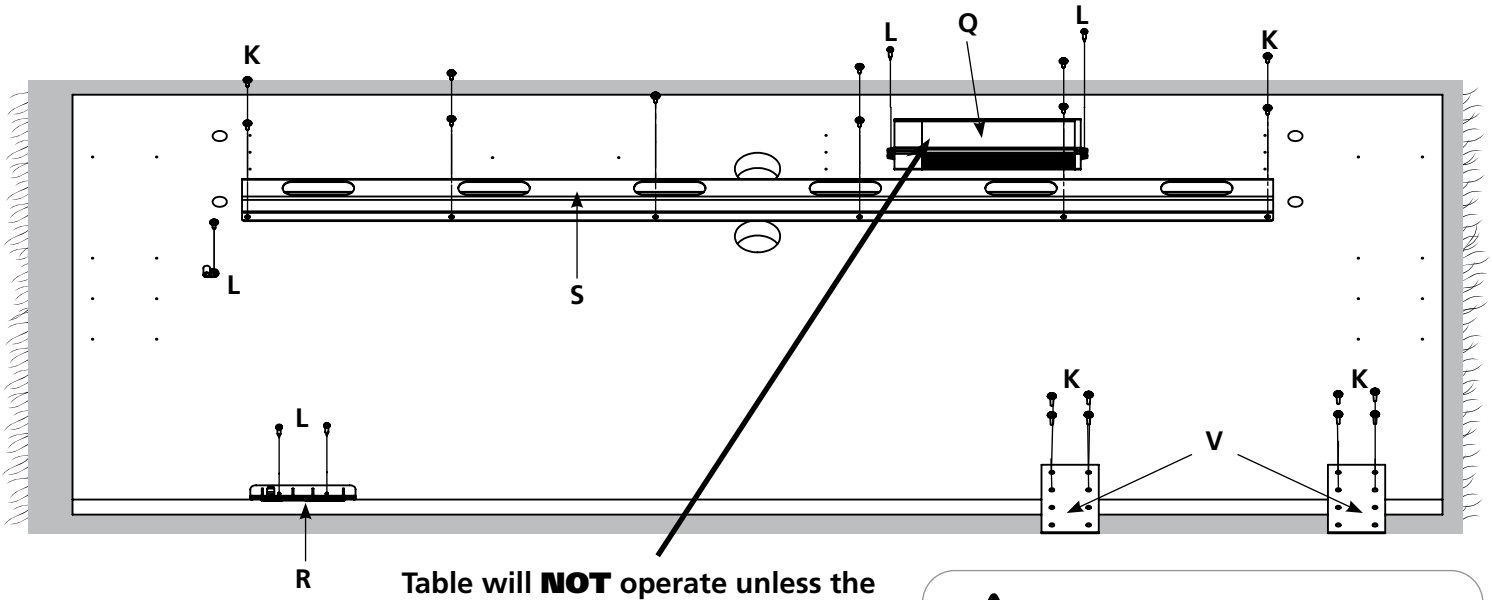



Table will NOT operate unless the control box is screwed tight into the table without any play.

48" Presidente does not get U-Channels due to it being shorter.

Step 10


- Assemble the return worksurface to the short foot leg.

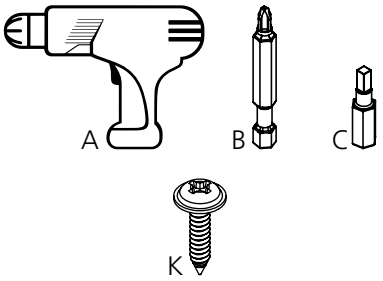

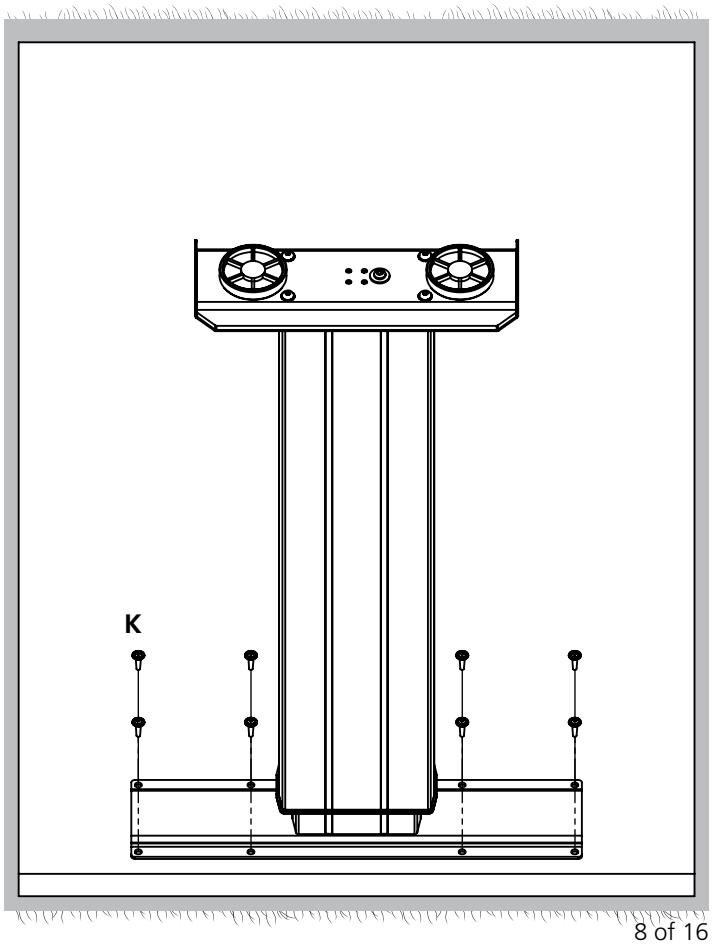


Step 11


- Just run the cables into the control box. They will get connected into the legs after Step 13.

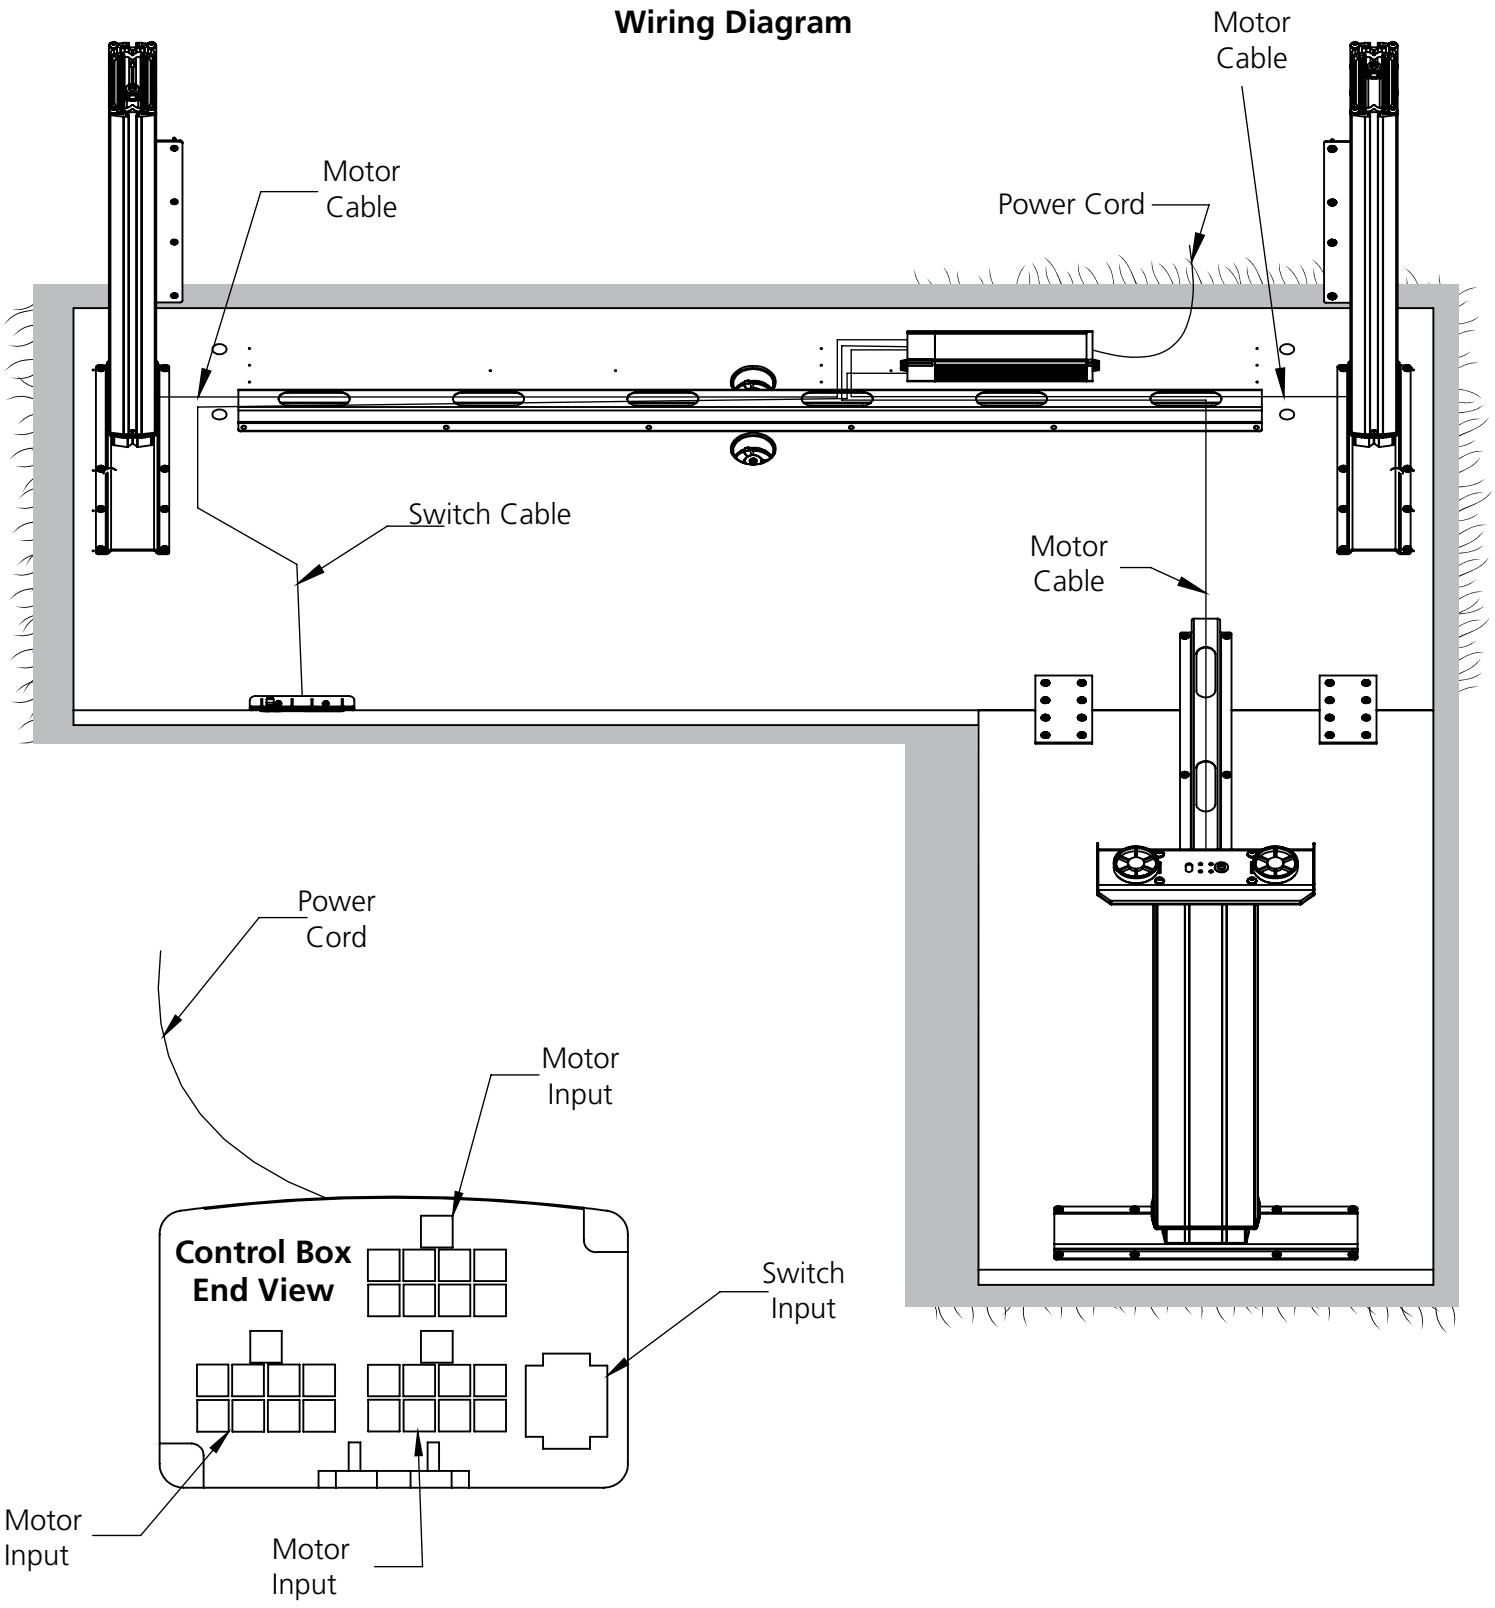

Step 12


- Set the main worksurface onto the main base.
- Attach each side with two screws as shown.
- After the unit is raised, put in all the leg support screws.

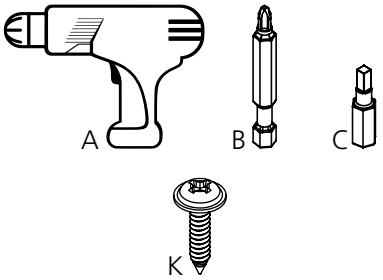


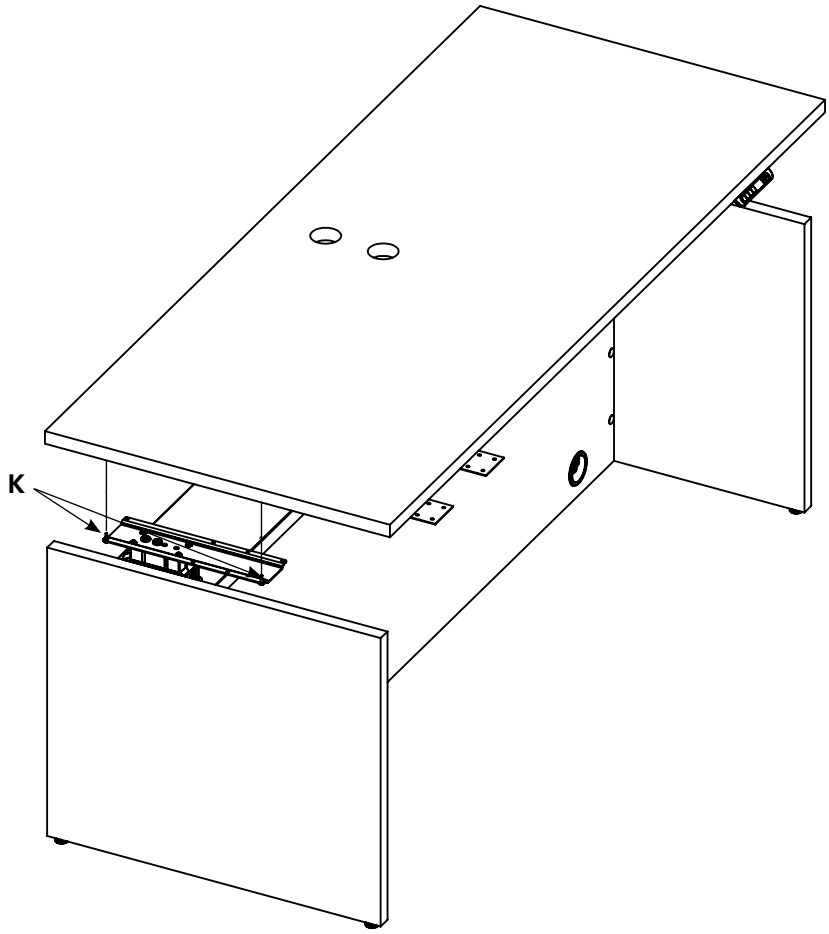

Step 13


- Attach the small worksurface to the main base with eight screws through plates **V**.
- Connect the cables into the legs as shown on Step 11.

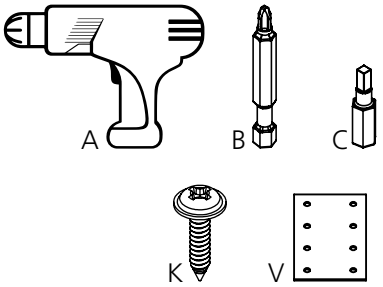


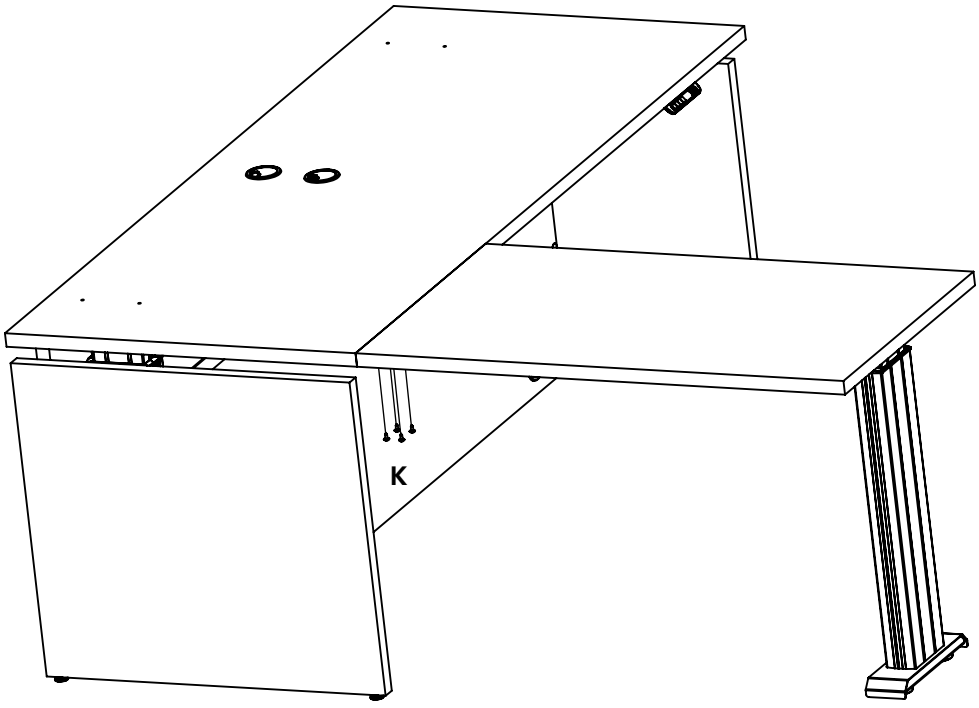

Step 14


- Attach the second u-channel to the worksurface using the screws as shown.

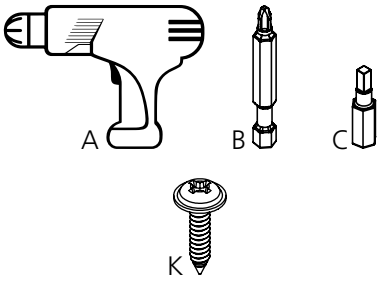


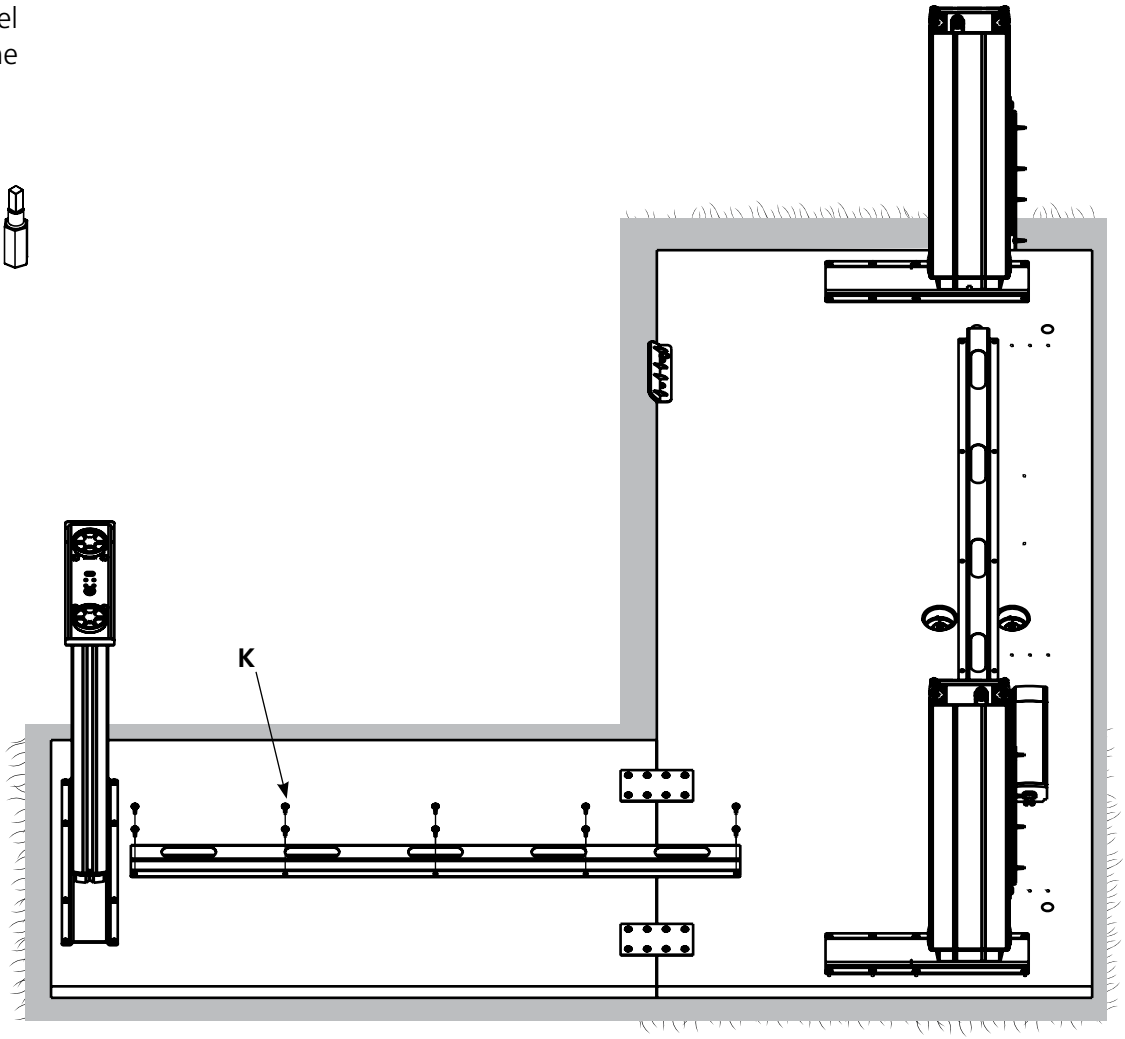

Step 15

- Attach the worksurface supports to the worksurface.
- Raise the table up using the switch.

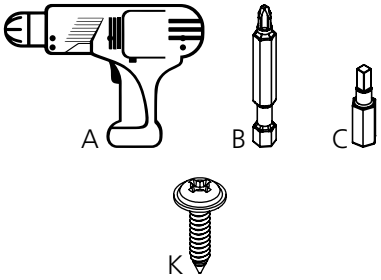


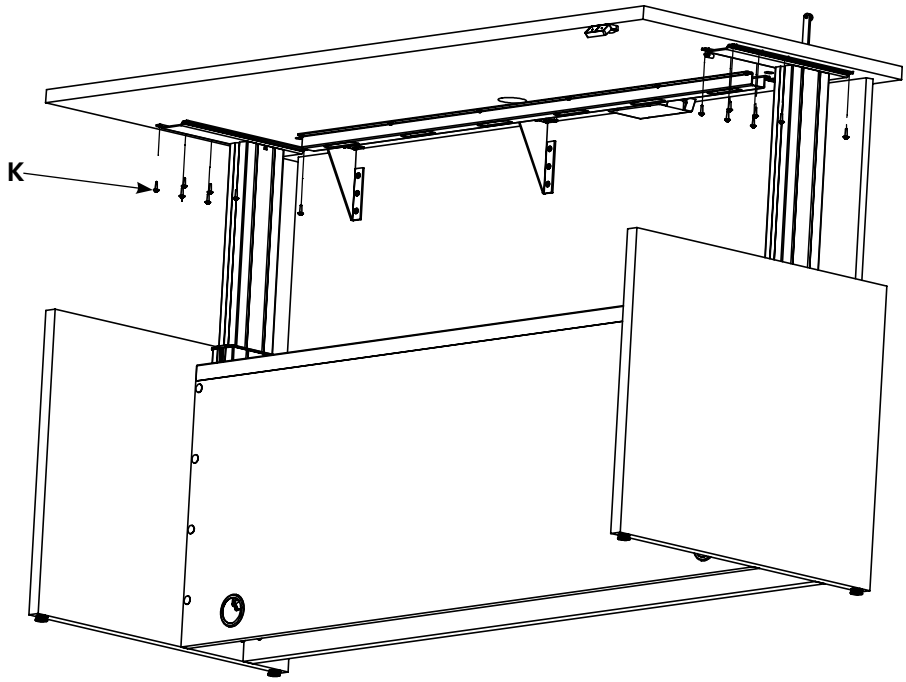



Step 16

- Loosely install weld nuts and bolts to back side of cross support, slide into short aluminum extrusions.


Note: return worksurface NOT shown for assembly clarification.

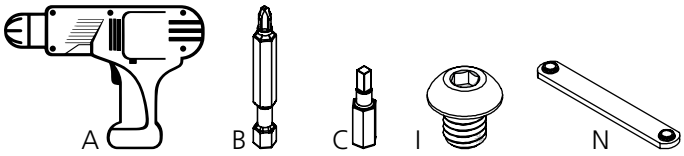

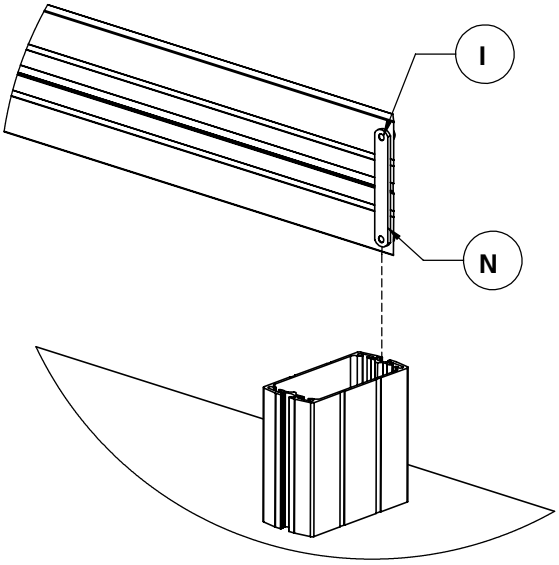


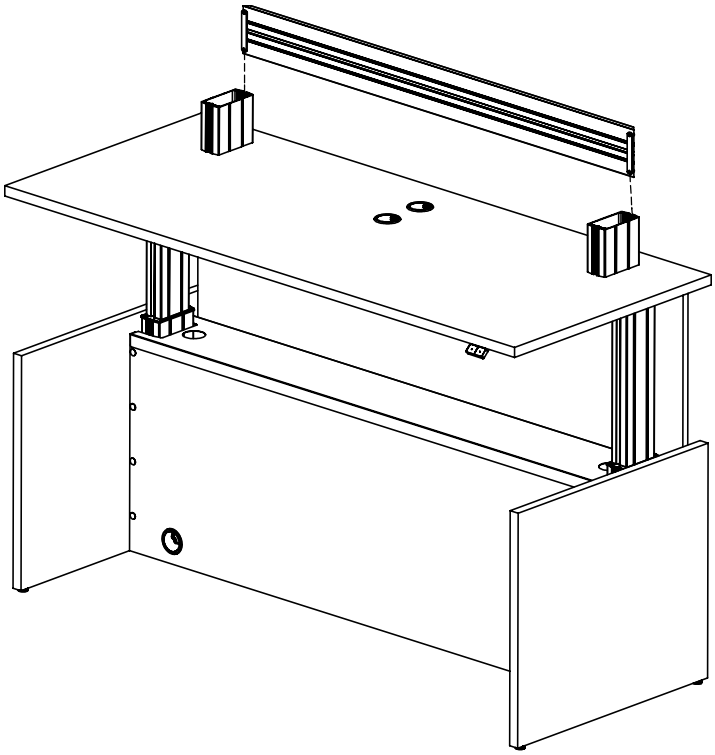


Step 17

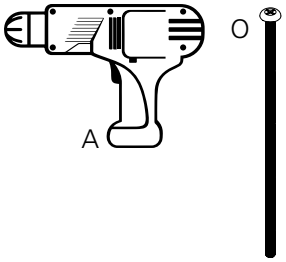


Note: return worksurface NOT shown for assembly clarification.

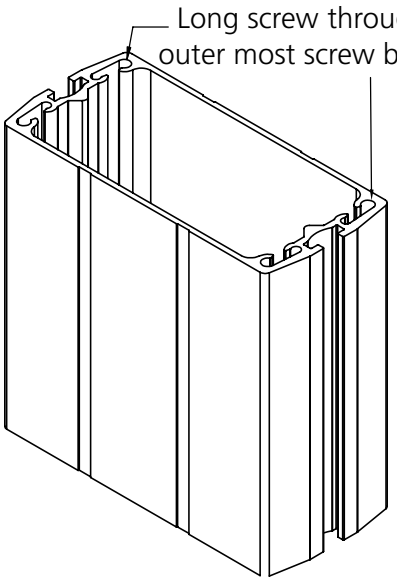


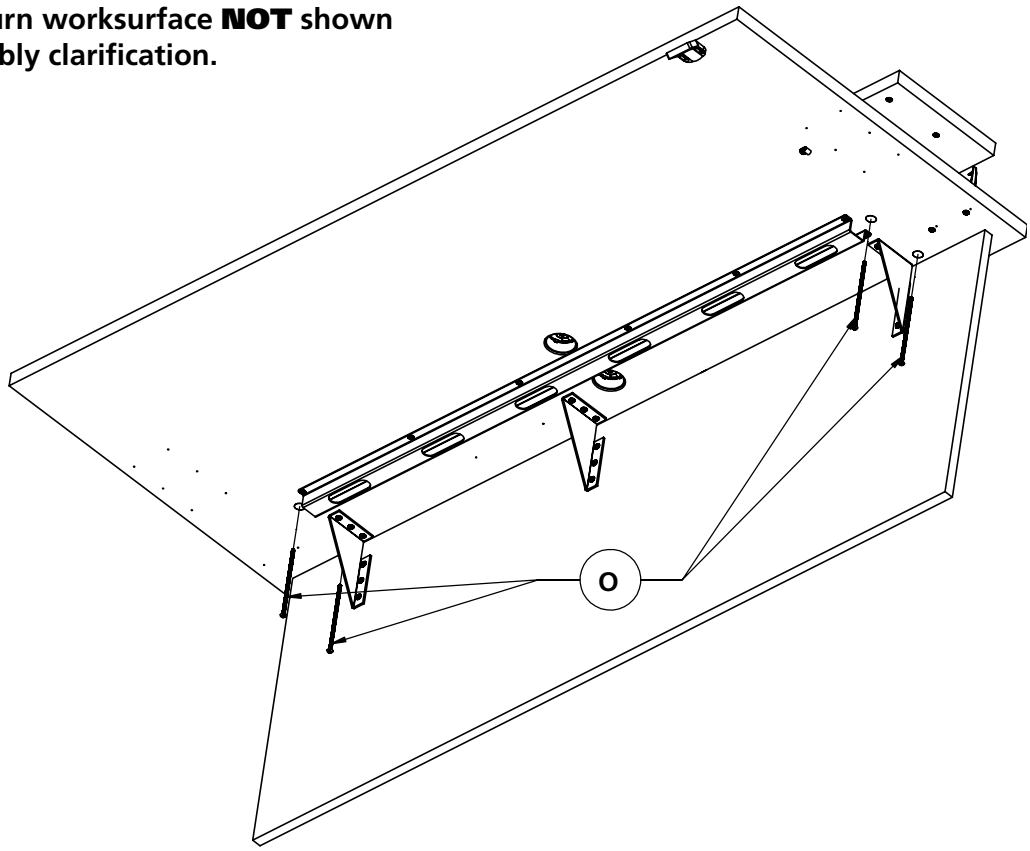

Step 18

- Do not tighten screws until all are installed. Once all screws are installed, tighten four cross support screws and four long screws.

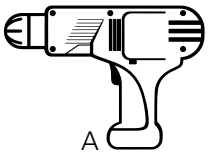


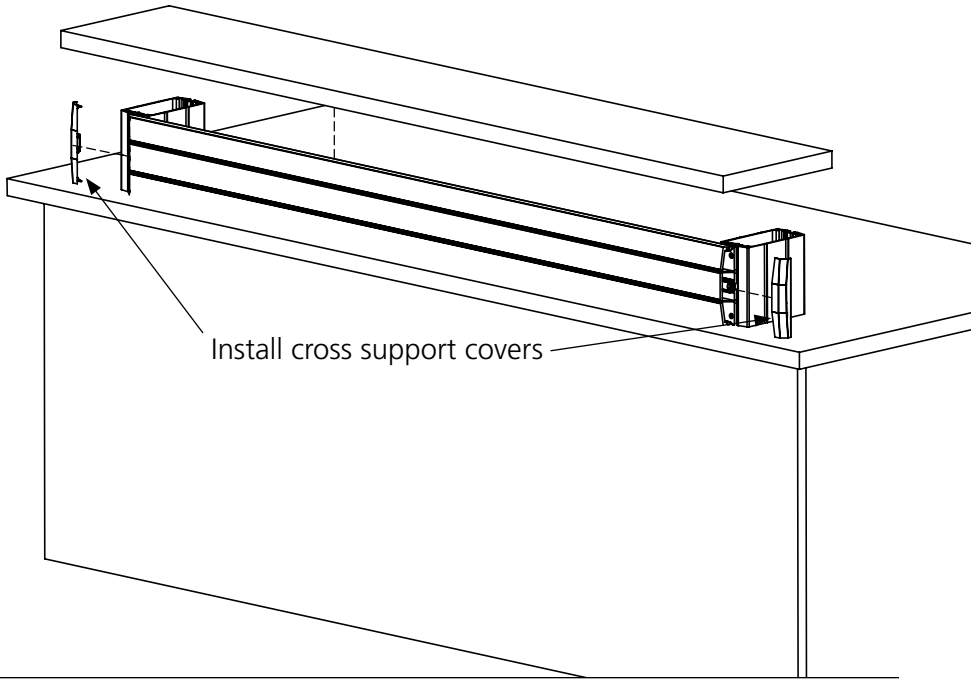


Step 19

- Install divider cover and worksurface grommet insert.


Note: return worksurface NOT shown for assembly clarification.

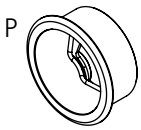

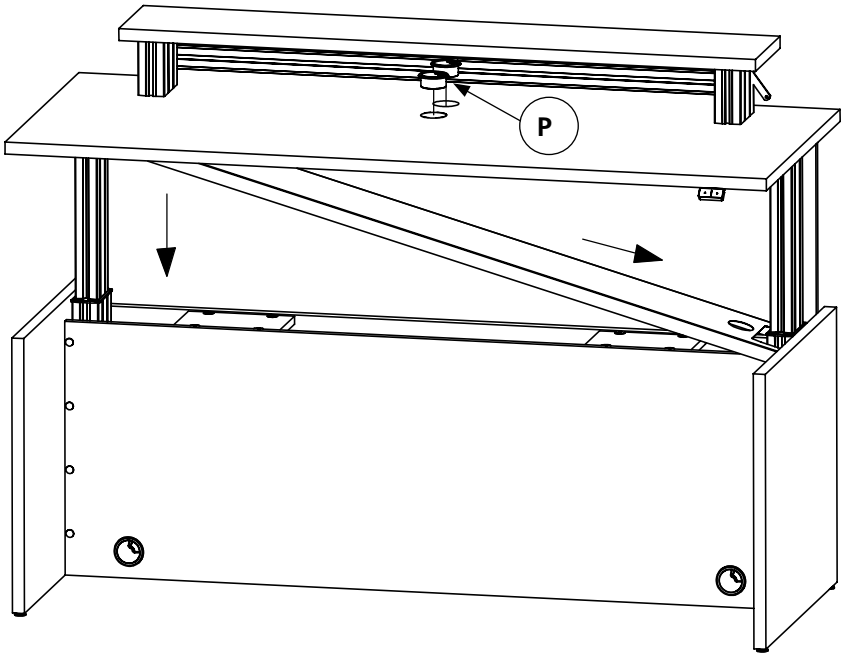

Step 20


- Lower table to lowest position to reset.

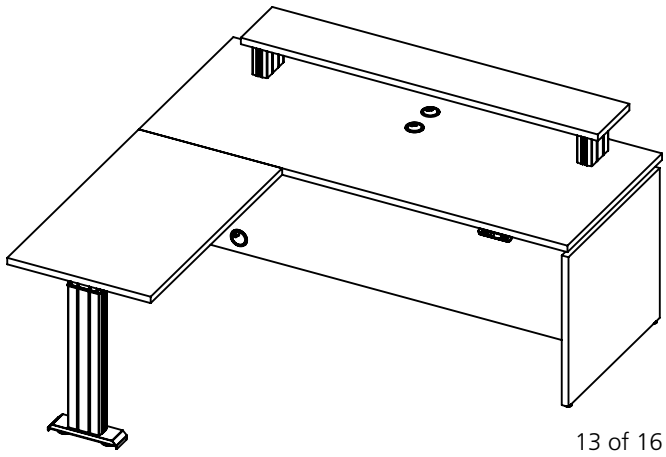

Note

If the leg assemblies are at uneven heights, it is usually caused by an improperly installed hex rod. Disassemble one of the leg assemblies from the worksurface and make sure both ends of the hex rod are properly engaged in the hex drives near the top of the leg assemblies.

Standard Switch ✂ Save for Reference

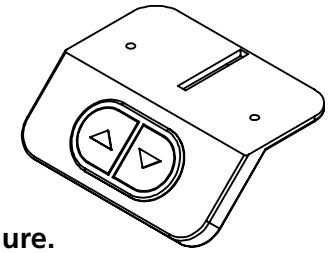

Start Up Procedure:

- Plug the power cord into a standard 110V receptacle. A power surge protector is recommended.
- Press the down arrow until the worksurface reaches its lowest position.
- The workstation is ready for use.
- **If the table is not functioning normally or has lost power, perform the reset procedure.**

Reset Procedure:

- Unplug the unit from the wall for 10 seconds.
- Clear all obstructions from the travel path of the desk.
- Plug the unit back in the wall.
- Press and hold the down arrow key until the table reaches its lowest position.

Add Container Stops:

- Move the table ▲▼ to the upper or lower desired height.
- Rapidly press ▲ 4 times. You will hear a musical tone. ♪
- Rapidly press ▼ 2 times. A musical tone plays two times. ♪♪
  - To **add** the **upper** container stop press ▲ A musical tone plays two times. ♪♪
  - To **add** the **lower** container stop press ▼ A musical tone plays two times. ♪♪


Remove Container Stops:

- Move the table ▲▼ to the upper or lower **preset** height.
- Rapidly press ▲ 4 times. You will hear a musical tone. ♪
- Rapidly press ▼ 2 times. A musical tone plays two times. ♪♪
  - To **delete** the **upper** container stop press ▲ You will hear a musical tone. ♪
  - To **delete** the **lower** container stop press ▼ You will hear a musical tone. ♪

Troubleshooting:

If you are having any problems with the operation, contact RightAngle Products at **800.298.4351** or **orders@raproducts.com**

Optional Programmable Switch (full instructions packaged with switch)

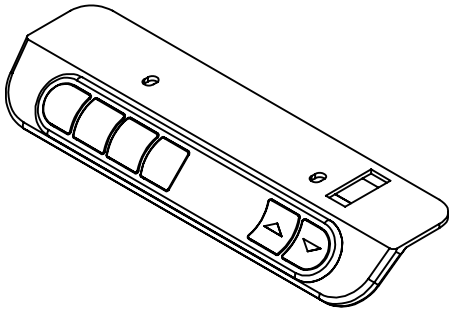

Start Up Procedure:

- Plug the power cord into a standard 110V receptacle. A power surge protector is recommended.
- Press the down arrow until the worksurface reaches its lowest position.
- The workstation is ready for use.
- **If the table is not functioning normally, or has lost power, perform the reset procedure.**

Reset Procedure:

- Unplug the unit from the wall for 10 seconds.
- Clear all obstructions from the travel path of the desk.
- Plug the unit back in the wall.
- Press and hold the down arrow key until the table reaches its lowest position

See Packaged Instructions for Programmable Options

Mechanical Reset Mode

If the table is unresponsive, uneven, or not functioning properly, perform a manual reset.
User settings are not reset in this process.

There are three methods to reset a workstation:

Reset Method A

1. Clear all obstructions from the travel path of the workstation
2. Disconnect the power to the control box for 30 seconds.
3. Reconnect the power
4. Press and hold the ▼ until the workstation has reached its lowest possible position.

Reset Method B (4 button programmable switch required)

1. Clear all obstructions from the travel path of the workstation
2. Quickly press ▲ + ▲ + ▲ + ▲ to enter the menu mode.
3. P01 is displayed and you will hear a musical tone ♪
4. Press the ▲▼ to navigate the menu.
5. Navigate to the P09 display
6. Press the 1 button to enter or accept
7. Press and hold the ▼ until the workstation has reached its lowest possible position.

The workstation is now ready to operate

Reset Method C - 2 Button Switch

1. Clear all obstructions from the travel path of the workstation
2. Quickly press ▲ + ▲ + ▲ + ▲ to enter the menu mode.
3. You will hear a musical tone. ♪
4. Press ▼ + ▼ + ▼ + ▼
5. You will reach the limit adjustment menu and hear four musical tones. ♪ ♪ ♪ ♪
6. Press and hold the ▼ until the workstation has reached its lowest possible position.

The reference is re-calibrated, the table should be leveled and the height indication should be correct.