




**NewHeights™ Series 4 Eficiente LT 2-Leg Workstation**  
Warranty: [raproducts.com/warranty](http://raproducts.com/warranty)



**READ ALL INSTRUCTIONS BEFORE USING THIS PRODUCT.**

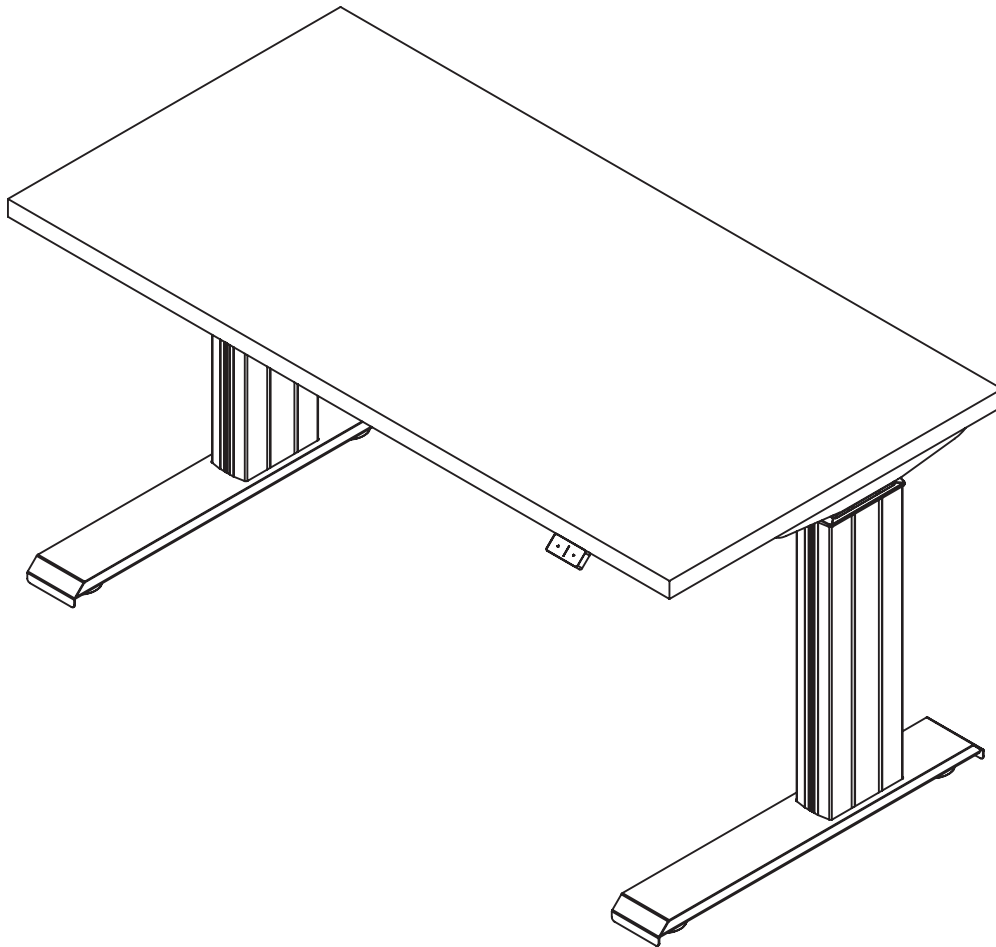

**USE THIS PRODUCT ONLY AS INSTRUCTED.  
FAILURE TO COMPLY WITH ALL INSTRUCTIONS AND WARNINGS  
MAY RESULT IN SERIOUS PROPERTY DAMAGE OR BODILY INJURY.**

**Basic Safety Instructions**


1. **Intended Use.** This Product is exclusively designed for use as indoor office furniture in compliance with all instructions and safety warnings in the user manual. Any different use, or use extending beyond the intended use, may result in property damage or bodily injury and is prohibited. This Product should not be used, operated or maintained with additional components not authorized by K&A Manufacturing, Inc.

**BY USING THIS PRODUCT OR ANY FEATURE OF THIS PRODUCT, YOU AGREE TO COMPLY WITH ALL PRODUCT TERMS AND POLICIES, INCLUDING WITHOUT LIMITATION ANY SAFETY WARNINGS AND INSTRUCTIONS, PROVIDED BY K&A MANUFACTURING, INC. AND ITS AFFILIATES. K&A MANUFACTURING, INC. SHALL ASSUME NO LIABILITY FOR ANY DAMAGE OR INJURY CAUSED BY USE OF THE PRODUCT A) IN VIOLATION OF ANY SAFETY WARNINGS OR INSTRUCTIONS; B) NOT AUTHORIZED BY K&A MANUFACTURING, INC.; OR C) BY EVENTS BEYOND K&A MANUFACTURING, INC.'S CONTROL.**



**DO NOT SIT, STAND OR CRAWL ON OR UNDER THE PRODUCT.  
MAKE SURE NO OBSTACLES ARE IN THE PRODUCT'S PATH.  
MAKE SURE ALL CORDS ARE LONG ENOUGH TO ACCOMMODATE ANY CHANGE IN HEIGHT.  
DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.**

2. **Electrical Height Adjustment.** The height of this Product may be adjusted electronically. Contact with electrical voltage may cause serious injury and death. Only use the Product in compliance with these instructions. This Product should not be used in environments with high levels of humidity or moisture.

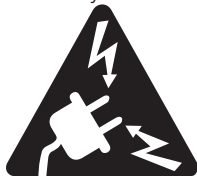

**KEEP CORDS AND ELECTRICAL COMPONENTS AWAY FROM HEAT AND LIQUIDS.  
DO NOT OPEN ANY OF THE COMPONENTS: CONTROL BOX OR KEYPAD.  
DO NOT USE WITH A DAMAGED PLUG OR CORD.  
DO NOT INSERT ANYTHING INTO ANY SEAM OR OPENING.**

3. **Setup and Use.** This Product should only be used and operated in good condition. When in use, no one should sit, stand or crawl on or under the Product. There is a danger of crushing, shearing, injury or damage. Keep the entire range of motion of the Product clear of all obstacles. Devices and object on the Product can tip over, fall or be crushed by the Product.



**KEEP HANDS AND FINGERS CLEAR.  
KEEP ALL OBSTACLES CLEAR OF THE PRODUCT'S PATH.**


4. **Users.** This Product is not intended for use with children, individuals with restricted physical, sensory or mental capabilities, or individuals who lack experience or knowledge, unless they are supervised by a person who is responsible for their safety or they have received instructions from a person who is responsible for their safety concerning how the Product must be used. Children should be closely supervised to ensure that they do not play with the Product and its height adjustment mechanism to avoid risk of physical injury or electric shock.



**KEEP CHILDREN AWAY FROM THE PRODUCT, ITS CONTROL UNITS, AND KEYPADS.**





## Tools Required for Assembly

- A. Power Driver with Adjustable Torque
- B. Tape Measure
- C. #2 Phillips Head Driver Bit
- D. #2 Square Head Drive Bit (**Recommended**)

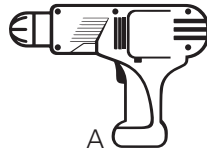








## Hardware and Tools Included for Assembly (may have extra)

- E. 5/8" Wood Screw x42
- F. 1/4"x 5/8" Bolt x2
- G. Lock Washer x2
- H. 3/4" Wood Screw x4
- I. Cord Clip x4
- J. 5/16 -18 x 3/8" Cap Screw x4
- K. Cross Support End Cap x2
- L. Wire Management x1
- M. 6mm Hex Rod Wrench x1




## Parts


- N. Cross Support x1
- O. U-Channel x1
- P. Hex Rod x1
- Q. Switch x1
- R. Control Box x1
- S. Power Cord x1
- T. Motor x1
- U. Left Leg x1
- V. Right Leg x1

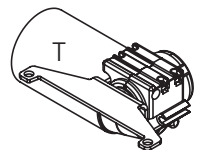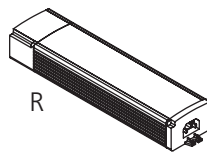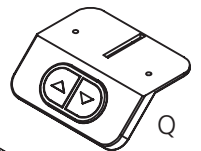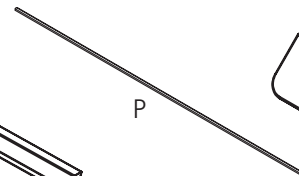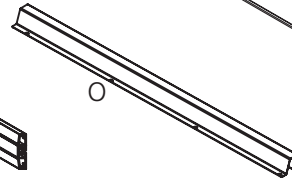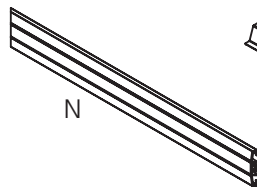

Note: Hole for hex drive faces inside of table

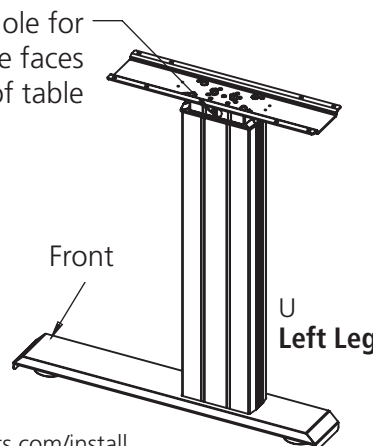


Note: Hole for hex drive faces inside of table

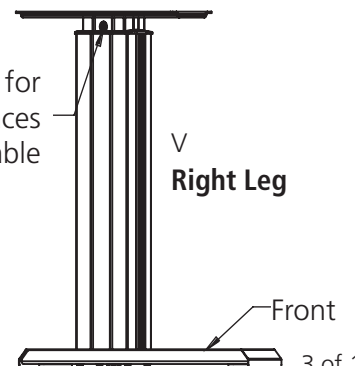

**Important:** Please be aware that 5/8" screws are provided. If your worksurface is 5/8" or thinner, you will need to supply your own hardware.



## Step 1

- Lay the worksurface on a protected surface with pilot holes facing up.
- Insert hex rod through motor assembly and into left leg drive input hole.
- If hex rod in the motor is not aligned properly with drive input, turn hex rod clockwise 1/6<sup>th</sup> or 1/3<sup>rd</sup> of a turn using the motor.
- Hex rod should slide into leg.

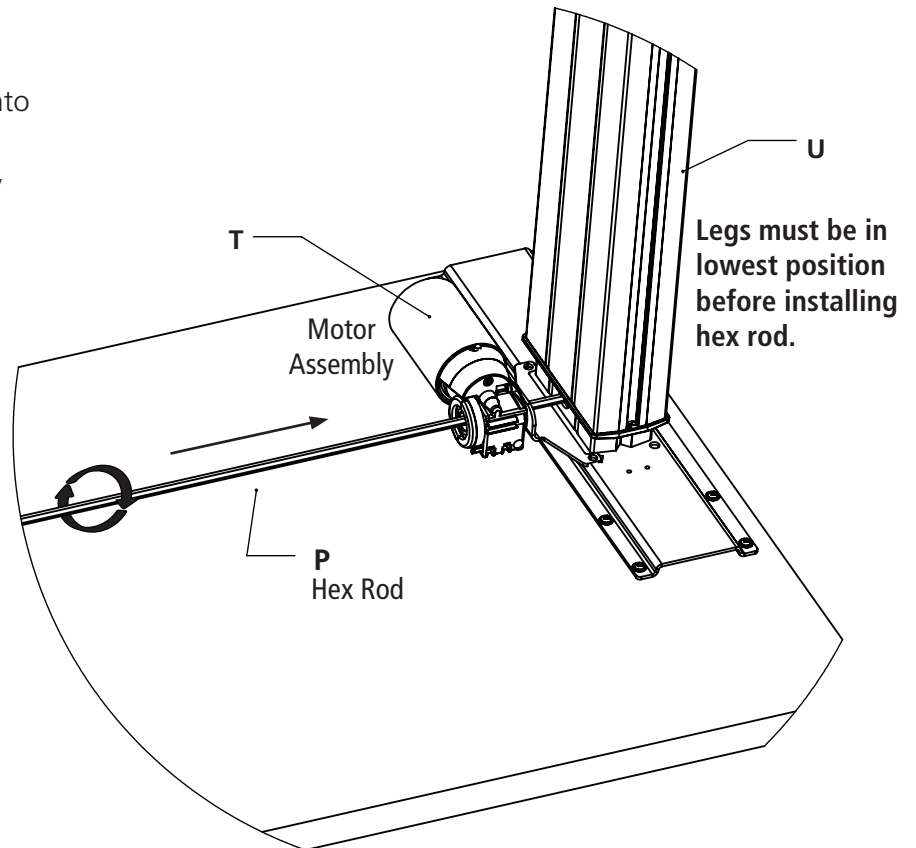


## Step 2

- Install bolts and washers through the motor bracket and into the leg.

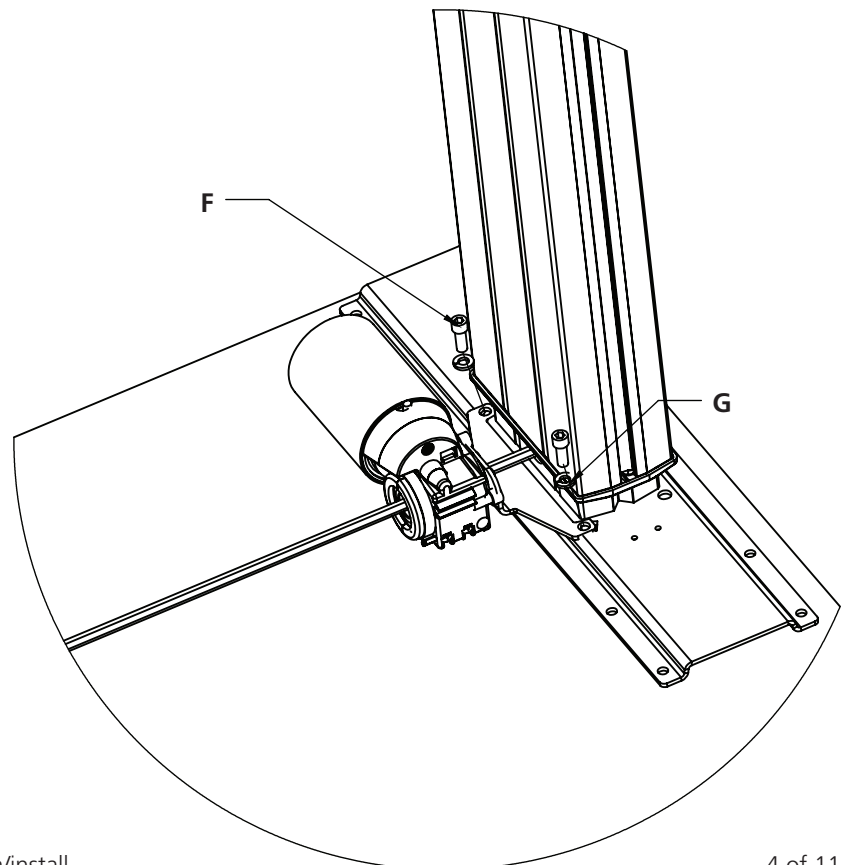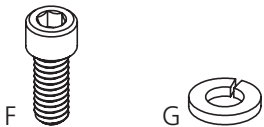



### Step 3

- Align hex rod with right leg drive input.
- Turn hex rod counter clockwise  $1/6^{\text{th}}$  or  $1/3^{\text{rd}}$  of a turn with the wrench, if it is not aligned properly with drive input.
- Slide hex rod into right leg and align leg with pre-drilled holes in the worksurface.

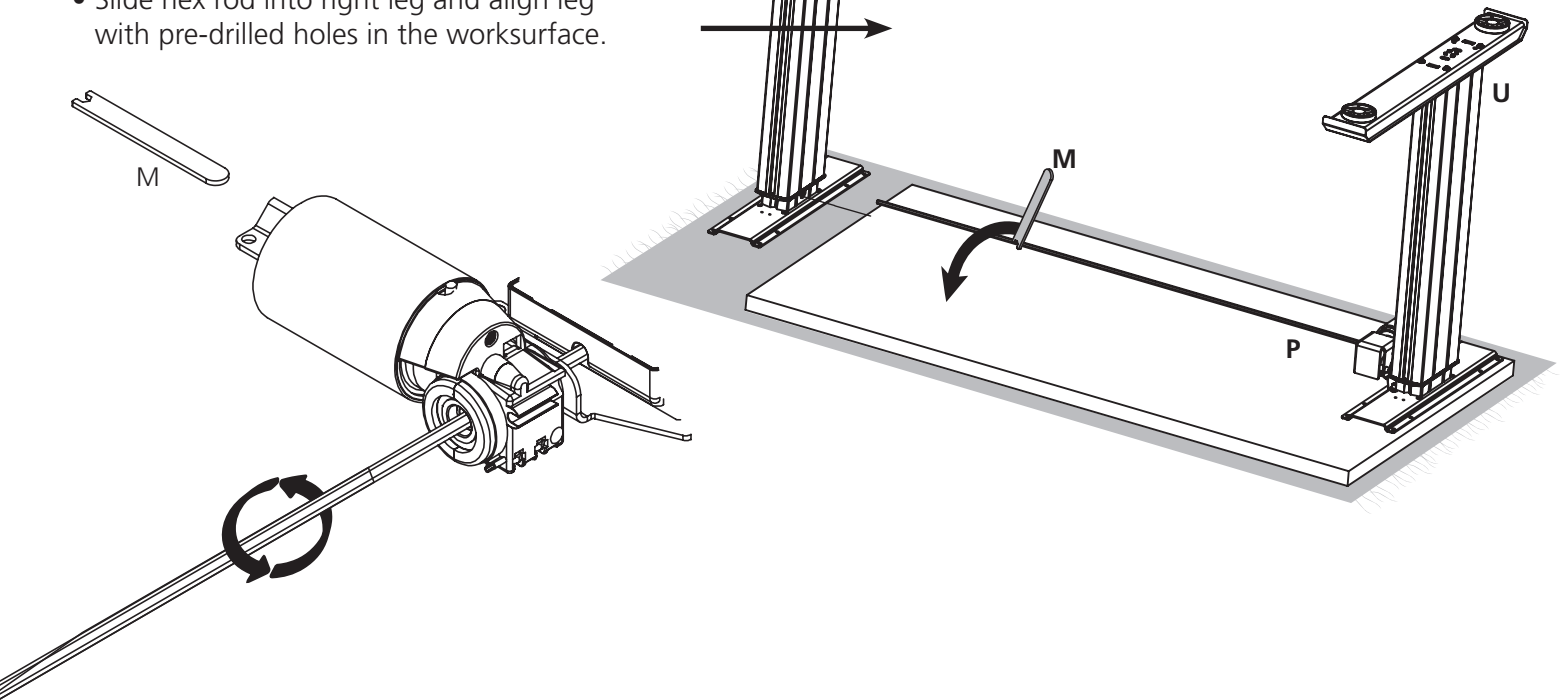



### Step 4

- Align the cross support over the leg stickers and install the cap screws. Make sure that the cross support is level and fully tighten.
- Insert the end caps into the ends of the cross support.

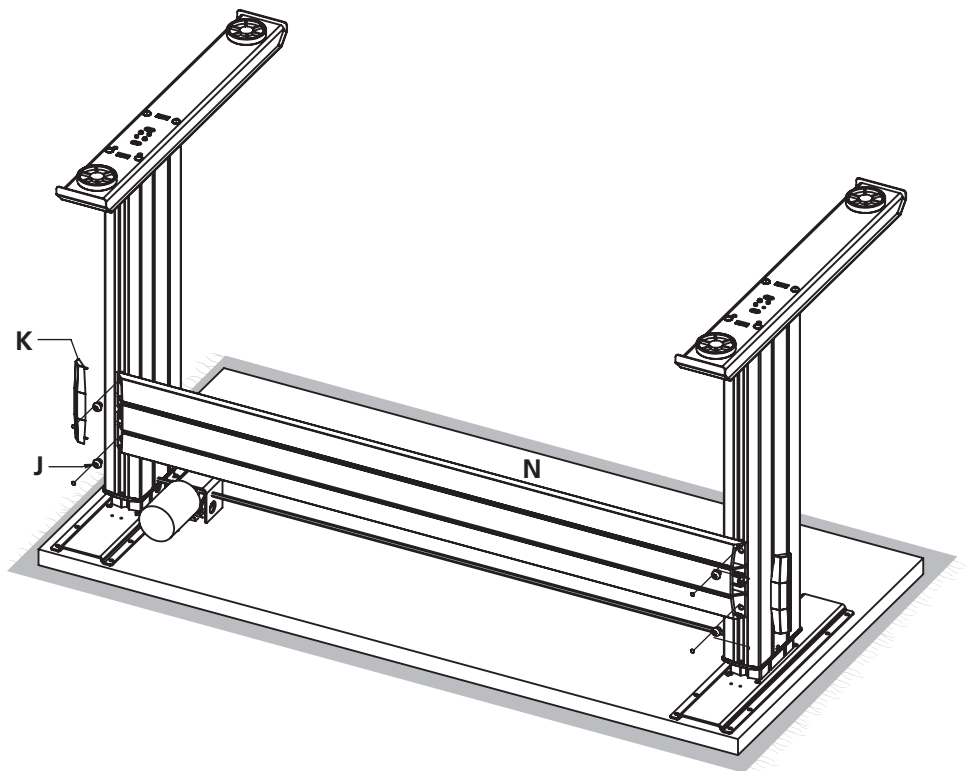



## Step 5

- Set the legs over the worksurface pilot holes. Attach the legs with the wood screws and fully tighten.

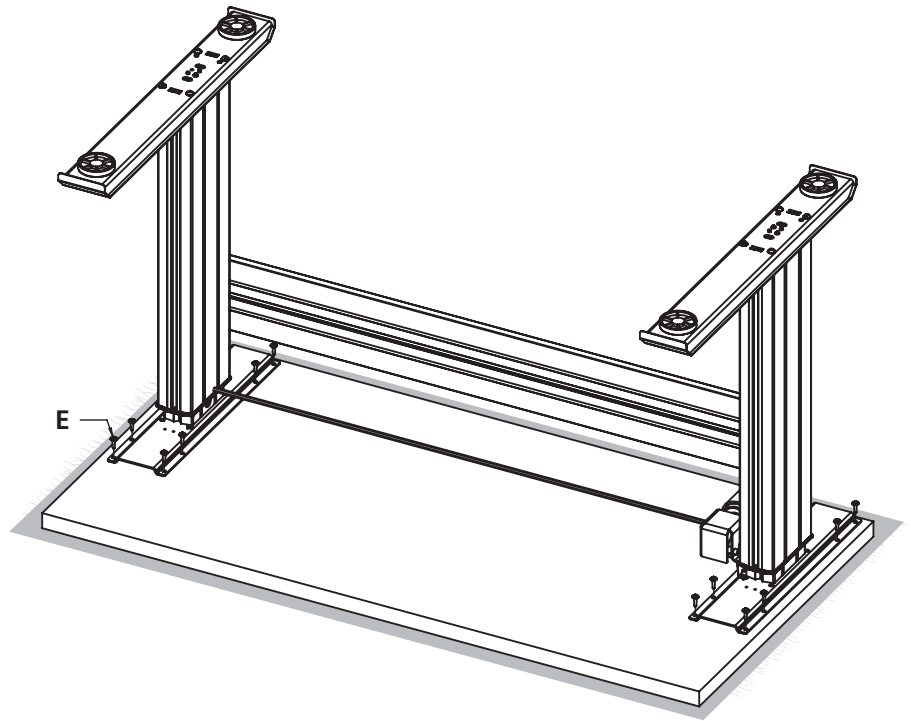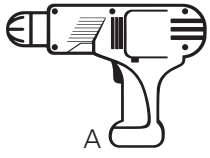

## Step 6


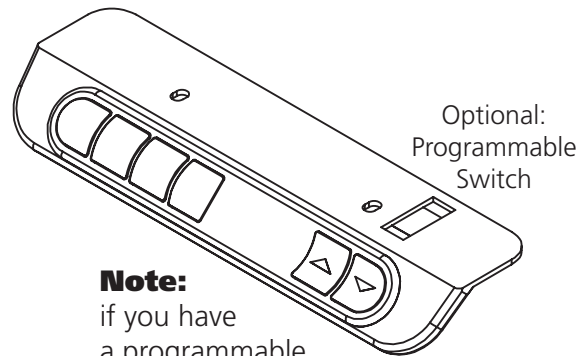
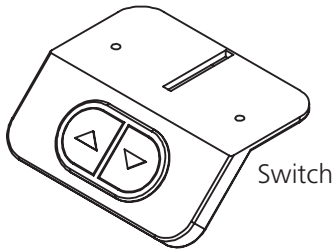


**Note:**  
if you have  
a programmable  
switch (shown), please refer  
to the installation instructions  
included with the switch.

## Step 7

- Install the wire management, control box, switch, clips, and U-channel.



**Note:** The control box, switch and clips can be installed in any location, wire lengths permitting.

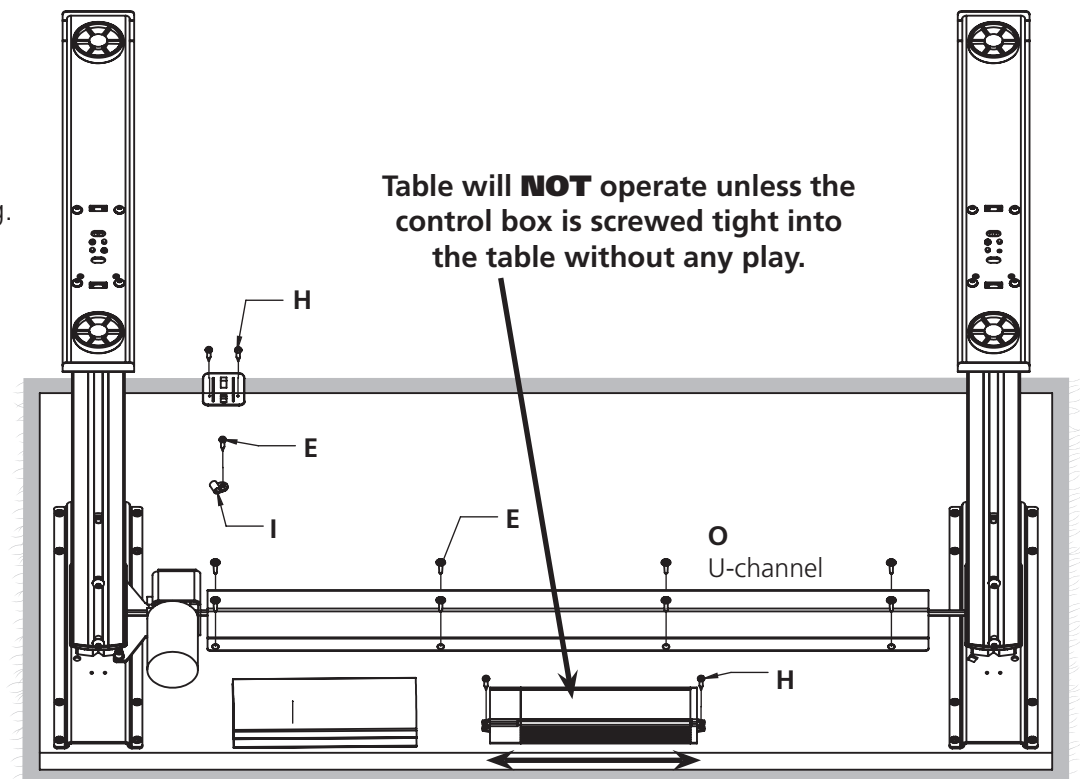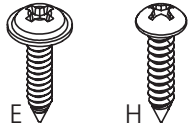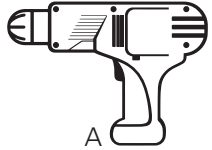

**Control Box Orientation  
must be mounted this way**

**Control box can be relocated but  
the orientation of the box must  
remain the same. Long side of  
control box must align with long  
side of the worksurface.**

## Step 8

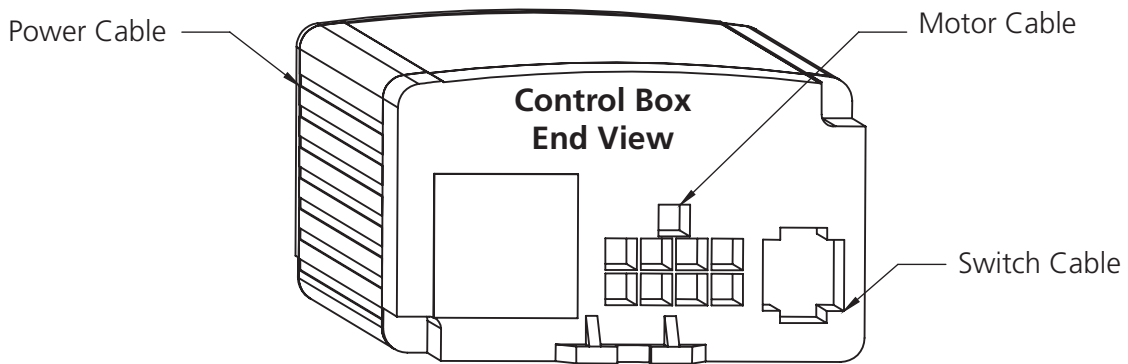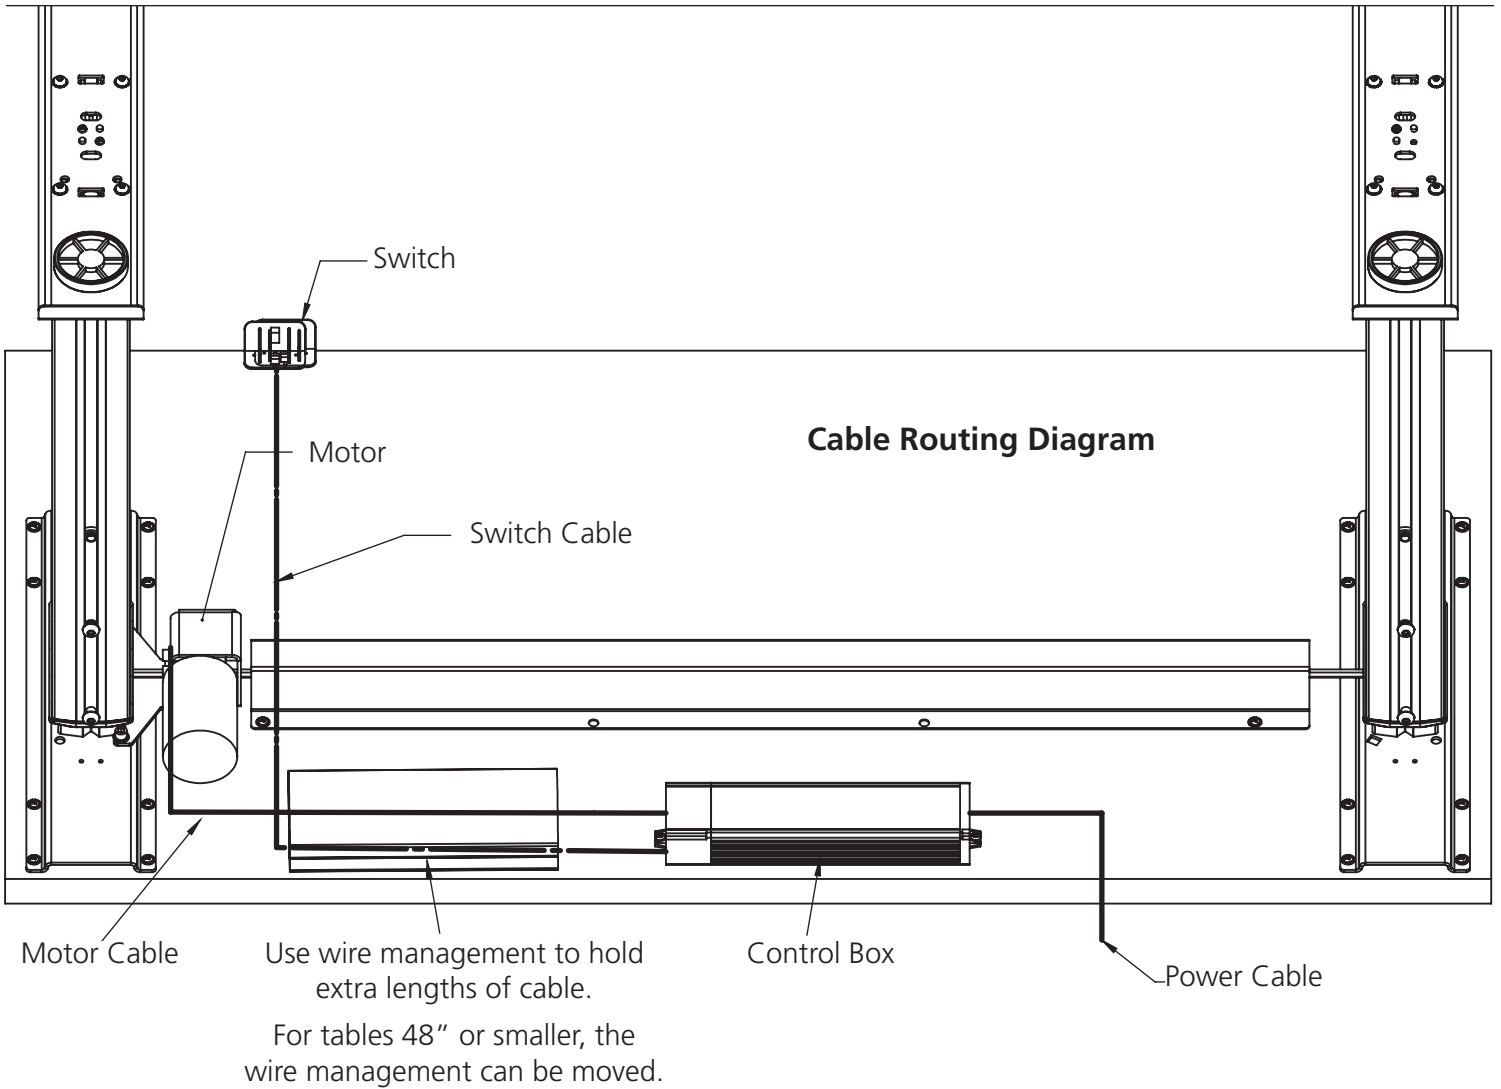

### Caution:



For the safety of the user and the workstation; the control box contains an internal sensor that is sensitive to movement, vibration, and collision. For faultless operation, ensure all cables, electronics, and accessories are cable managed and secured. Excessive load or weight must be distributed evenly. Failure to follow these guidelines may cause intermittent functionality.



## Note

---


If the leg assemblies are at uneven heights, it is usually caused by an improperly installed hex rod. Disassemble one of the leg assemblies from the worksurface and make sure both ends of the hex rod are properly engaged in the hex drives near the top of the leg assemblies.

## Standard Switch Save for Reference

---

### Start Up Procedure:



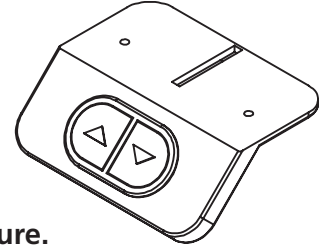









- Plug the power cord into a standard 110V receptacle. A power surge protector is recommended.
- Press the down arrow until the worksurface reaches its lowest position.
- The workstation is ready for use.
- **If the table is not functioning normally or has lost power, perform the reset procedure.**













### Reset Procedure:

- Unplug the unit from the wall for 10 seconds.
- Clear all obstructions from the travel path of the desk.
- Plug the unit back in the wall.
- Press and hold the down arrow key until the table reaches its lowest position.

### Add Container Stops:

- Move the table  to the upper or lower desired height.
- Rapidly press  4 times. You will hear a musical tone. 
- Rapidly press  2 times. A musical tone plays two times.  
  - To **add** the **upper** container stop press  A musical tone plays two times.  
  - To **add** the **lower** container stop press  A musical tone plays two times.  

### Remove Container Stops:

- Move the table  to the upper or lower **preset** height.
- Rapidly press  4 times. You will hear a musical tone. 
- Rapidly press  2 times. A musical tone plays two times.  
  - To **delete** the **upper** container stop press  You will hear a musical tone. 
  - To **delete** the **lower** container stop press  You will hear a musical tone. 

### Troubleshooting:


If you are having any problems with the operation, contact RightAngle Products at **800.298.4351** or **orders@raproducts.com**

## **Optional Programmable Switch** (full instructions packaged with switch)

---

### **Start Up Procedure:**

- Plug the power cord into a standard 110V receptacle. A power surge protector is recommended.
- Press the down arrow until the worksurface reaches its lowest position.
- The workstation is ready for use.
- **If the table is not functioning normally, or has lost power, perform the reset procedure.**

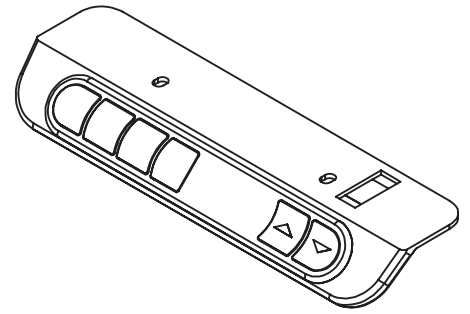

### **Reset Procedure:**

- Unplug the unit from the wall for 10 seconds.
- Clear all obstructions from the travel path of the desk.
- Plug the unit back in the wall.
- Press and hold the down arrow key until the table reaches its lowest position

**See Packaged Instructions for Programmable Options**

## Mechanical Reset Mode


---

If the table is unresponsive, uneven, or not functioning properly, perform a manual reset.












**User settings are not reset in this process.**

There are three methods to reset a workstation:

### Reset Method A















1. Clear all obstructions from the travel path of the workstation
2. Disconnect the power to the control box for 30 seconds.
3. Reconnect the power
4. Press and hold the  until the workstation has reached its lowest possible position.

### Reset Method B (4 button programmable switch required)

1. Clear all obstructions from the travel path of the workstation
2. Quickly press  +  +  +  to enter the menu mode.
3.  is displayed and you will hear a musical tone. 
4. Press the   to navigate the menu.
5. Navigate to the  display
6. Press the  button to enter or accept
7. Press and hold the  until the workstation has reached its lowest possible position.

The workstation is now ready to operate

### Reset Method C - 2 Button Switch

1. Clear all obstructions from the travel path of the workstation
2. Quickly press  +  +  +  to enter the menu mode.
3. You will hear a musical tone. 
4. Press  +  +  + 
5. You will reach the limit adjustment menu and hear four musical tones.    
6. Press and hold the  until the workstation has reached its lowest possible position.

The reference is re-calibrated, the table should be leveled and the height indication should be correct.