

NEBO[®]

LARRY[®] PIVOT


USER MANUAL

CHARGING

To charge, plug one end of the included charging cable into a power source and plug the other end into the flashlight.

When plugged in the power button serves as a charging indicator.

- **Pulsing Green:** Charging
- **Solid Green:** Charged completely

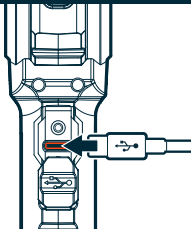

OPERATION

Press the power button repeatedly to cycle through light modes:

Flashlight High > Flashlight Low >
Work Light High > Work Light Low > Red >
Flashing Red > Off

After 8 seconds without a button press, the next press will turn the unit off. The last mode will be stored in memory for next use.



FLASHLIGHT
WORK LIGHT

MODES	LUMENS	RUNTIME	DISTANCE
HIGH	500	6h	163m
LOW	75	12h	66m
HIGH	1000	3h	37m
LOW	100	6h	16m
RED	✓	✓	✓
RED FLASHING	✓	✓	✓



Go to **NEBOLIGHTS.com**
to register your product.

Direct-To-Red: Press and hold the power button from off

When in use, the power button acts as a power indicator.

- **Solid Orange:** More than 25%
- **Flashing Orange:** Less than 25%

Lockout: Triple press the power button from off to turn on Lockout, disabling the light from turning on. Triple press the power button again to turn Lockout off.