

NEBO[®]

illumatrace™

BLOOD TRACKER HEADLAMP



The illumatrace™ Blood Tracker is a revolutionary tool that helps hunters detect and identify blood trails better than anything else on the market. The patent-pending technology makes blood appear to strobe like a neon sign.



FLEX-POWER™




IPX6
WATER
RESISTANT



110° TILT



AIRCRAFT GRADE
ALUMINIUM

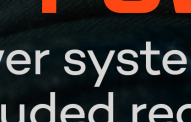



FLEX-POWER™

Hybrid power system operates on the included rechargeable battery or two CR123A batteries.

USB-C



USB-A

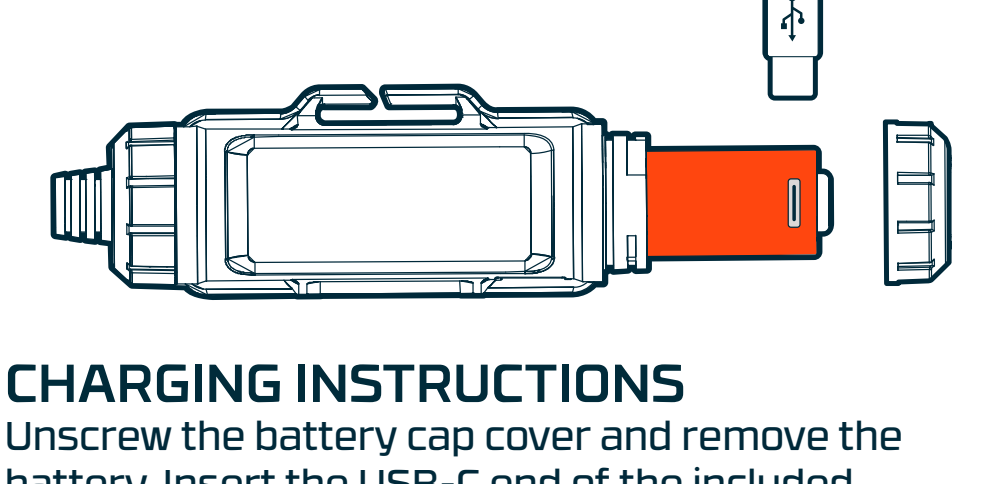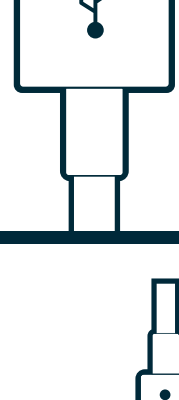

CHARGING INSTRUCTIONS

Unscrew the battery cap cover and remove the battery. Insert the USB-C end of the included charging cable into the USB-C port on the battery. Next, insert the USB-A end of the charging cable into a power source with a USB-A port.

CHARGING STATUS

A small light near the charging port on the battery serves as the charging status indicator.

- Solid Red: Charging
- Solid Green: Fully Charged

ALKALINE BATTERY:

This light also runs off disposable alkaline batteries. To install the batteries, unscrew the bottom cap and replace the lithium-ion battery with (2) CR123A alkaline batteries. Reinstall the bottom cap.

DO NOT mix old and new batteries.

DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad, Ni-MH, etc.) batteries.



ILLUMATRACE™ TECHNOLOGY

A revolutionary technology that illuminates blood through an alternating strobe effect.


DUAL LIGHT MODES

Transition between 3 white light modes and 3 strobe rates to adapt to varied terrain.



WHITE LIGHT

BLOOD TRACKER

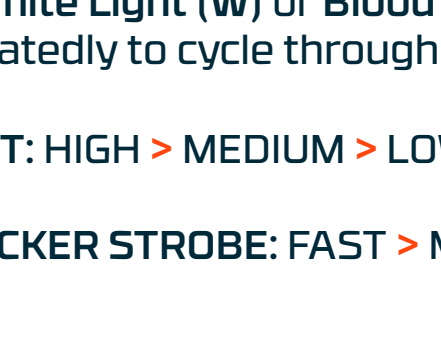

OPERATION

Press the White Light (W) or Blood Tracker (B) button repeatedly to cycle through light modes.

WHITE LIGHT: HIGH > MEDIUM > LOW > OFF

BLOOD TRACKER STROBE: FAST > MEDIUM > SLOW > OFF

After 8 seconds of no button activity, the next press will turn off the light.

BLOOD TRACKER STROBE MEMORY

1. Press the Blood Tracker (B) button to select your desired Blood Tracker strobe rate and allow it to run for at least 8 seconds.
2. Press the (B) button once to turn it off.
3. Wait for at least 8 seconds and press the (B) button again. This will activate the Blood Tracker Strobe Memory and the headlamp will start up using the last used strobe rate with a single press of the B button.
4. To erase the strobe memory, press the (B) button to start up in the last used strobe rate. Press the B button a second time, within 8 seconds to turn it off. Strobe memory has now been erased and it will resume normal operation.

MODES	OUTPUT (Lumens)	RUN TIME (Hours)	BEAM DISTANCE (Meters/Yards)
BLOOD TRACKER	-	-	- / -
WHITE HIGH	800	3	93 / 101
WHITE MEDIUM	400	4	69 / 75
WHITE LOW	200	5	45 / 49



BACKBALANCE FIT™

The rear-positioned battery displaces weight for a more comfortable design with little to no bounce.

PRODUCT GUARANTEE



LIMITED
LIFETIME
WARRANTY

If you experience a problem, please do not return to your local store. Contact our Customer Service team at 800-255-6061 or NEBOLIGHTS.com

For more information, detailed video instructions, and warranty registration, visit NEBOLIGHTS.com